




TOP VIEW

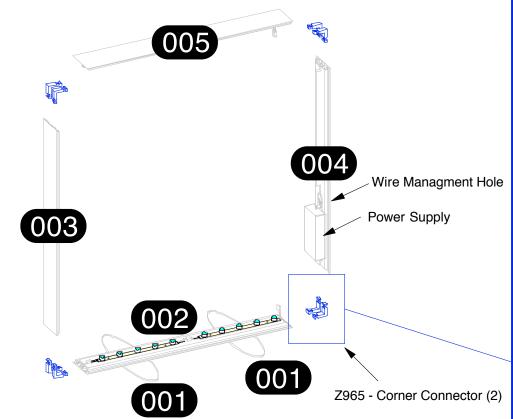


Bottom view
posen the screws on base plate but o not remove them. Than swivel ase plates.

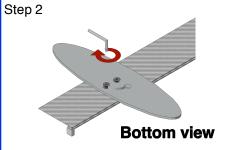

Tighten both screw firmly.

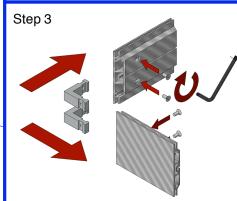


- Slide corner connectors (Z965) into both sides of horizontal extrusions. Turn each screw enough to hold connector in place.
- Slide vertical extrusions onto corner connectors of top horizontal extrusion.
 Turn each screw enough to hold connector in place.
- 3. Finish frame assembly by sliding corner connectors of bottom horizontal extrusion on to vertical extrusions and tighten the screws to secure frame extrusions together.

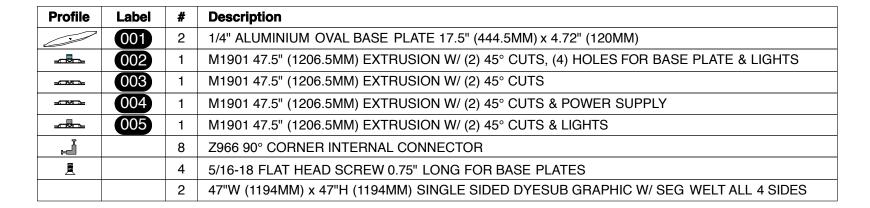




GRAPHIC

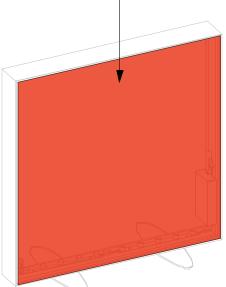

3D VIEW

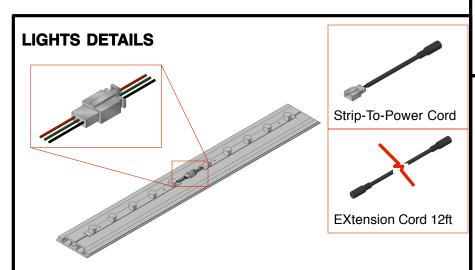

Lights come attached to extrusions. Ensure all lighting strips are connected. Once frame is assembled, connect strip-to-power cords to the end of top and bottom lights chain.

and bottom lights chain.

- For bottom lights connect strip-to-power cord to power supply directly.

- For top lights connect extension cord to strip-to-power cord and run with wire management extrusion then connect to power supply.

Run AC power cord out through grommet hole on vertical upright and connect to power outlet.

To remove or re-attach light strips use provided thumbscrews with plate.

GRAPHIC




Insert the silicon edge of the fabric into the groove of the extrusions.


Start on the corners, than centers and work your way to corners from center on both directions.

To pull fabric graphic out of extrusion groove use pull tab on corner.

WALL ASSEMBLY (OPTIONAL)

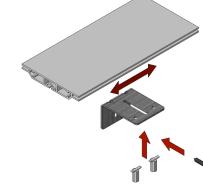

Attach wall bracket to top extrusion groove with provided hammerhead screws. Locate position of wall bracket on extrusion (preferably by wood stud) by sliding the bracket on the extrusion and tighten it. Secure the frame to the wall with provided wood screw.

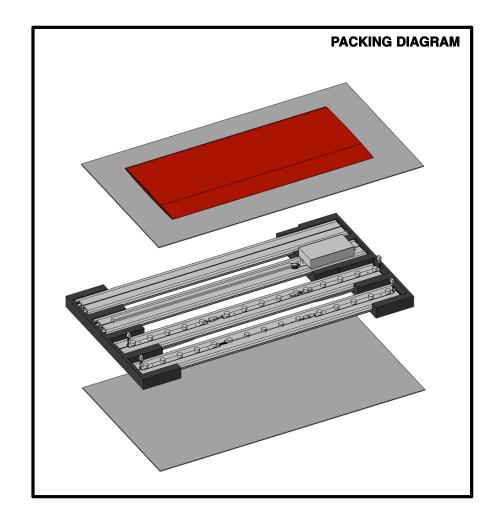

NOTE:
DO NOT DISCARD
ANY PACKING
MATERIAL.
LEVELS OF PARTS
MAY BE
SEPARATED BY
WHITE SHEETS OF
PLASTIC,
COROPLAST OR
CARDBOARD.

