


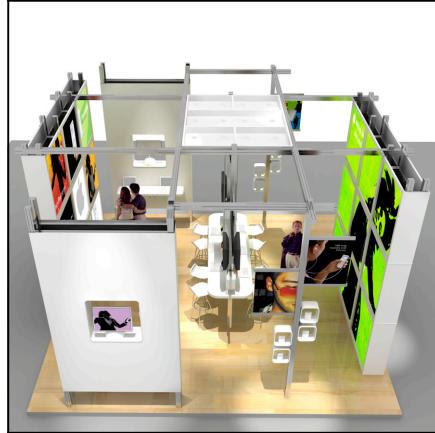

ASSEMBLY INSTRUCTIONS


CLIENT: ABEX DISPLAY SYSTEMS
ORDER: N/A
INSTR: 12814-00A-INSTR



doexTM
DISPLAY SYSTEMS


GENERAL STEPS

REMOVING BUTTONS FROM PANELS

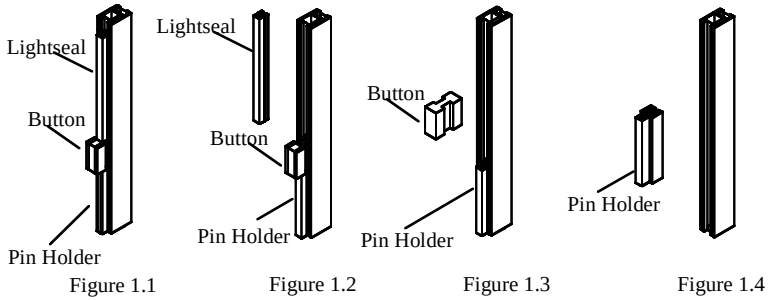


- 1) If the panel has a stacking pin see "Removing a Stacking pin from a panel".
- 2) Remove the Lightseal by prying it up with a screwdriver. (Figure 1.2)
- 3) Loosen the screw on the Button. Don't Remove it and slide the button out of the panel. (Figure 1.3)
- 4) Slide the Pin Holder out of the panel. (Figure 1.4)
- 5) Repeat the above steps for all buttons which are to be removed.

REMOVING A TAB/PIN

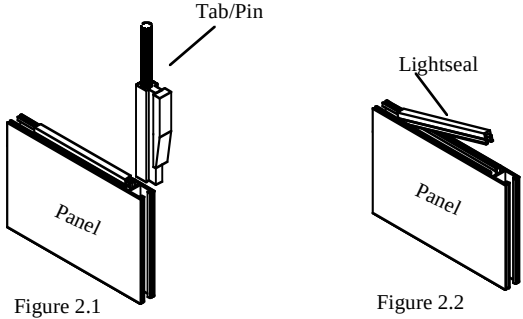


- 1) Loosen the two screws on the Tab/Pin. Don't Remove them. (Figure 2.1)
- 2) Remove the Tab/Pin from the panel by sliding it towards the top of the panel. (Figure 2.1)
- 3) To remove the Lightseal, pry it out with a screwdriver. (Figure 2.2)

ADDING BUTTONS TO PANELS

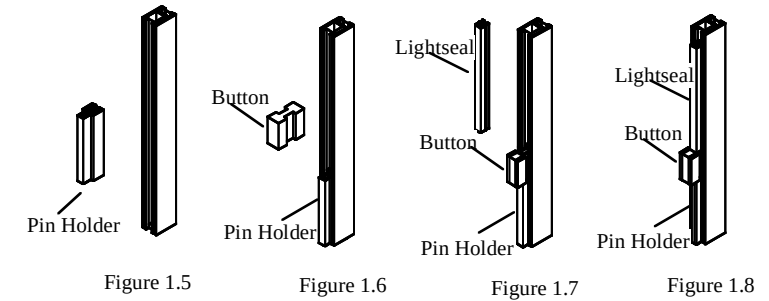


- 1) Insert the Pin Holder into the panel by sliding it into the panel. (Figure 1.5)
- 2) Slide the button into the panel, it should be touching the Pin Holder. (Figure 1.6)
- 3) Tighten the screw in the button to secure it.
- 4) Snap the Lightseal into the track. (Figure 1.7)
- 5) Repeat the above steps for all buttons which are to be added.

ADDING A TAB/PIN

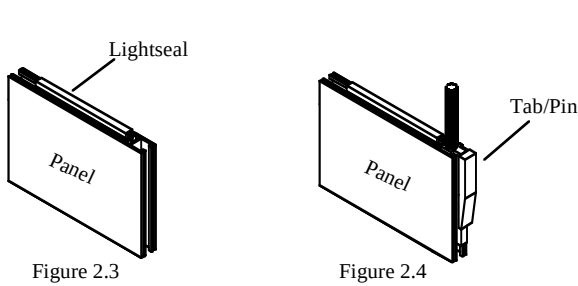


- 1) Insert the Lightseal by snapping it into the track on the top of the panel. (Figure 2.3)
- 2) Insert the Tab/Pin into the panel until the snap ring rests on the top of the panel. (Figure 2.4)
- 3) Tighten the two screws in the Tab/Pin to secure it into place.

HOW TO UNLOCK PANELS

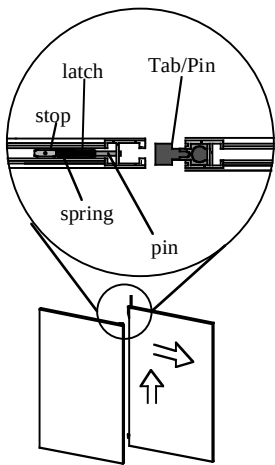

To unlock panels, first, push back on the black latch to release pin from Tab/Pin. Next, lift up the panel with the Tab/Pin and slide it out to disconnect the panels.


HOW TO LOCK PANELS

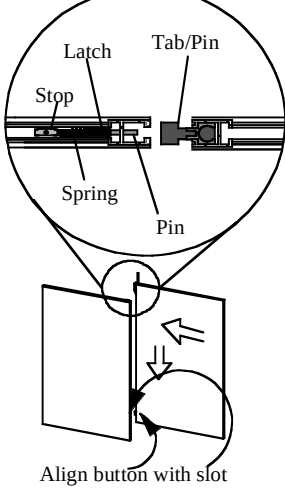

To lock panels, first lift the panel with the Tab/Pin and align it to the panel with the spring lock. Next, slide it down into the track. The panels will lock automatically. If the panels have a problem of locking, lift the opposite panel to center pin in the hole of the Tab/Pin.


NOTE: When possible, lock extrusions to panels first, then connect panels with other panels.

ASSEMBLING ALUMINUM EXTRUSIONS

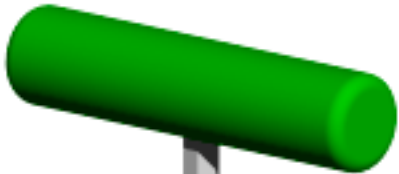


Assembly Tool

Insert lock into groove, insert tool into side hole, rotate clockwise until piece is secured

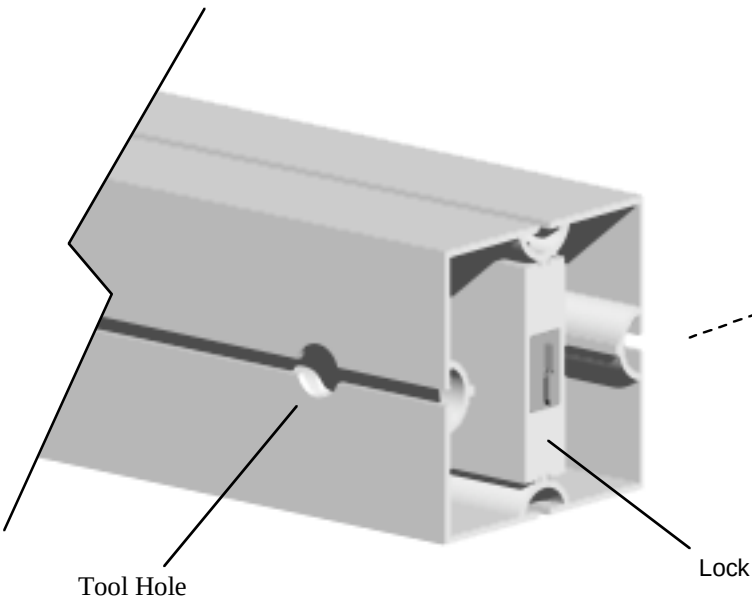


GENERAL MAINTENANCE FOR LAMINATE SYSTEM


- * To remove dirt and finger prints use a soft cloth and Windex glass cleaner. Rubbing with a soft dry cloth immediately after wiping away cleaner helps to reduce possible streaking.
- * Use extra care when handling LS panels and never rest or drop a panel on its corner this will result in damage to the panel.
- * Keep all extrusion connectors in their respective foam insert inside the extrusion connector box when not in use.
- * All tools required for re-configuration are found in your "Tool Box" which came with your LS unit.
- * When packing your unit, remember to place the white liner between each panel to prevent damage.

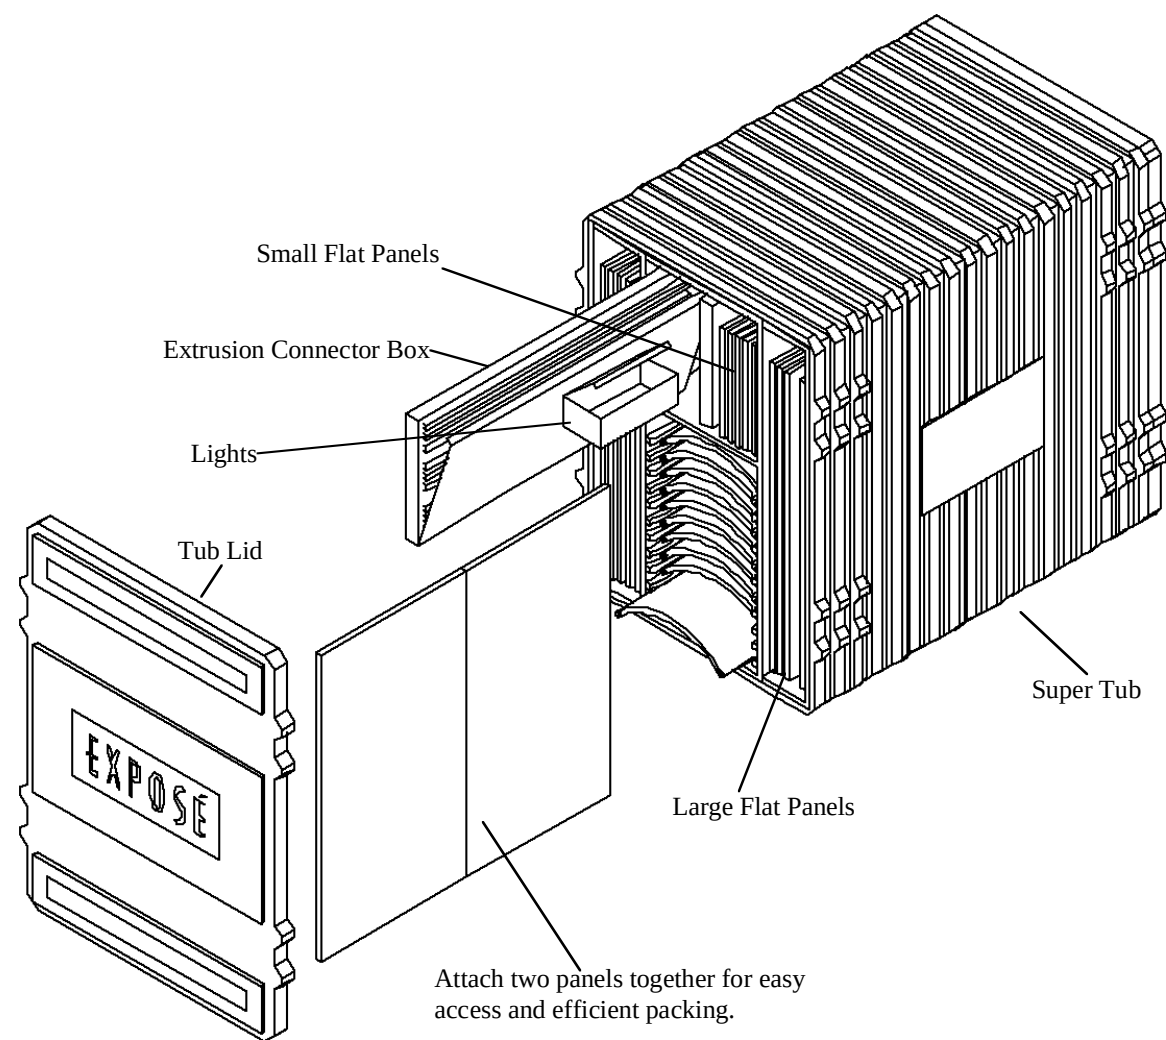

PARTS DESCRIPTION

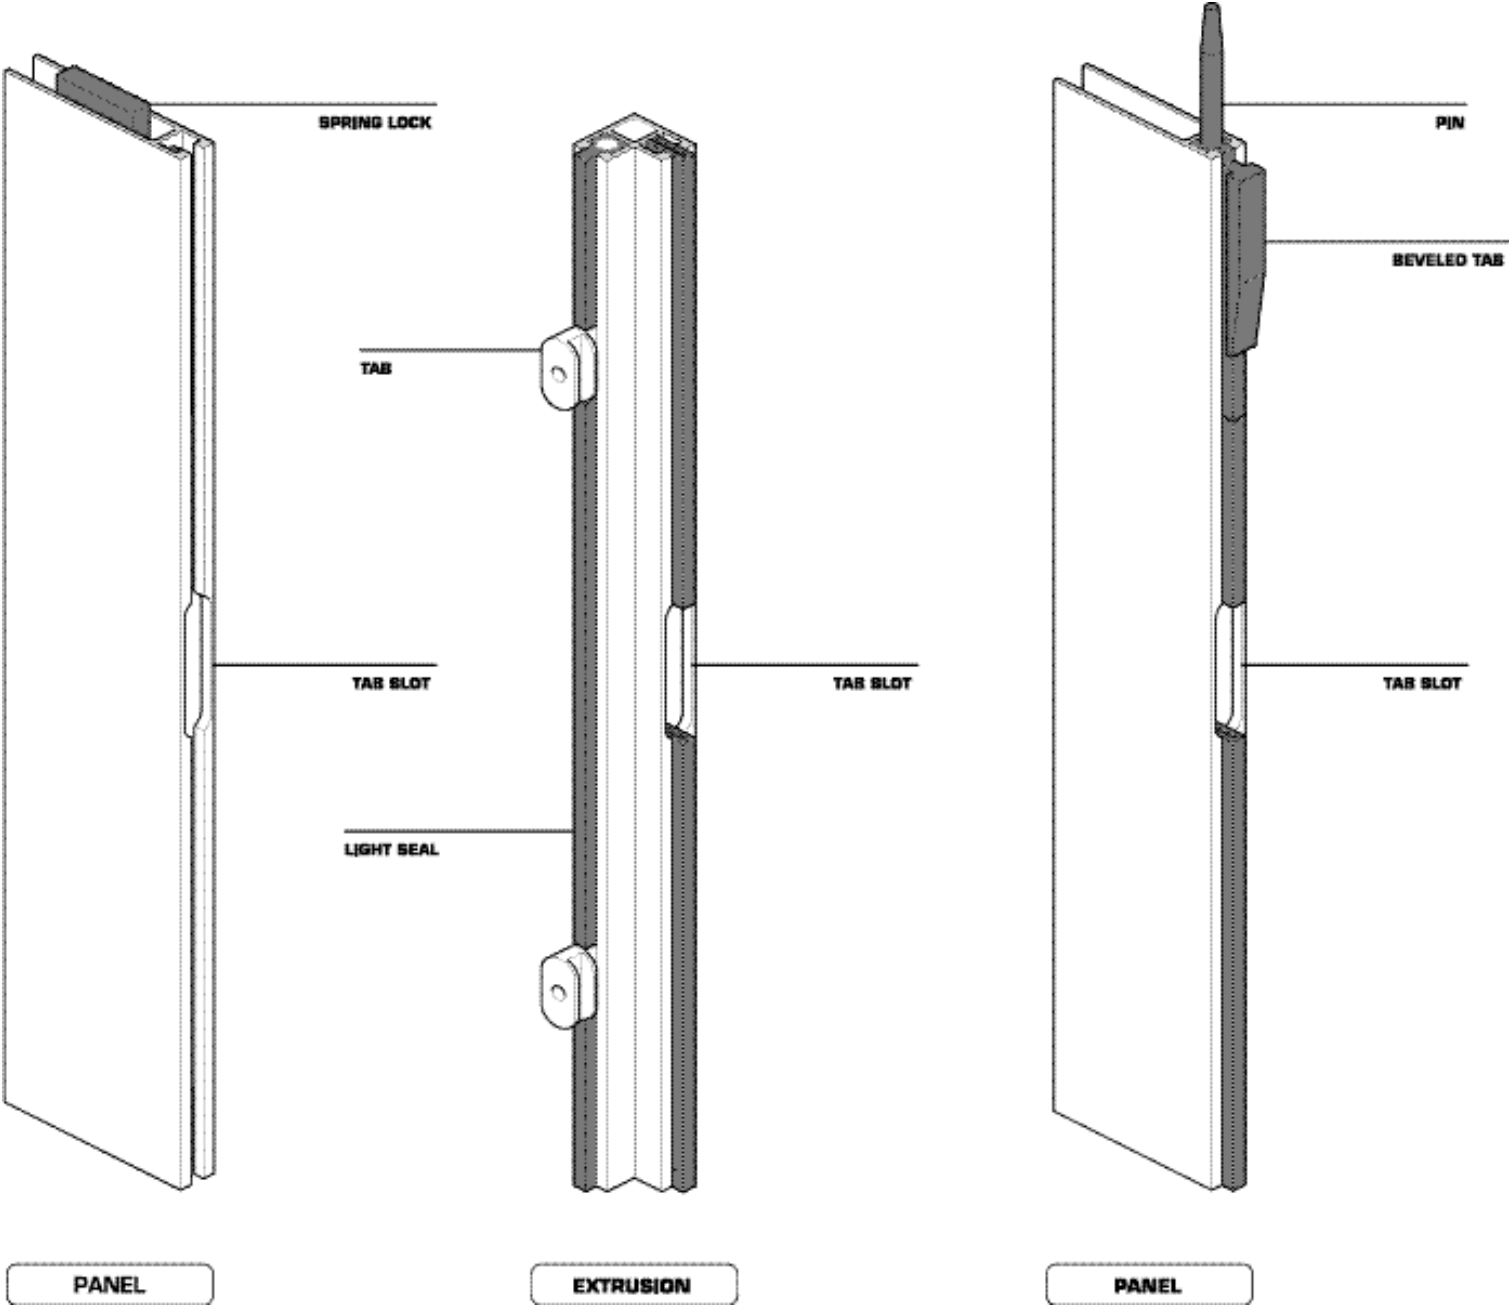


LEFT PERSPECTIVE VIEW

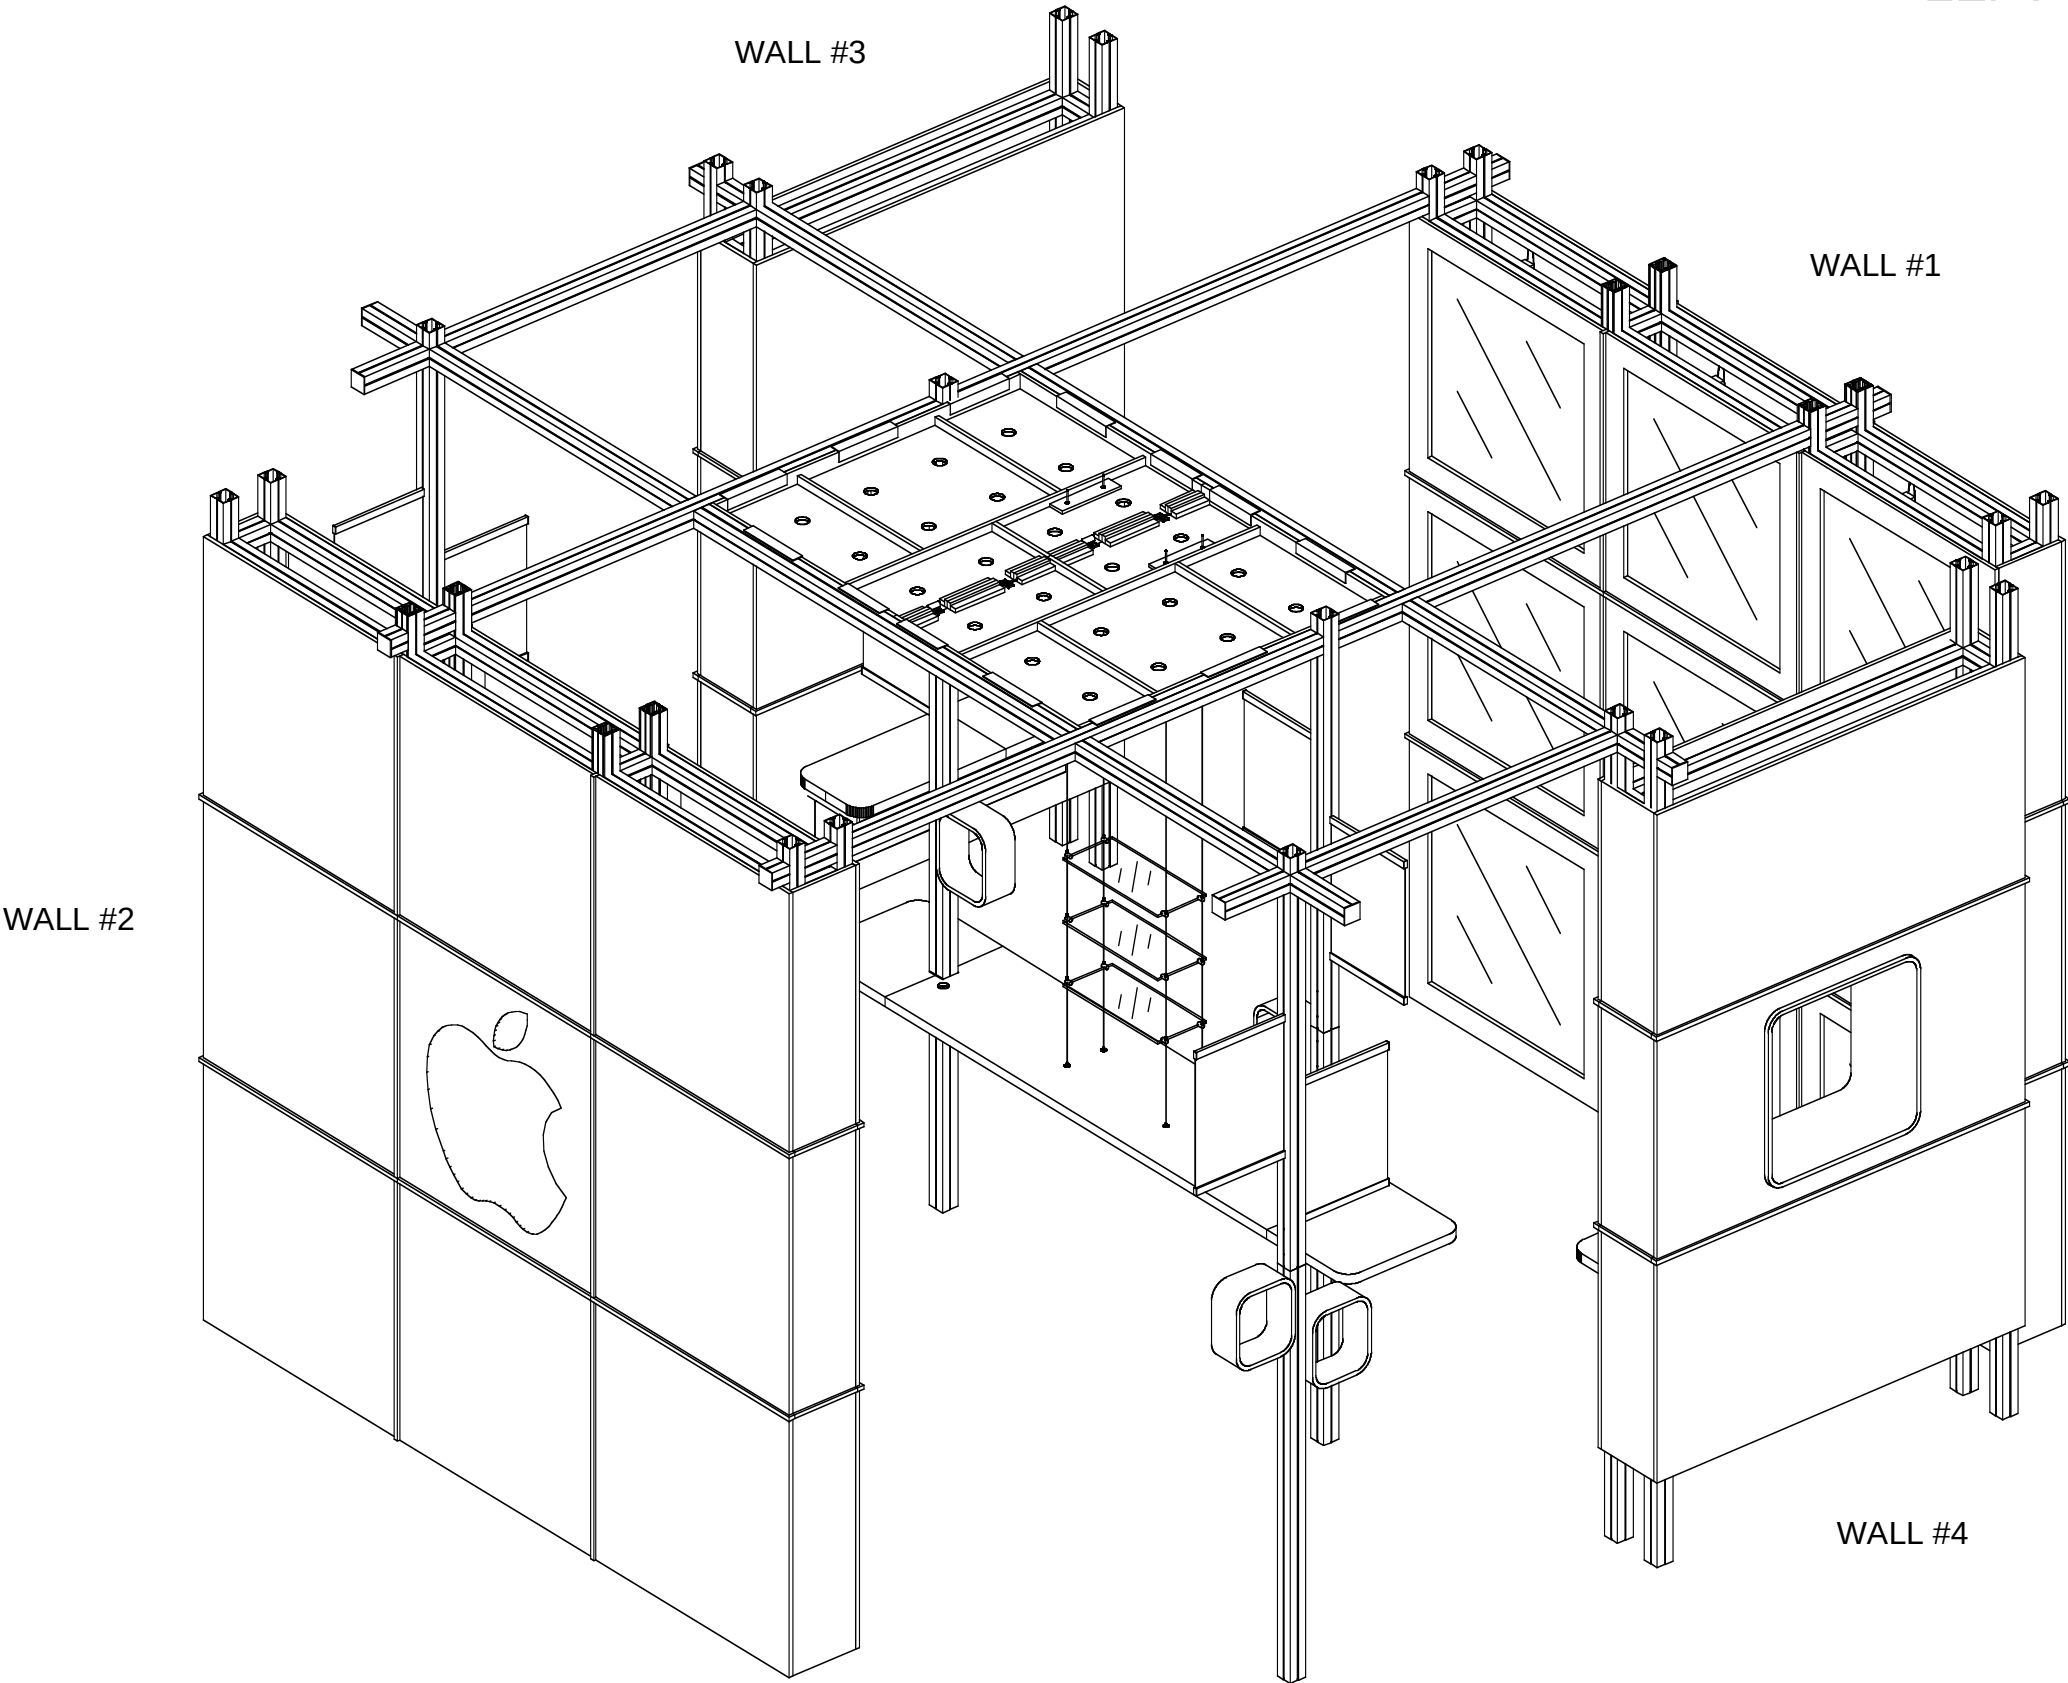


EXPLODED PERSPECTIVE VIEW


LEVEL 1

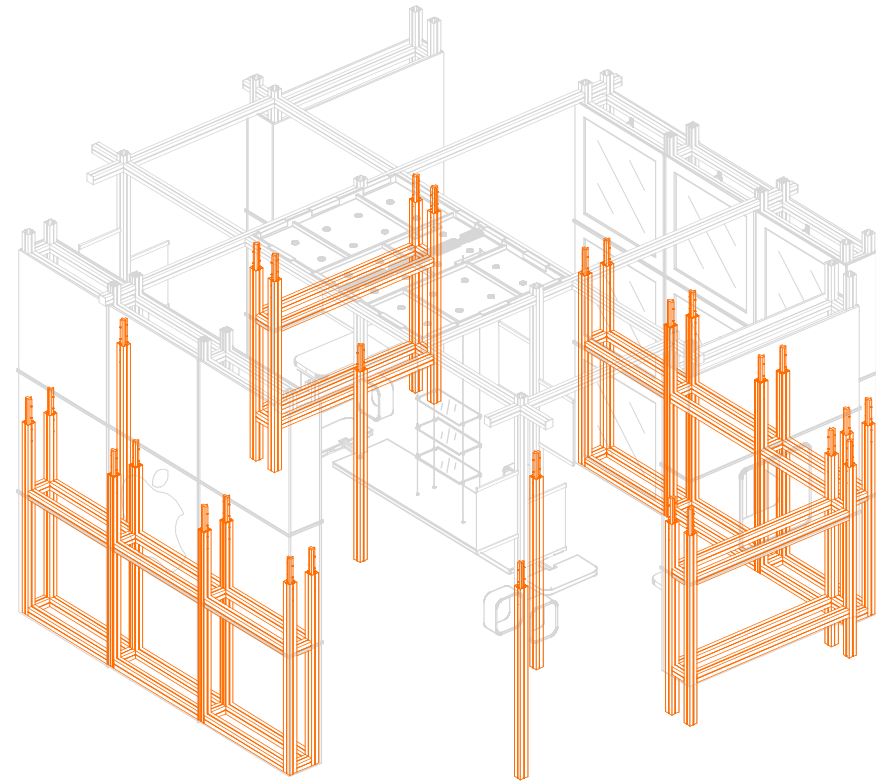


LEVEL 2

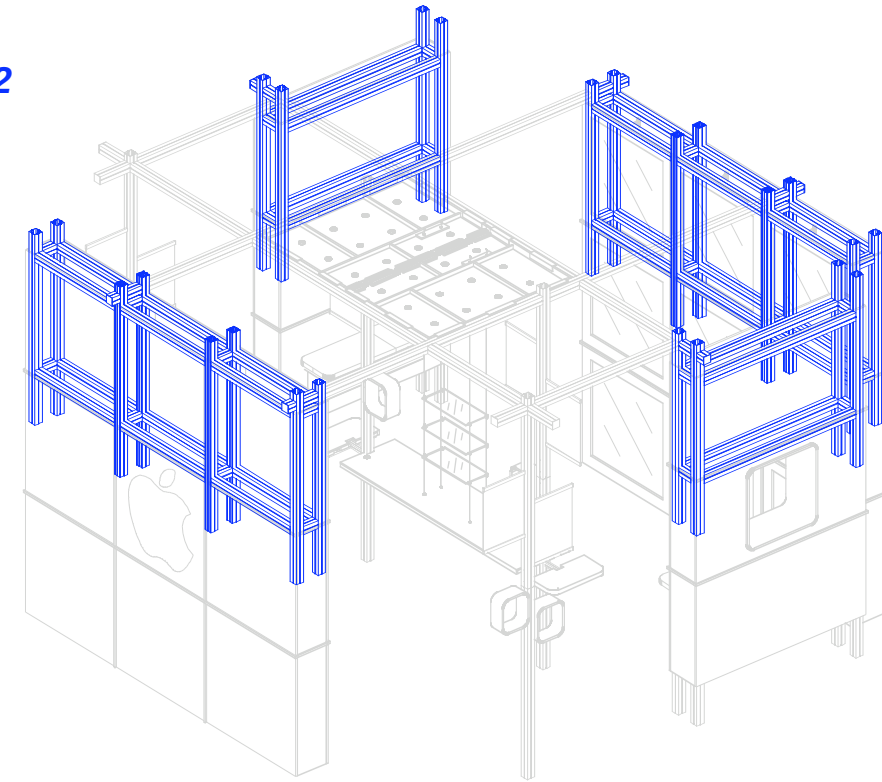


LEVEL 3

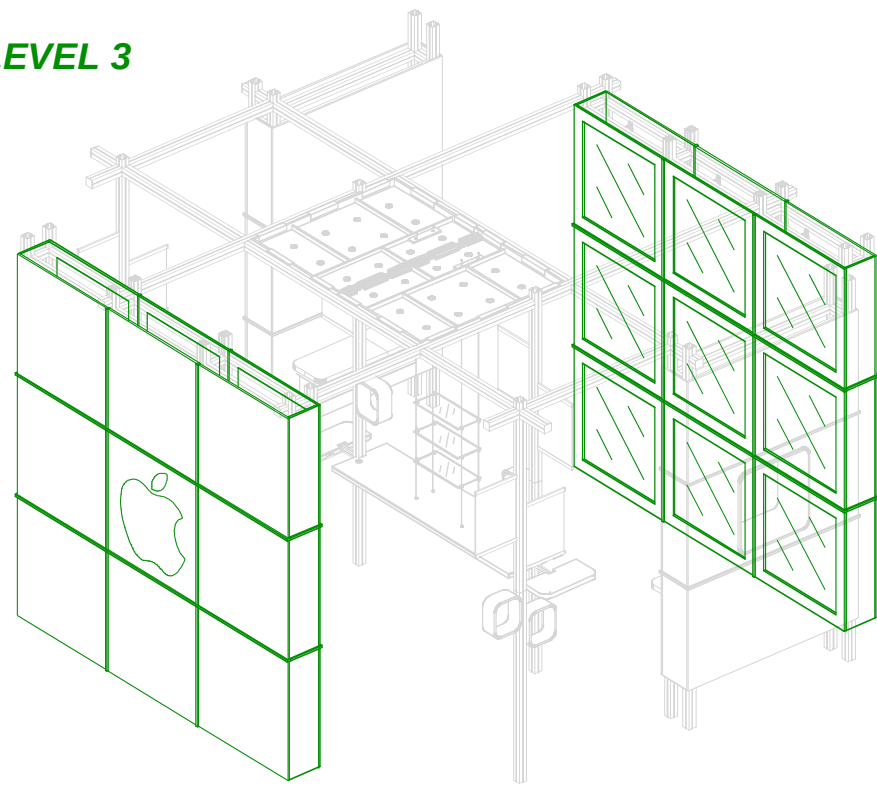


LEVEL 4

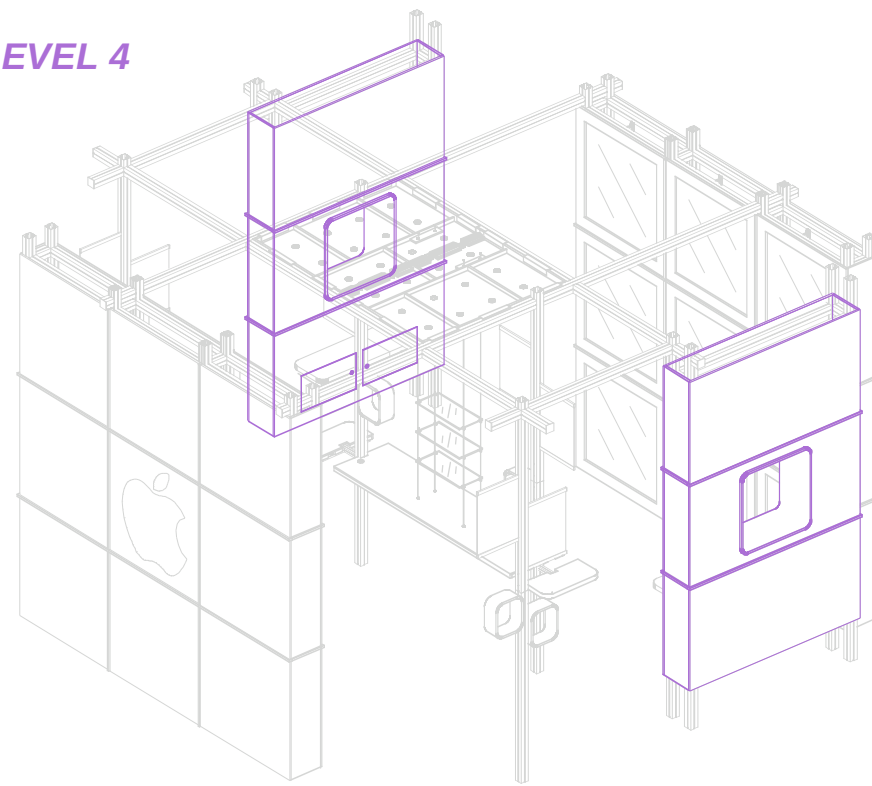


LEVEL 5

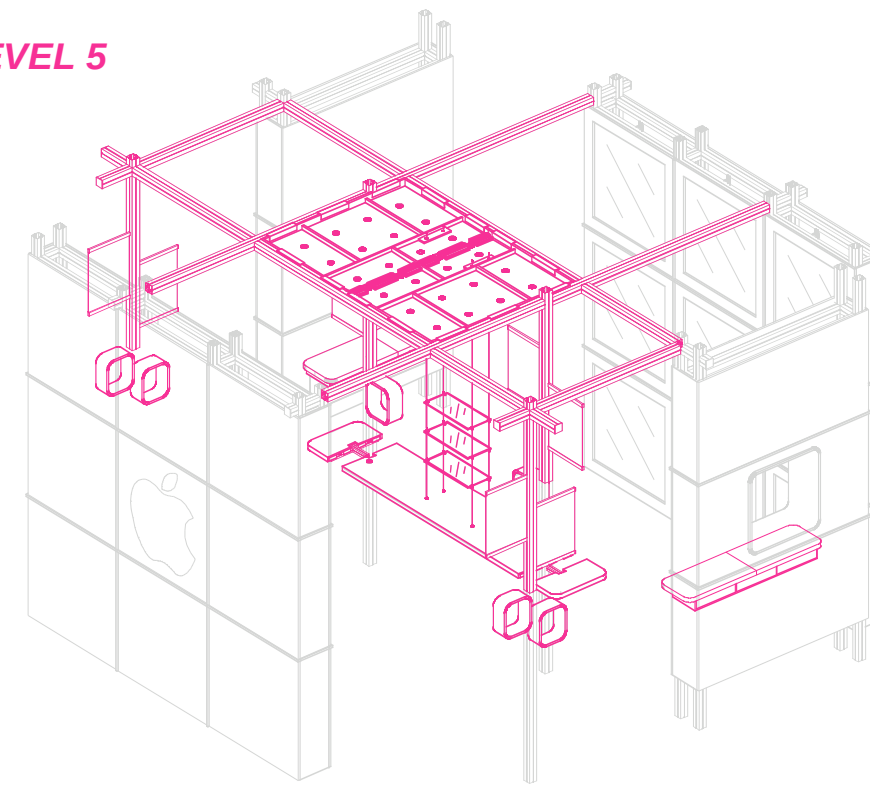


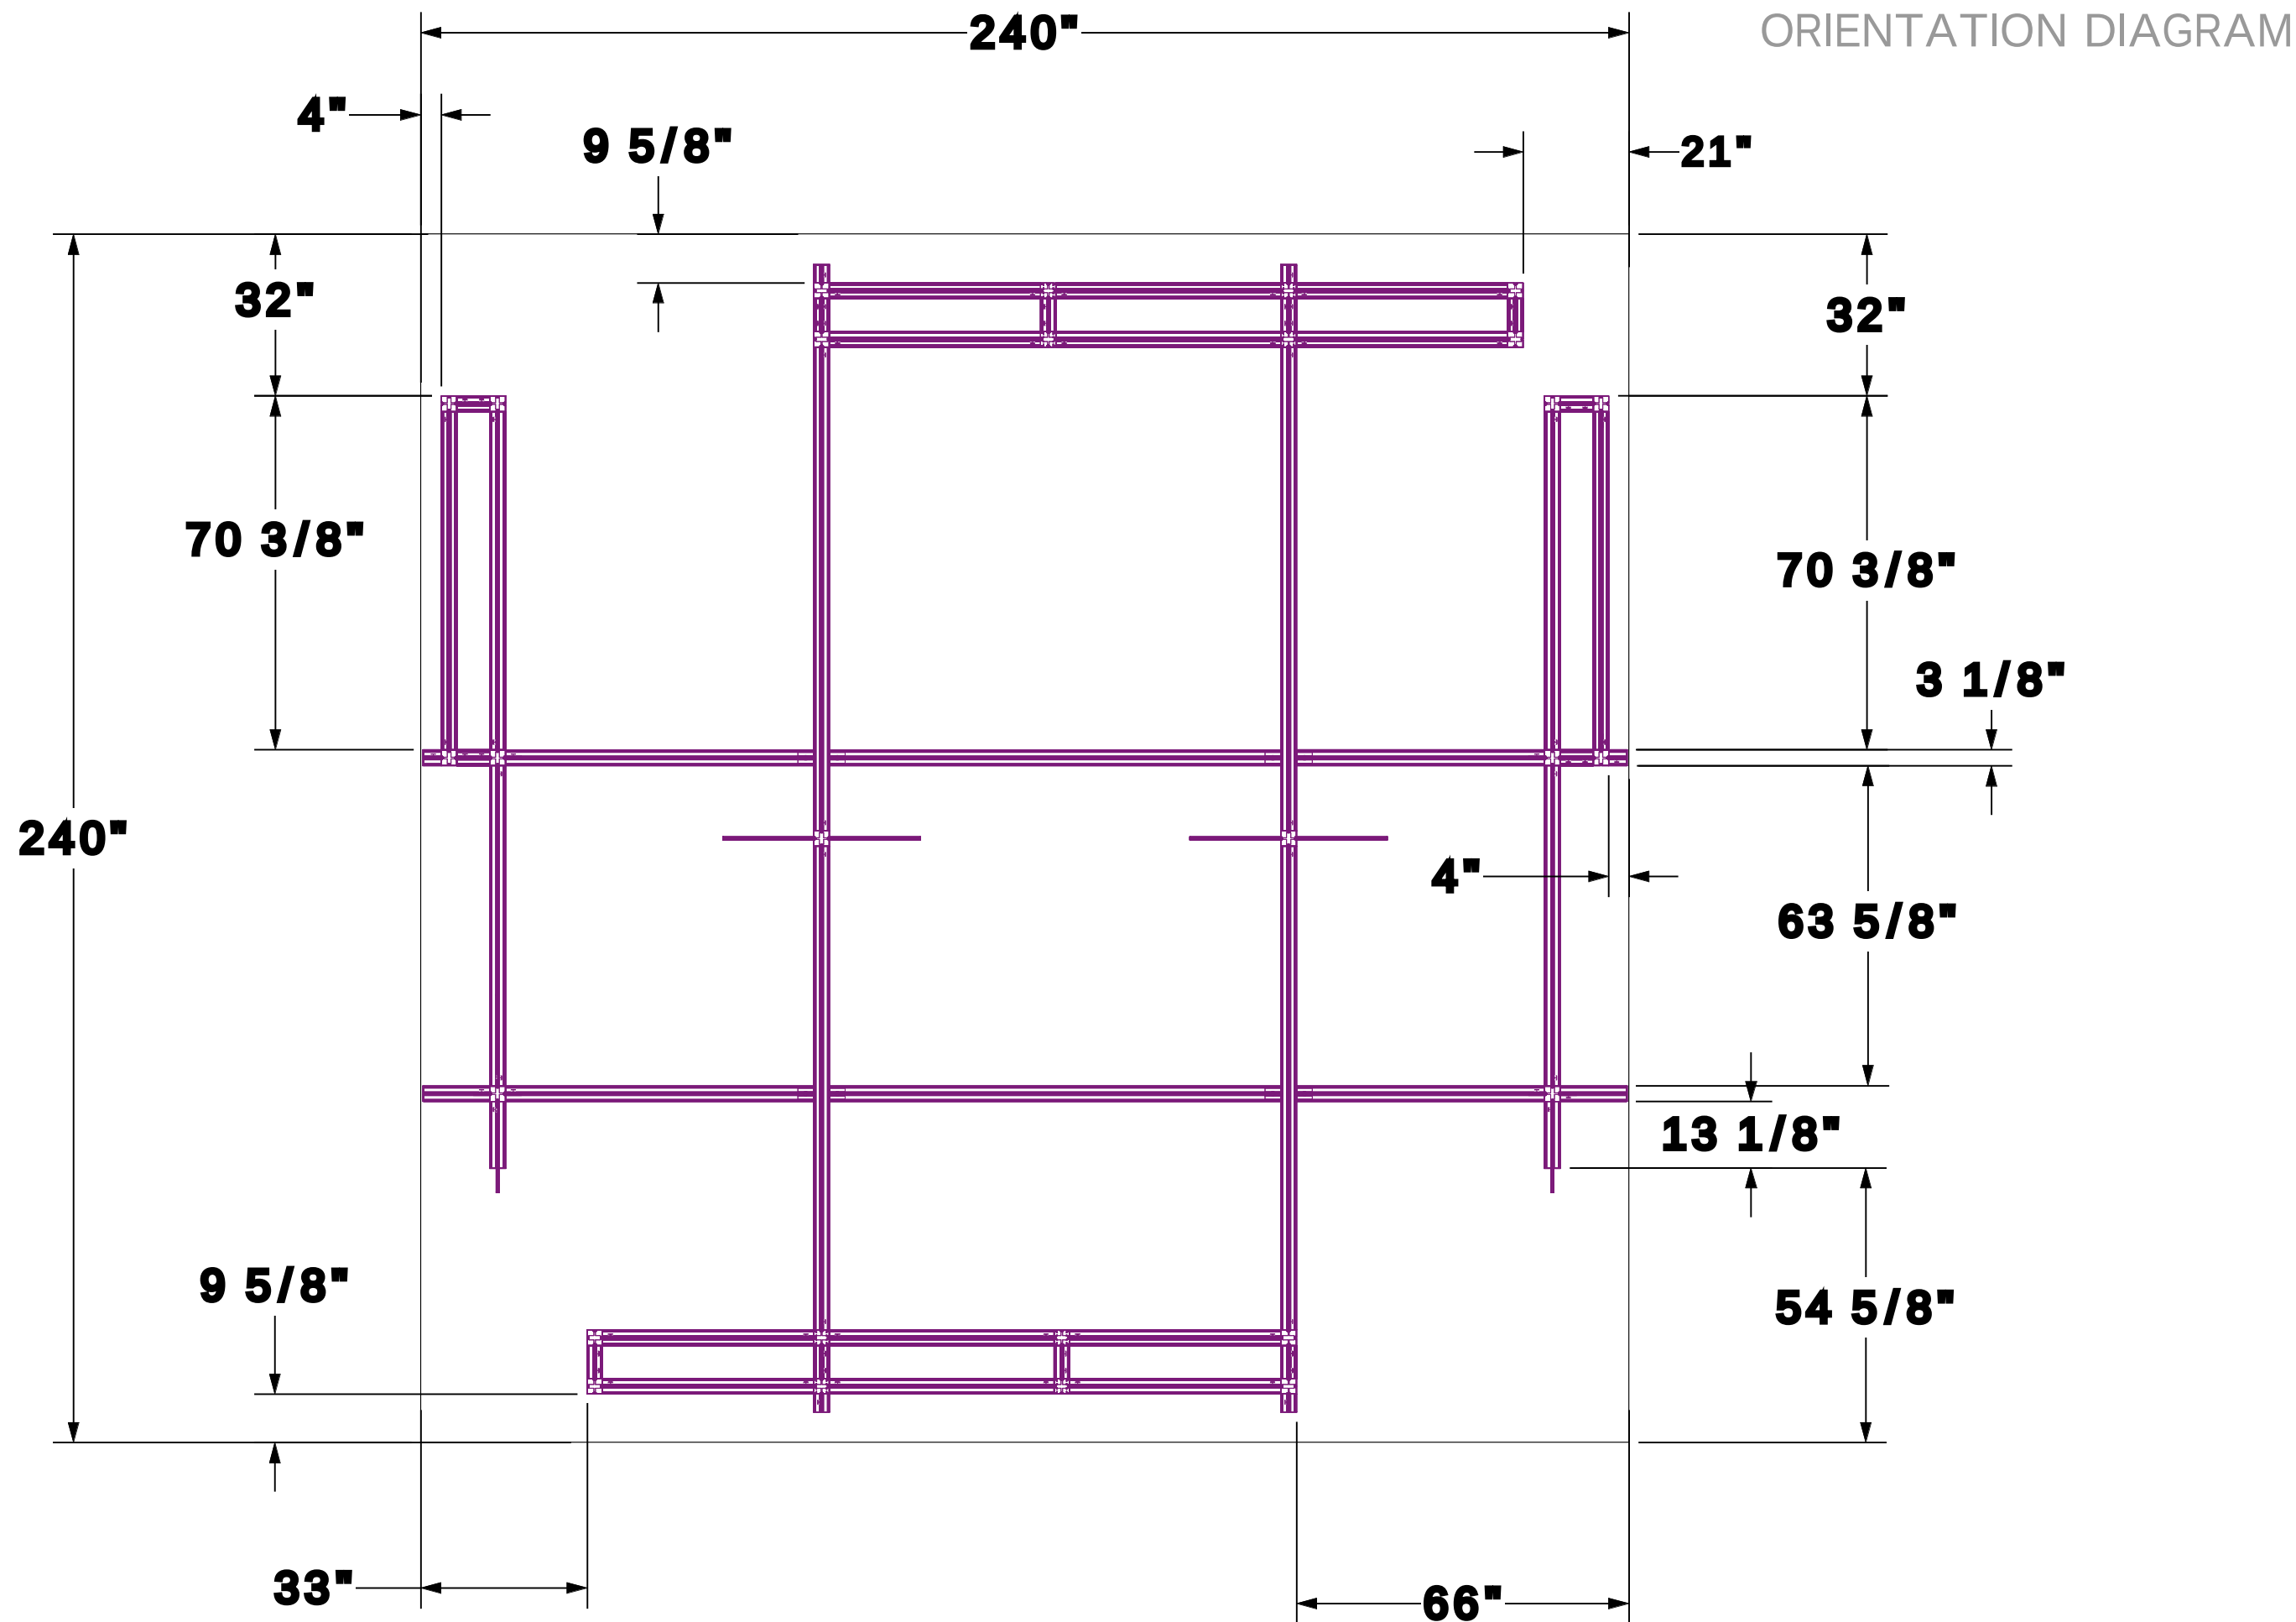


NOTE:
LIGHT FIXTURES PLACEMENT ARE
THE SAME IN WALL #1 AND WALL #2.

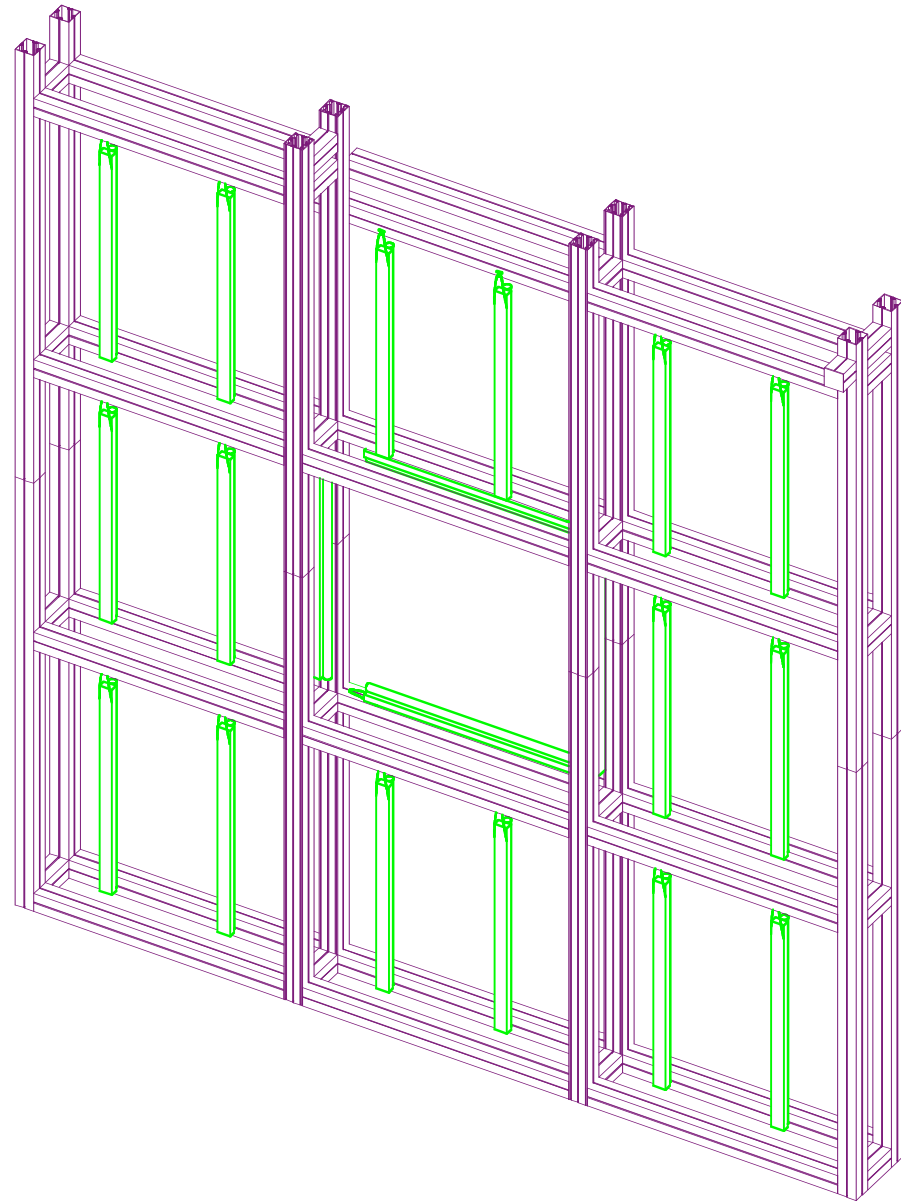


LIGHT FIXTURES
PLACEMENT

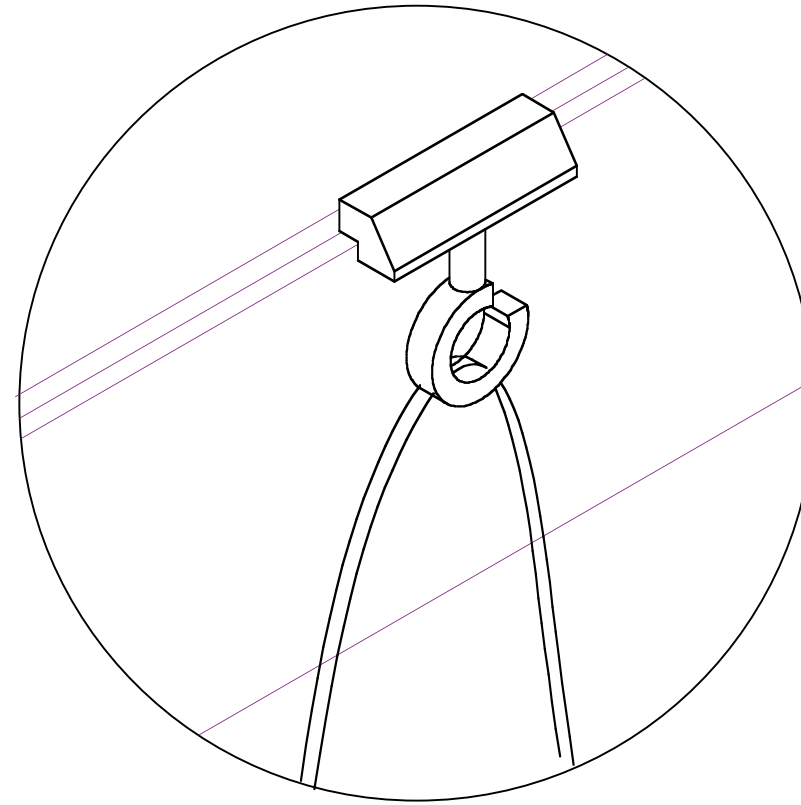


HOOK DETAIL

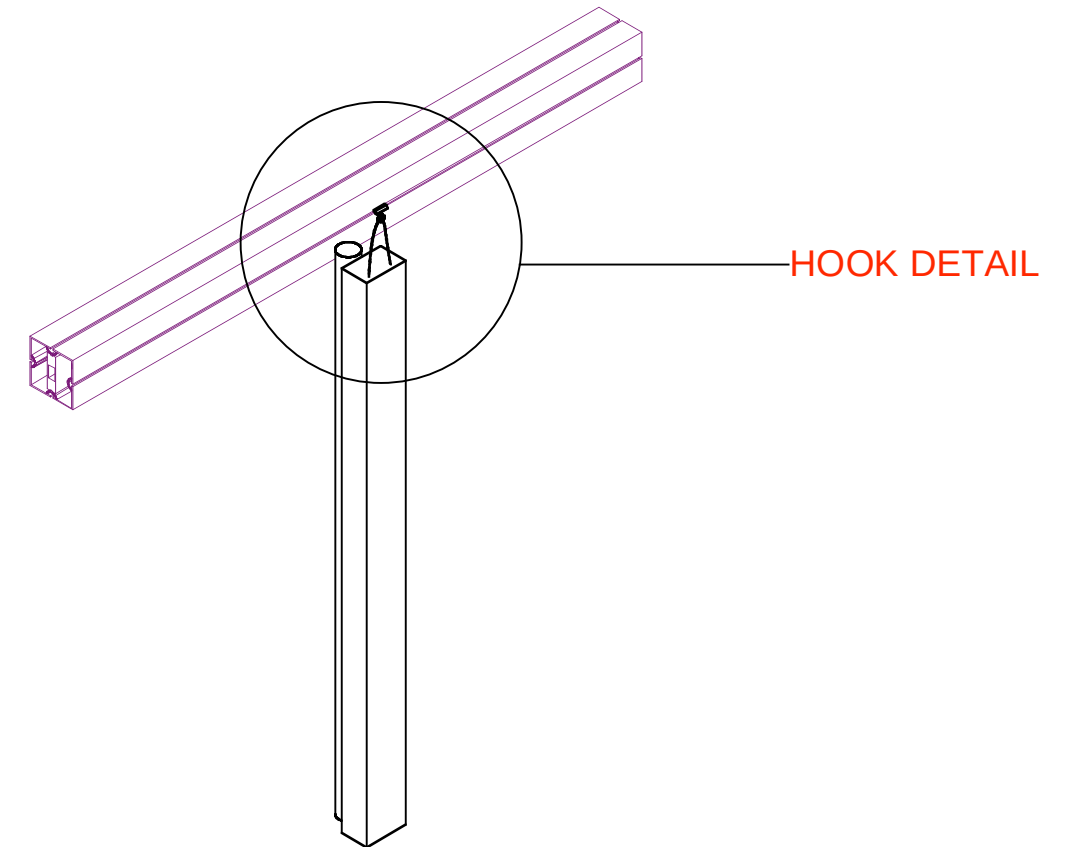


LIGHT FIXTURE
DETAIL

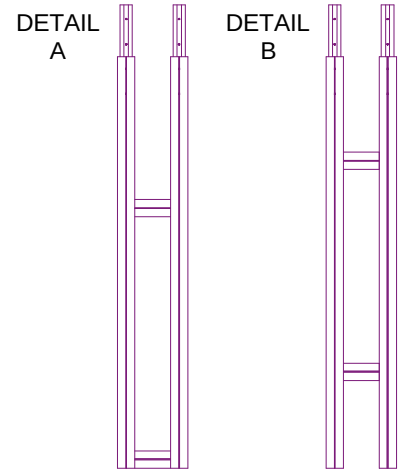


EXPLODED PERSPECTIVE VIEW LEVEL 1

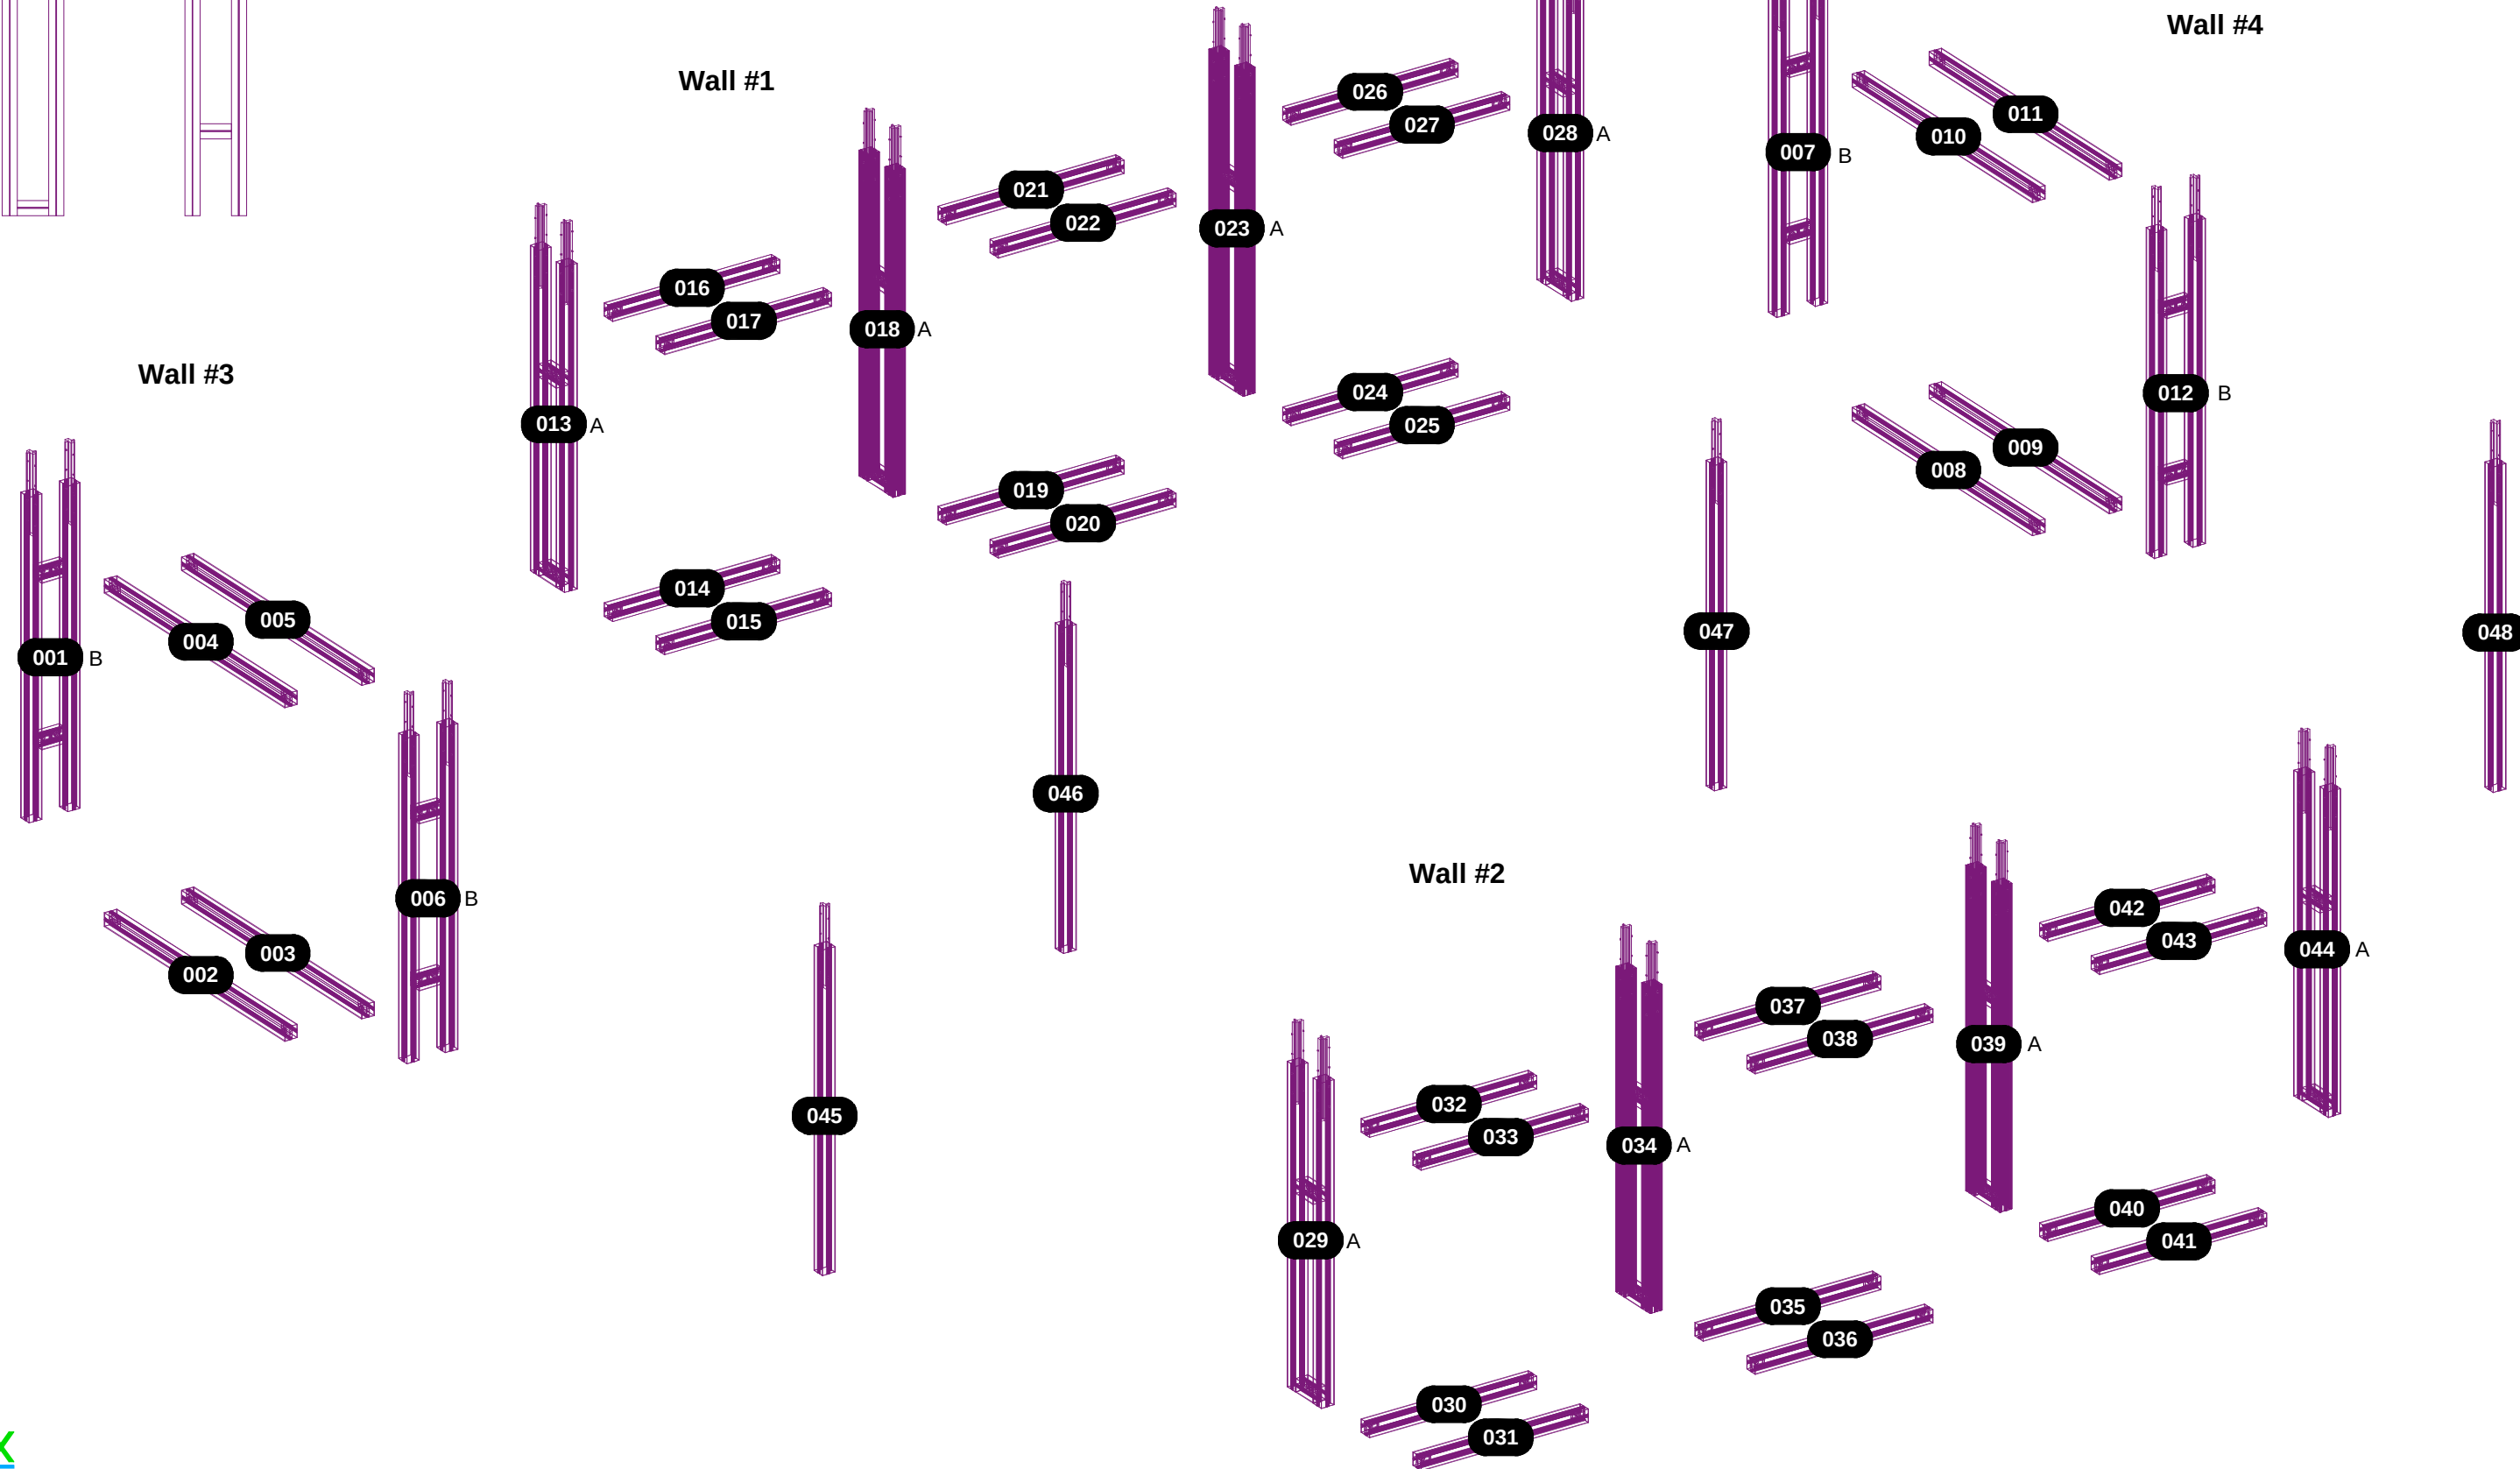


PLAN VIEW
LEVEL 1

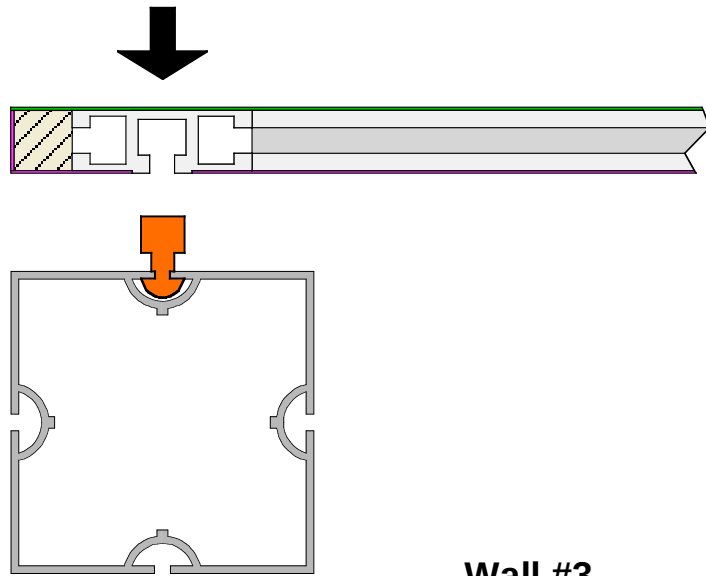


Wall #3

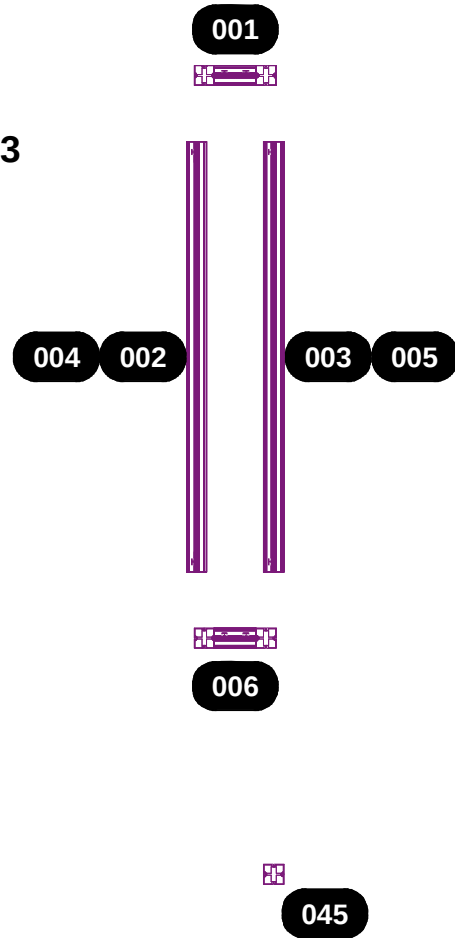


Wall #1

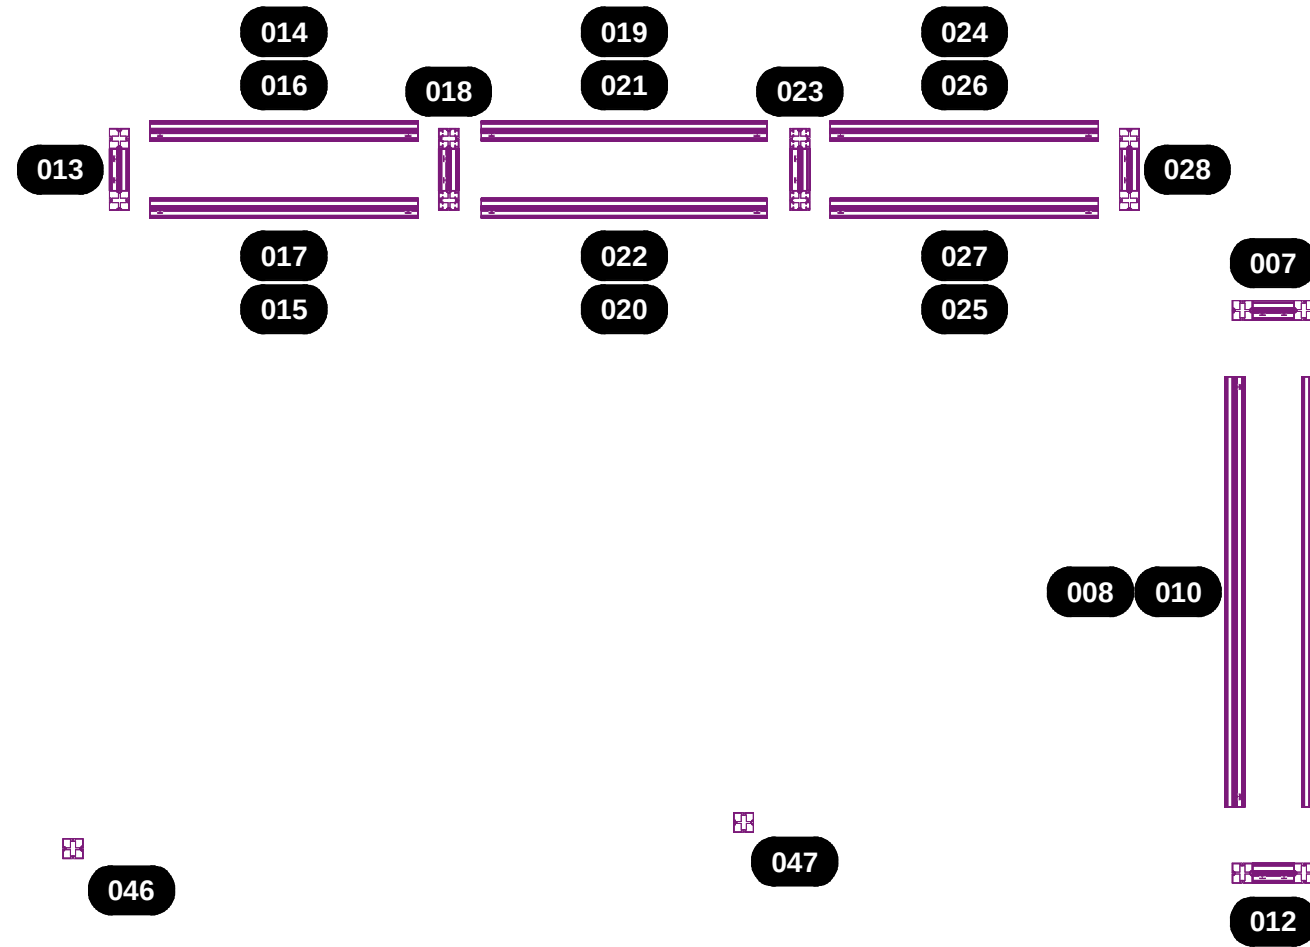


Wall #4

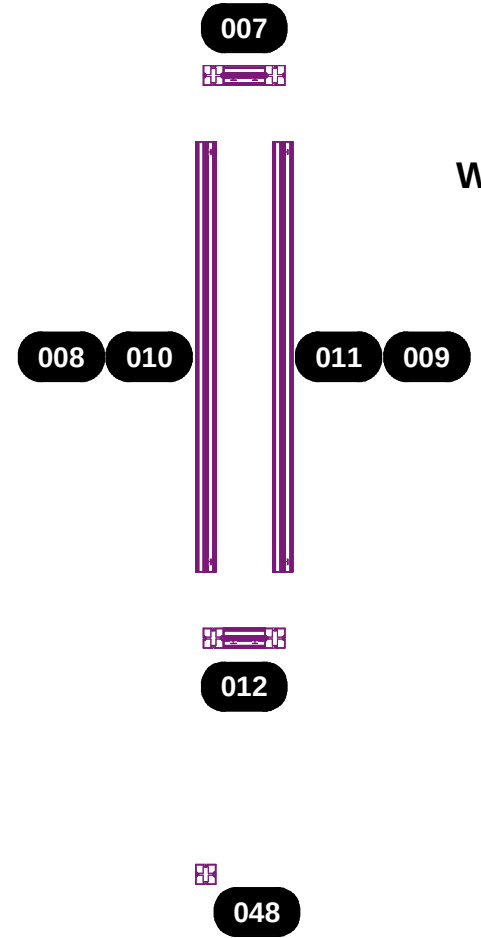


Wall #2

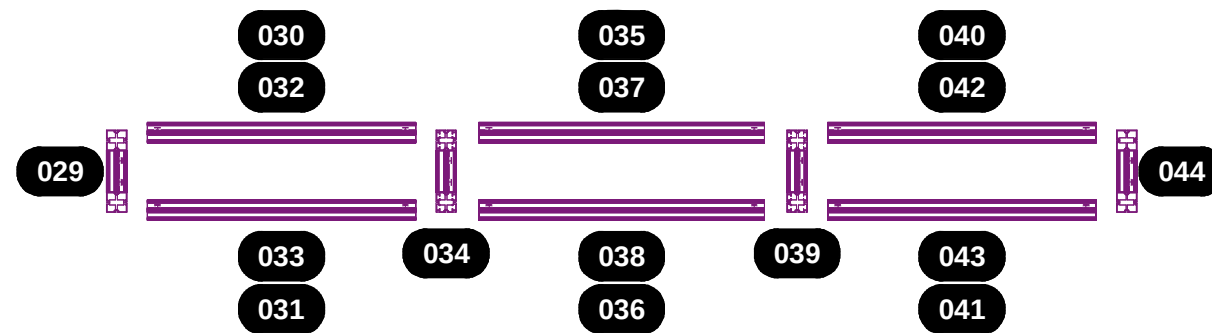


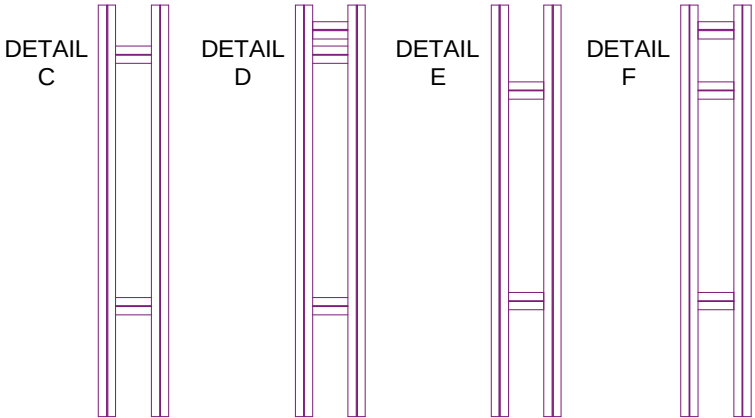

EXPLODED PERSPECTIVE VIEW
LEVEL 2

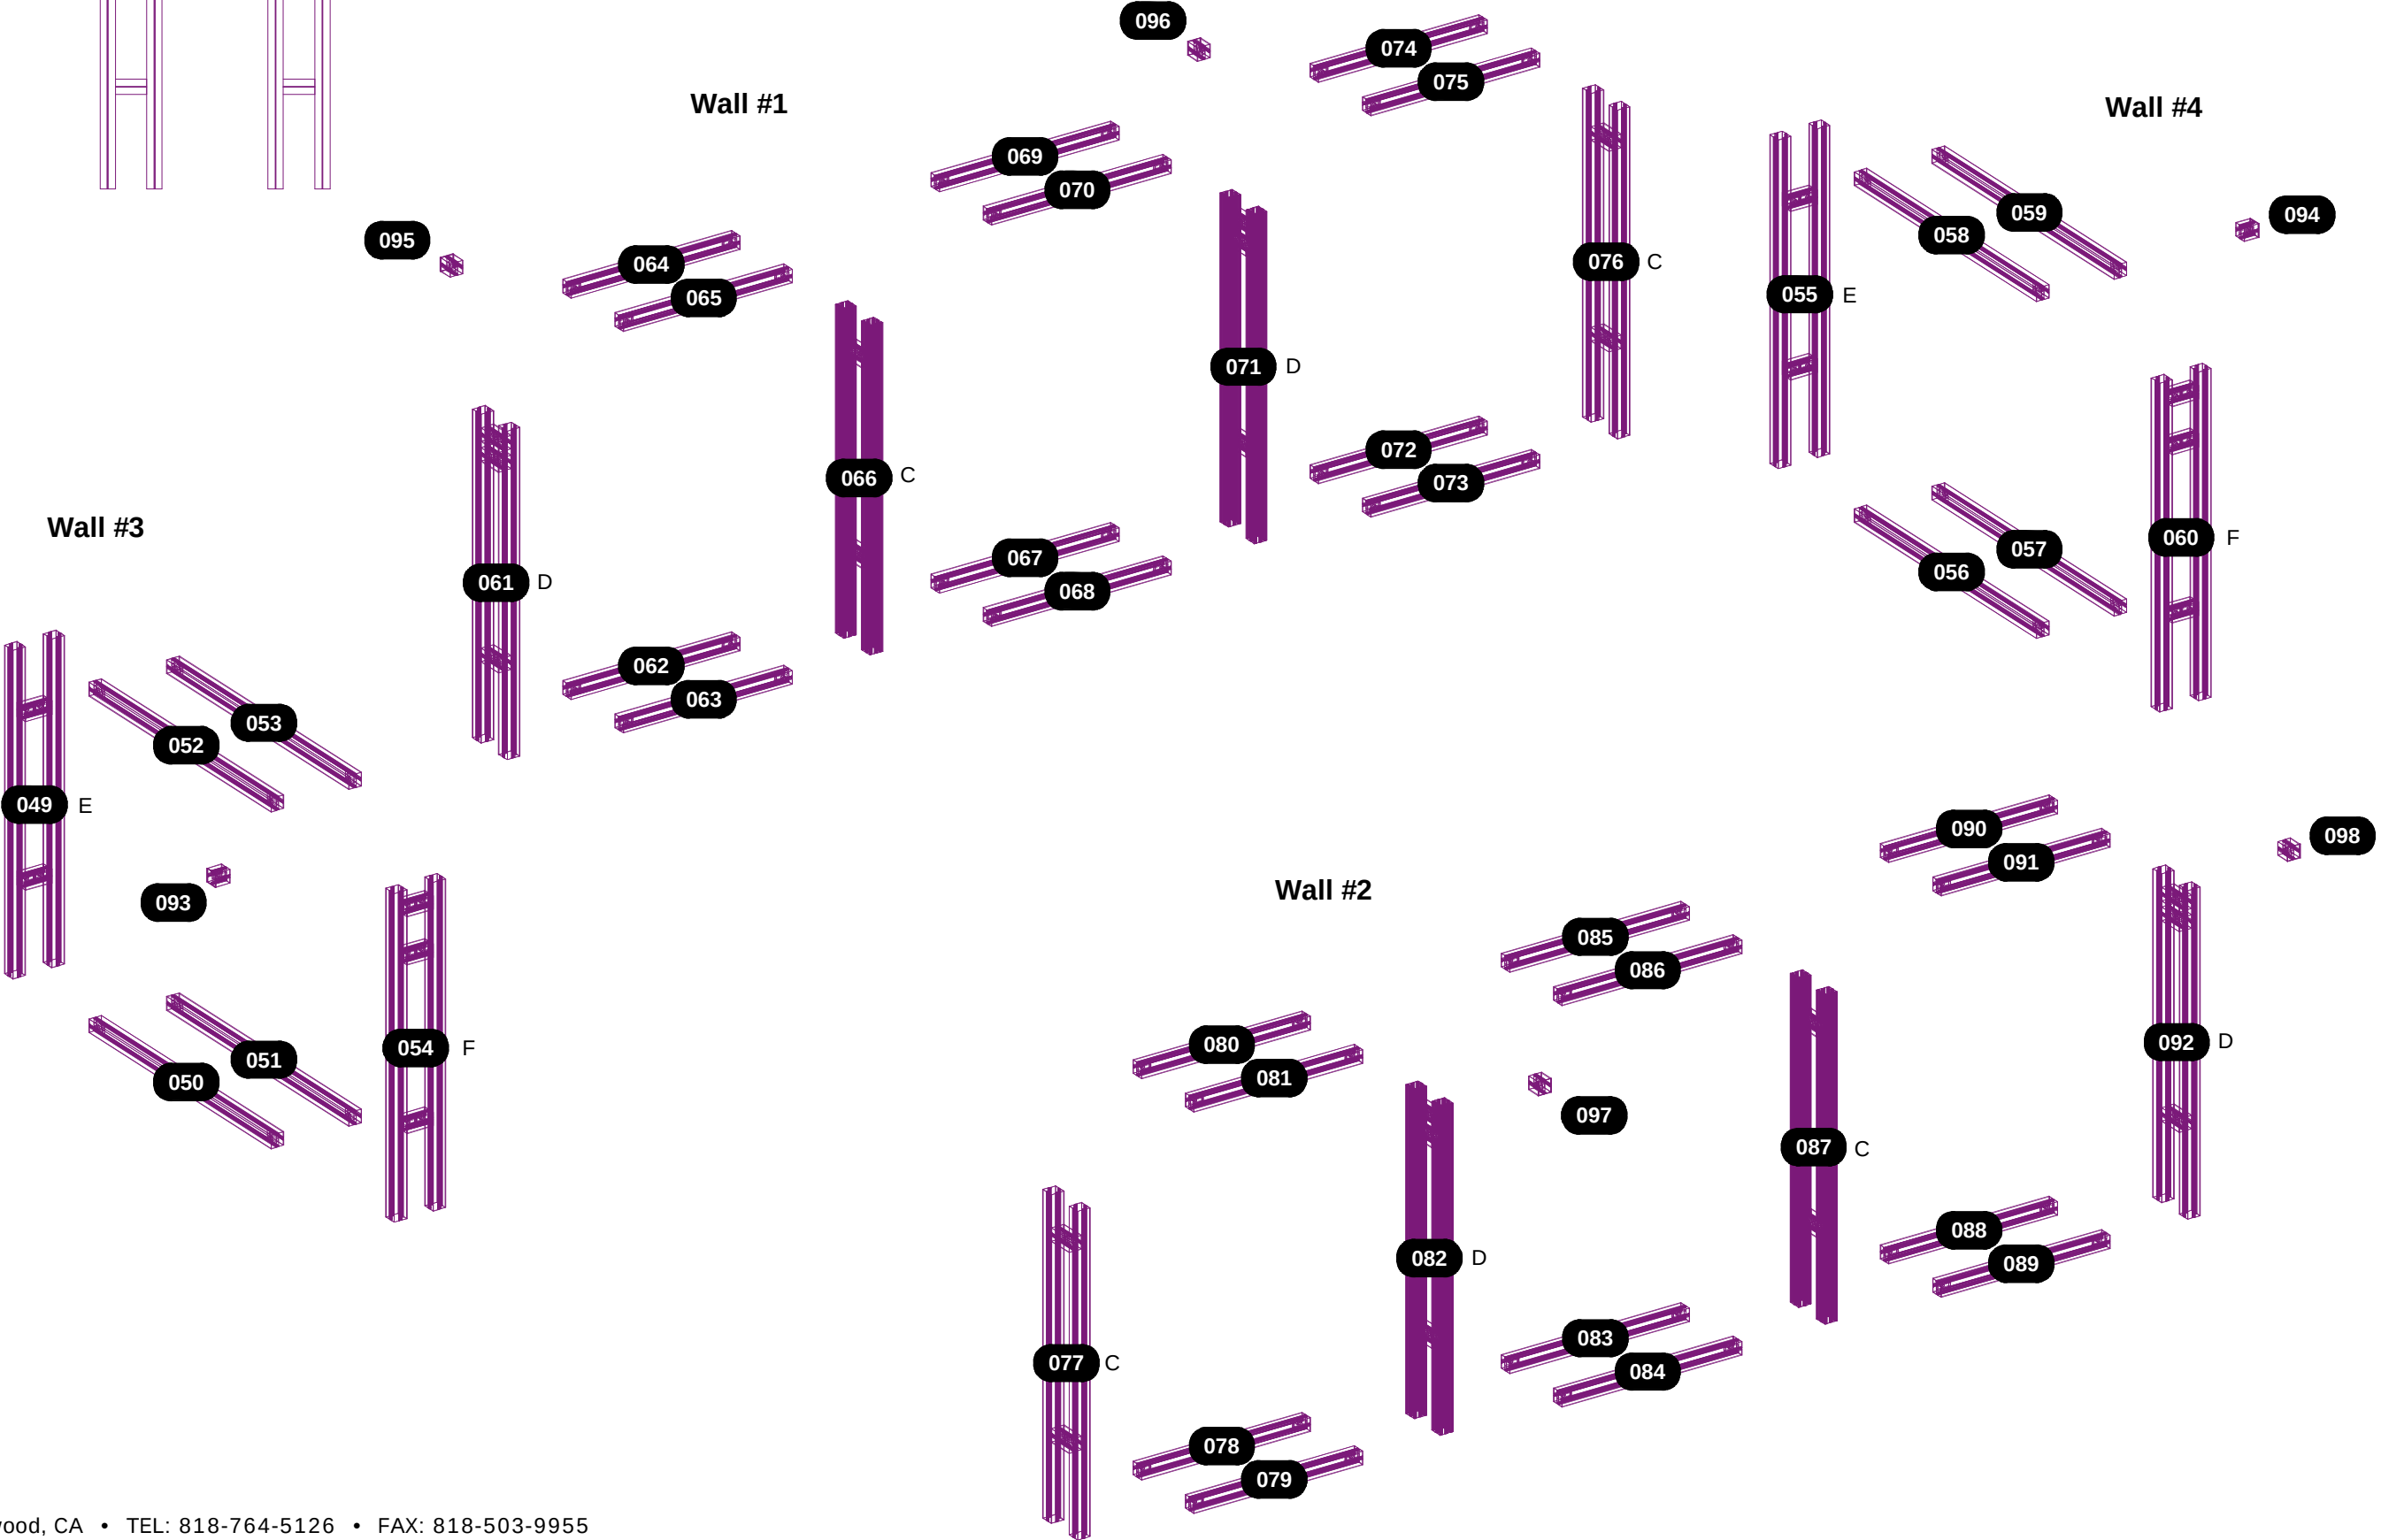


PLAN VIEW
LEVEL 2

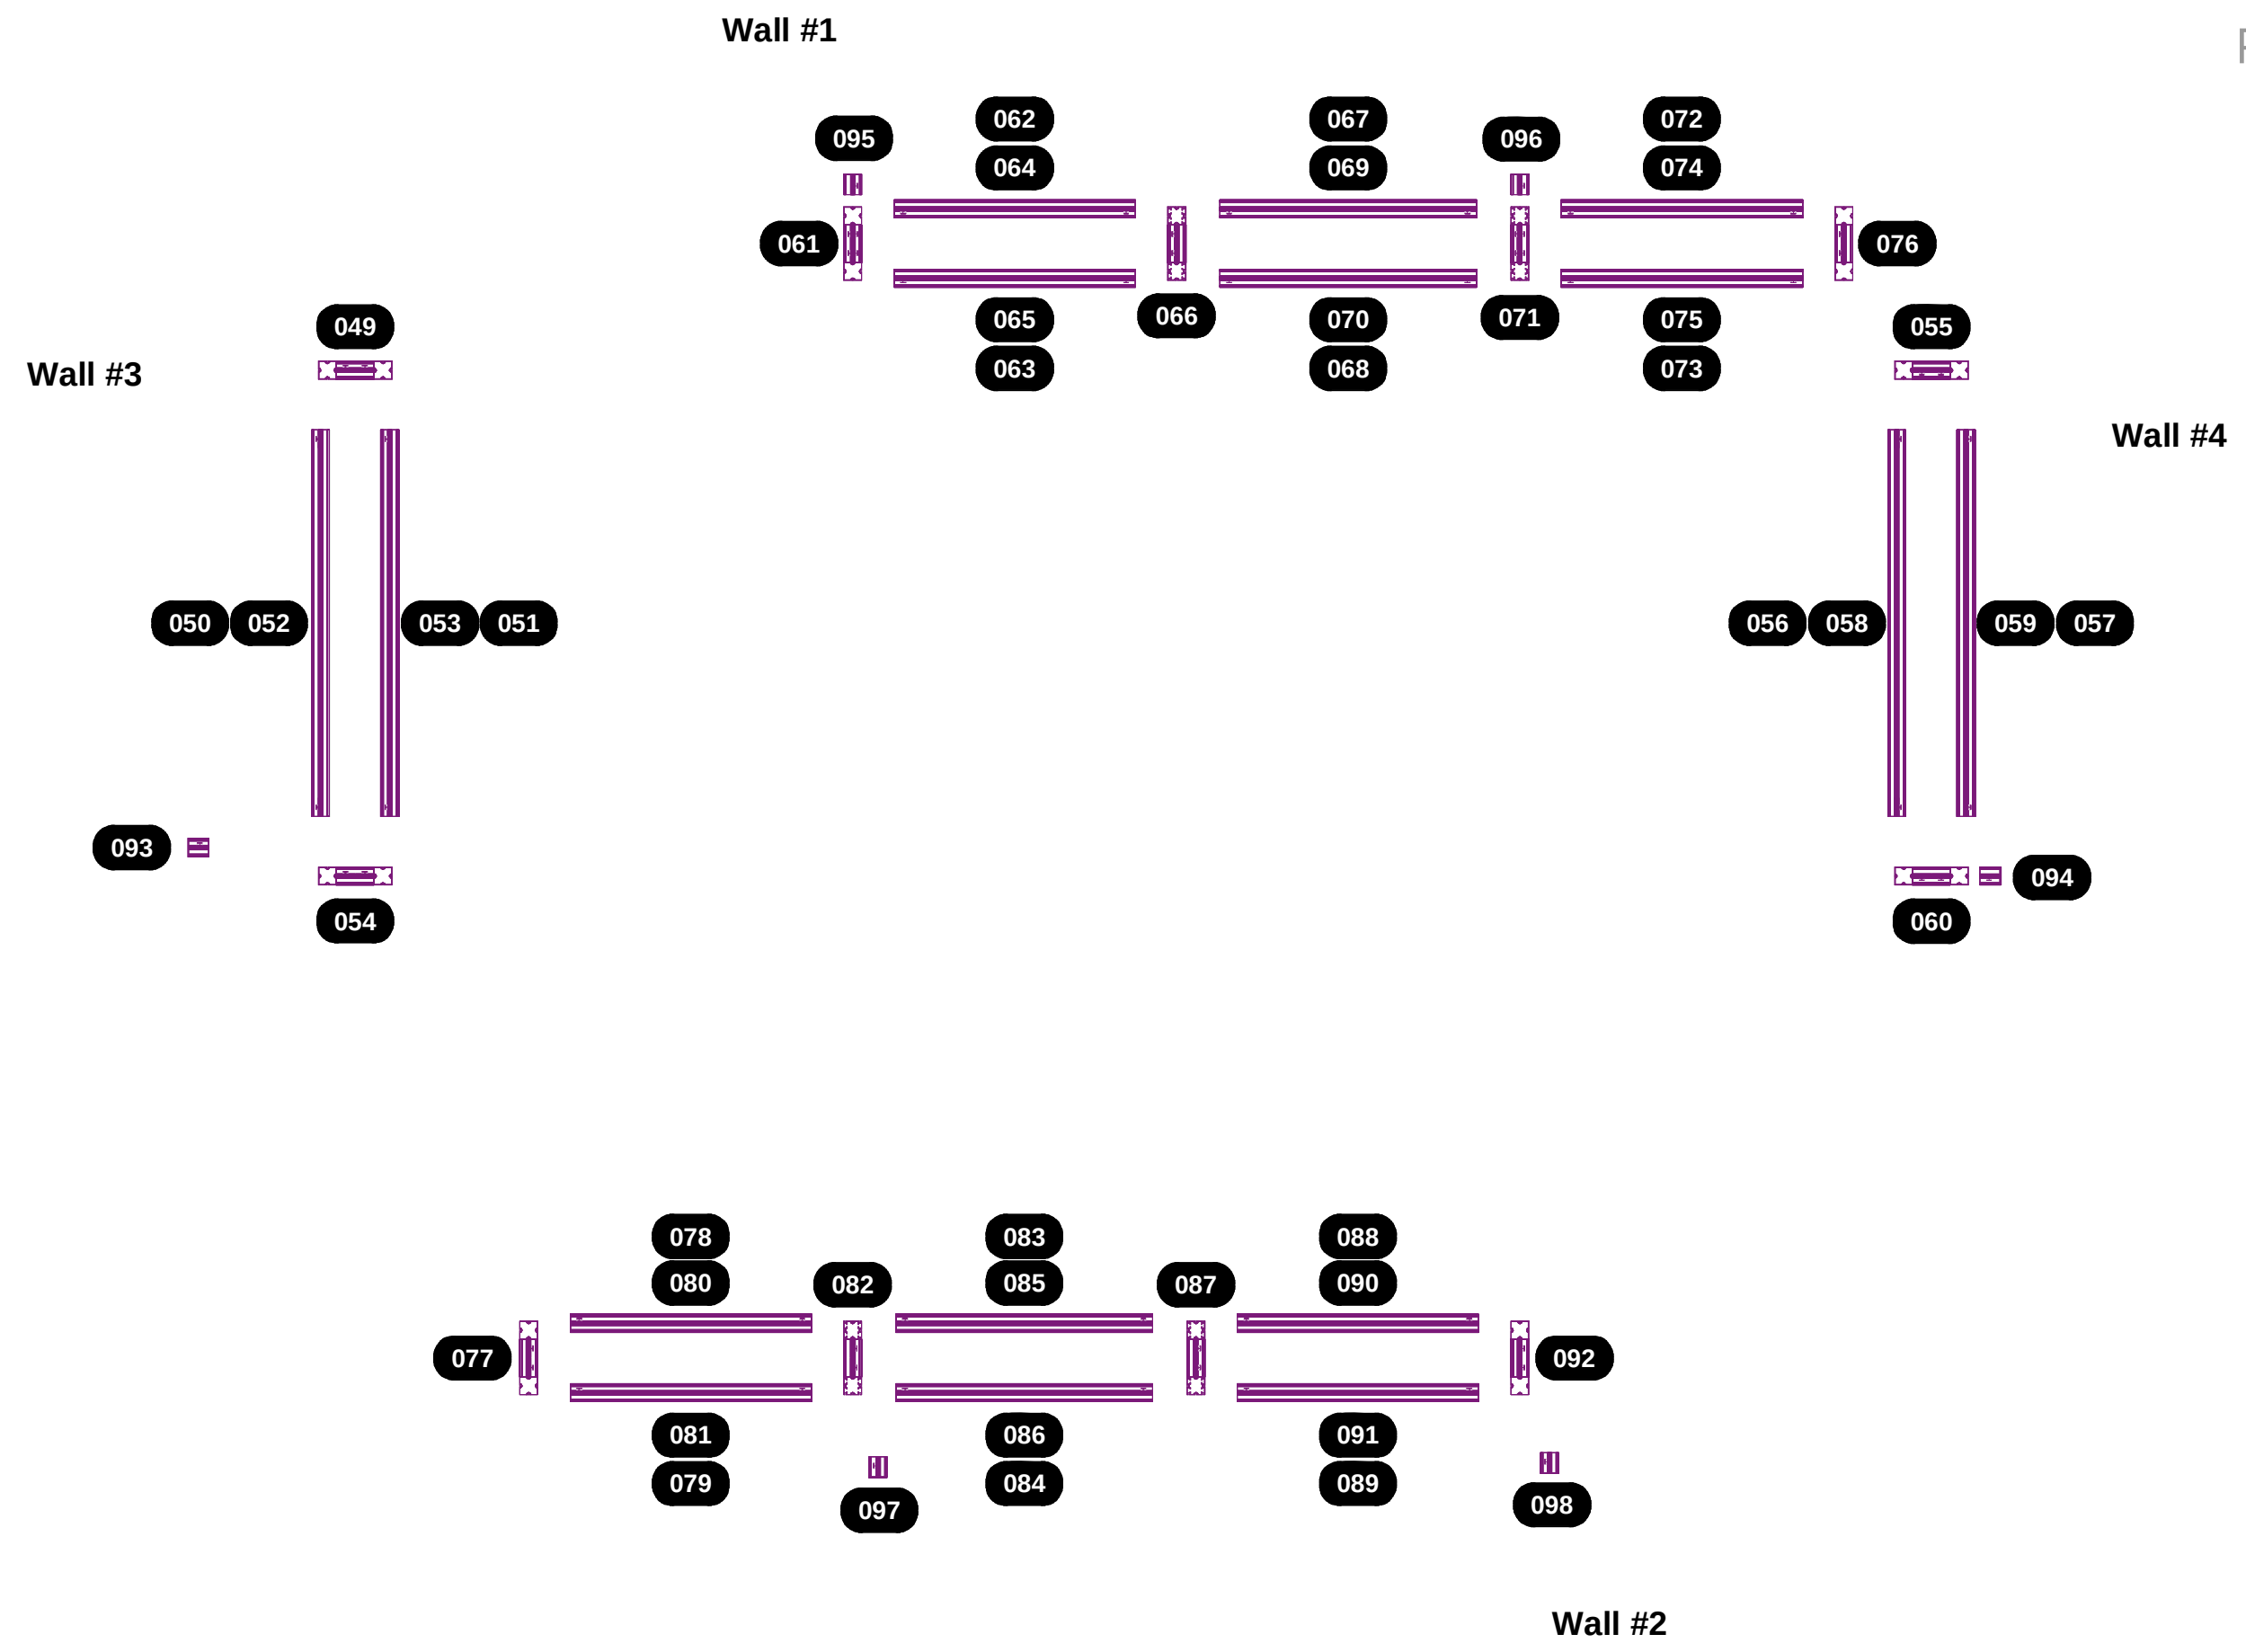



Lightbox Locations


Wall #1

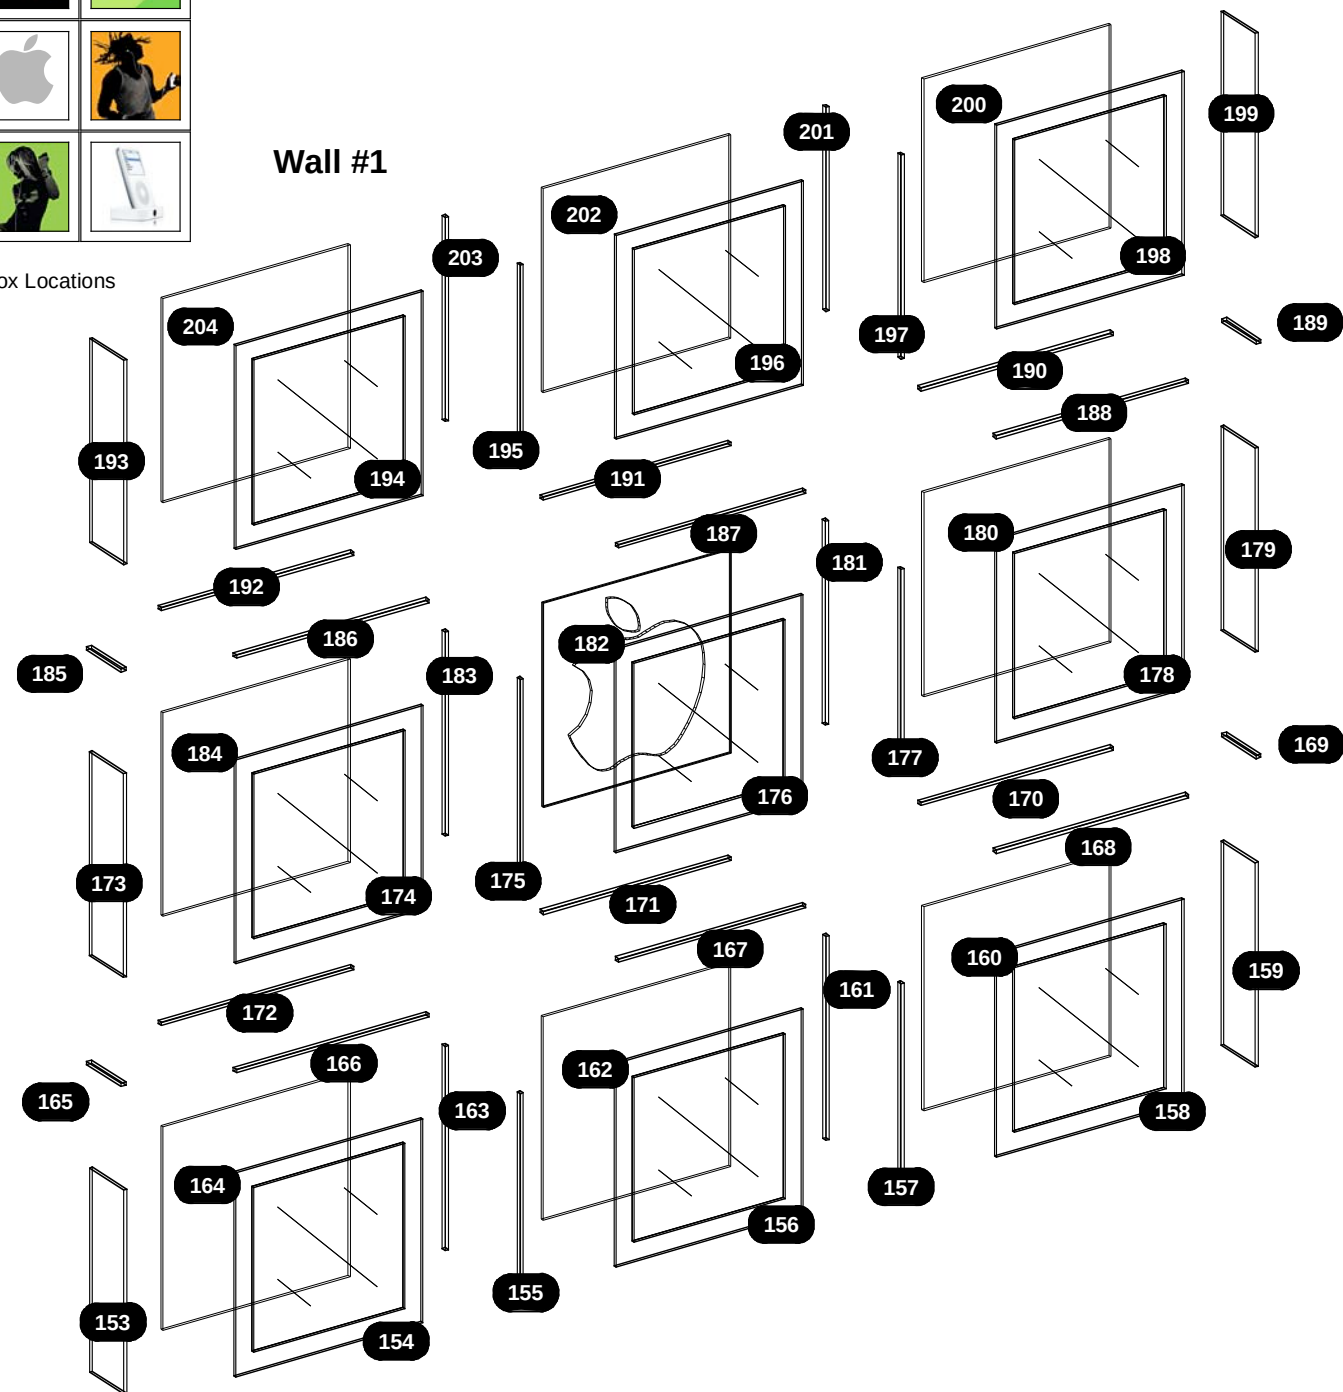


NOTE: See 'DETAILS' page for instructions on attaching panels to the Aluminum Extrusion structure assembled in levels 1 and 2.

EXPLODED PERSPECTIVE VIEW LEVEL 3


Wall #2

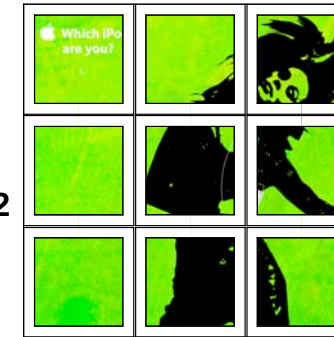


Lightbox Locations

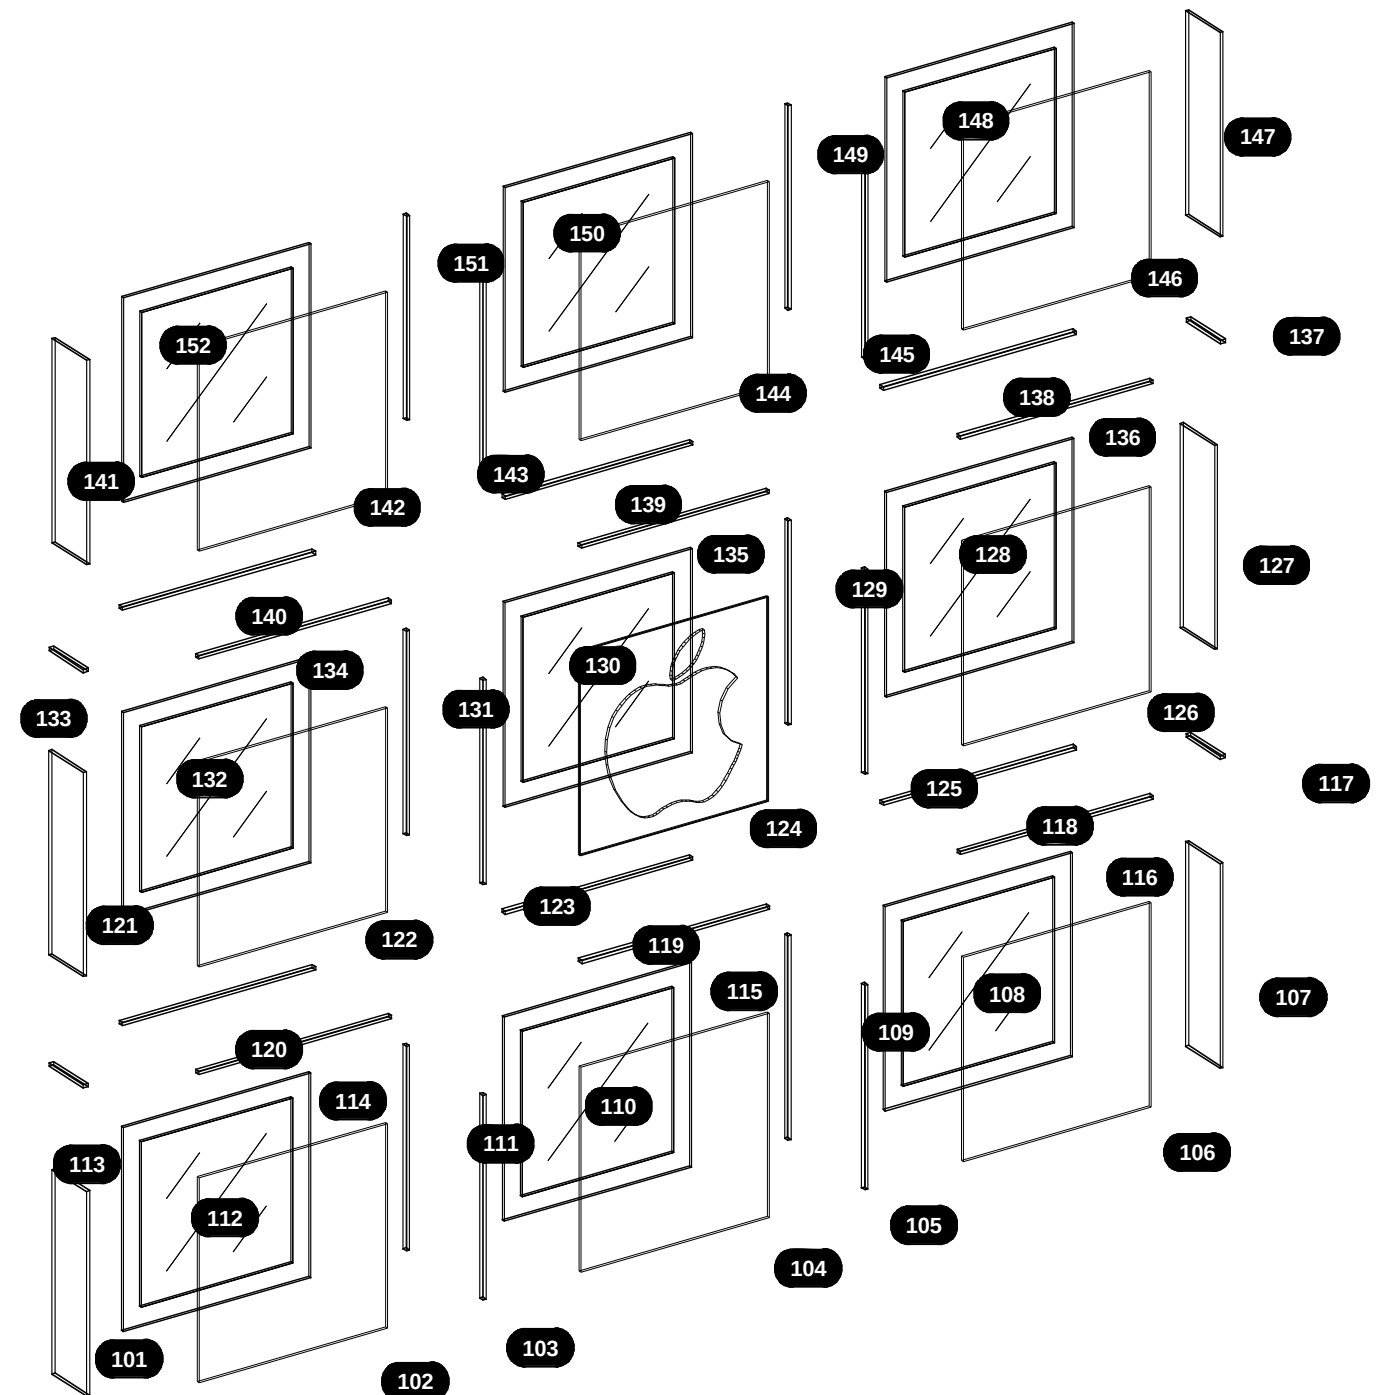


PLAN VIEW
LEVEL 3

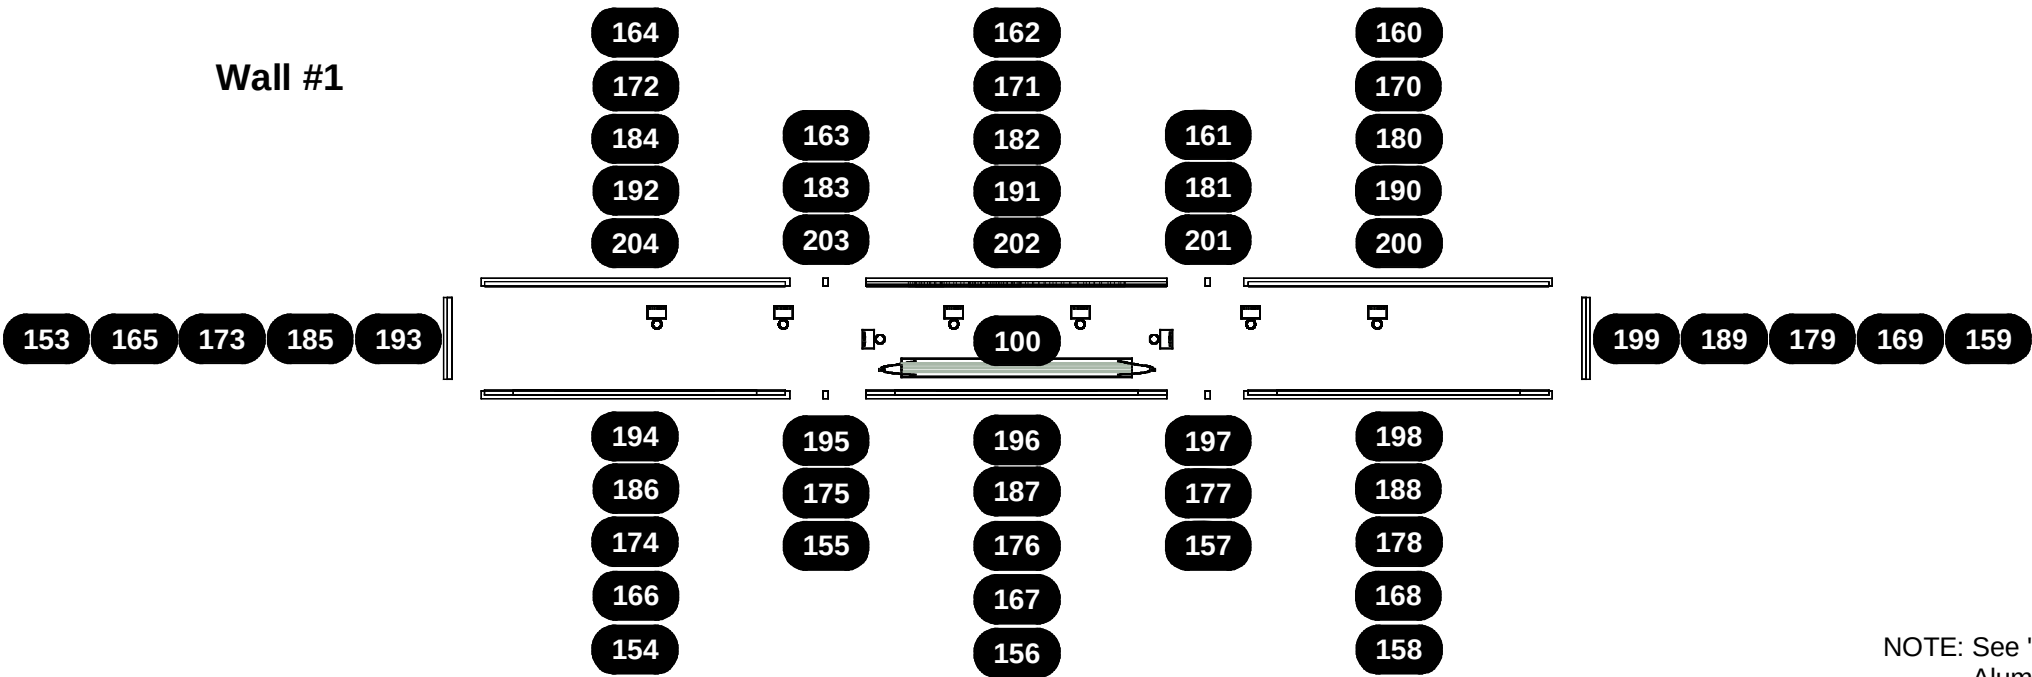


NOTE: See 'DETAILS' page for instructions on attaching panels to the Aluminum Extrusion structure assembled in levels 1 and 2.

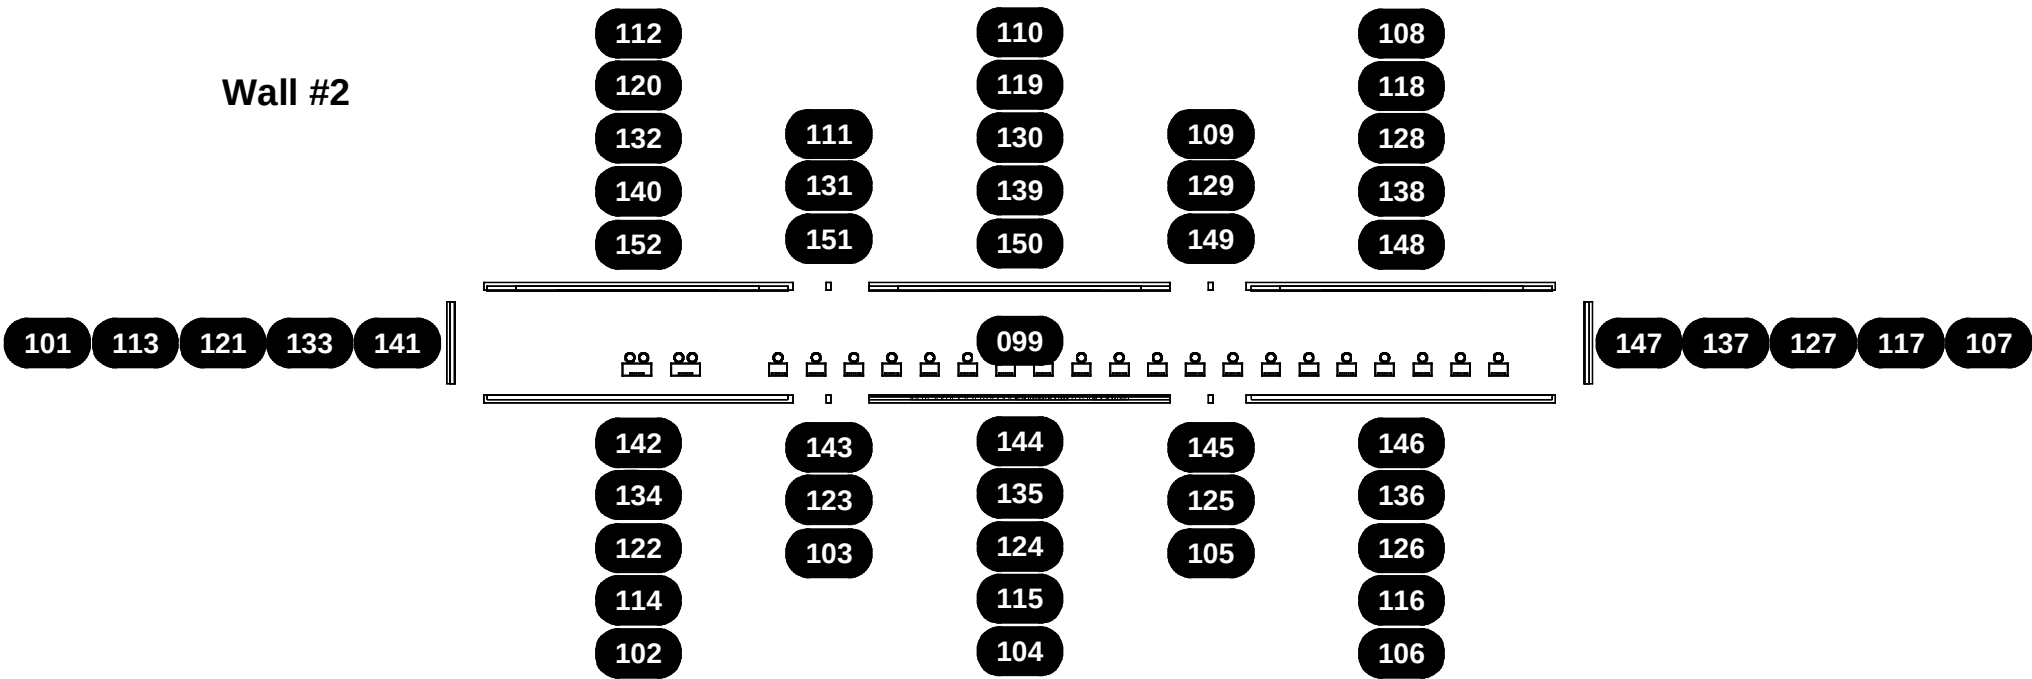

EXPLODED PERSPECTIVE VIEW
LEVEL 4

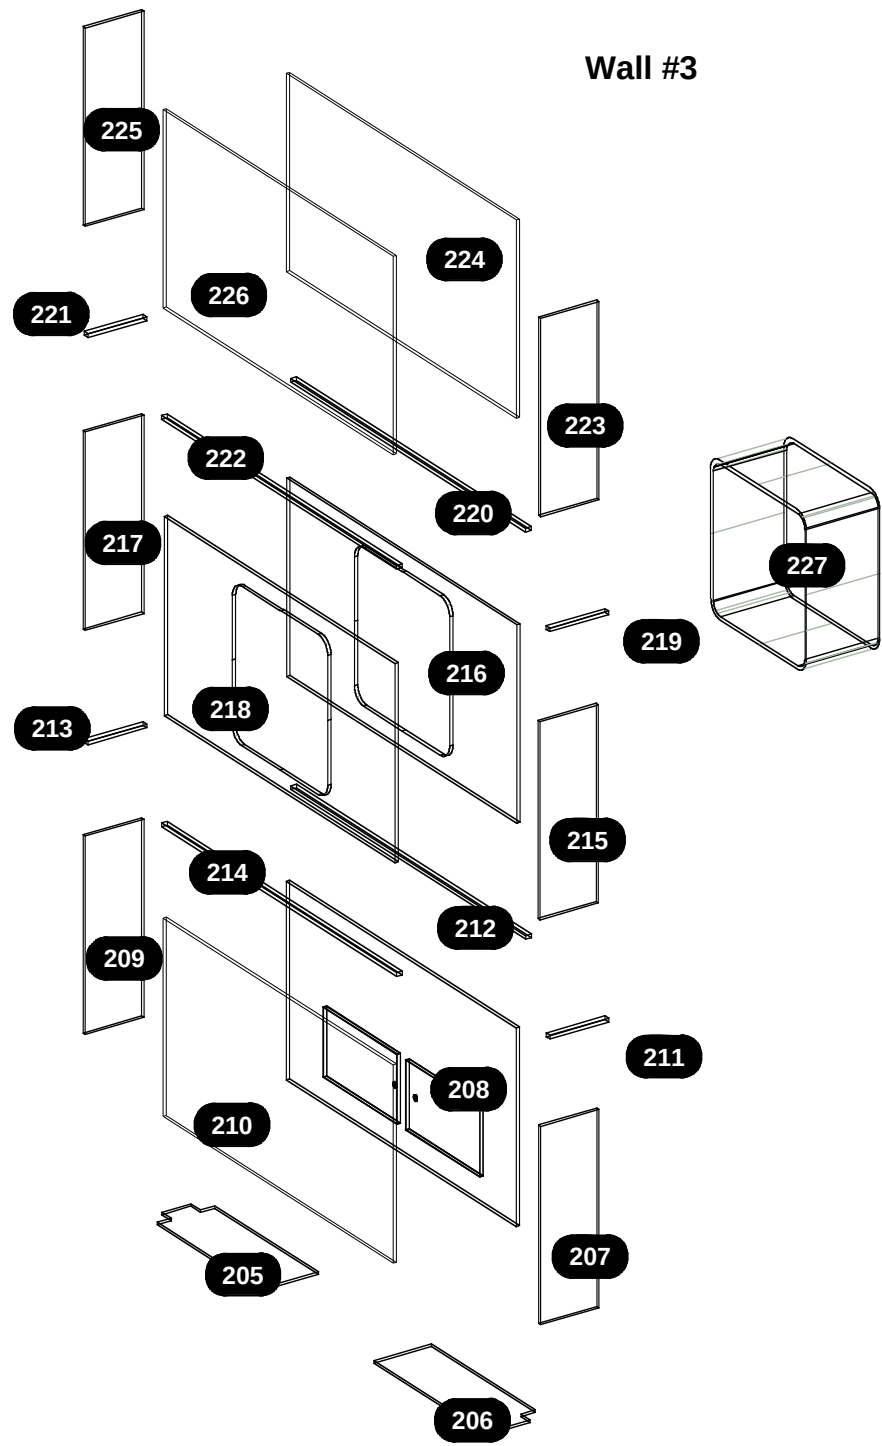


Wall #4

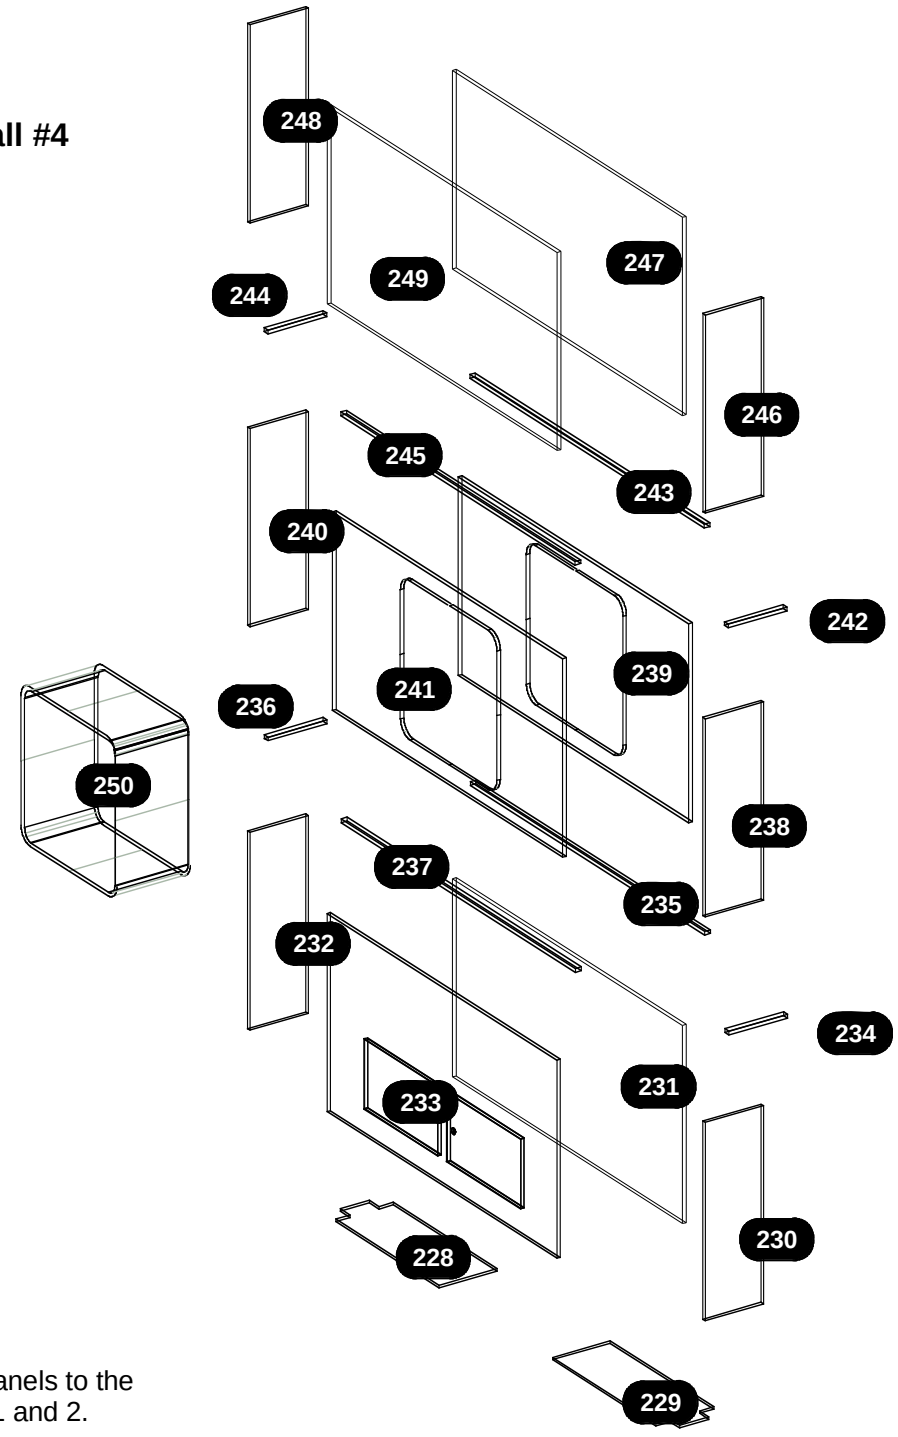


NOTE: See 'DETAILS' page for instructions on attaching panels to the Aluminum Extrusion structure assembled in levels 1 and 2.

PLAN VIEW
LEVEL 4

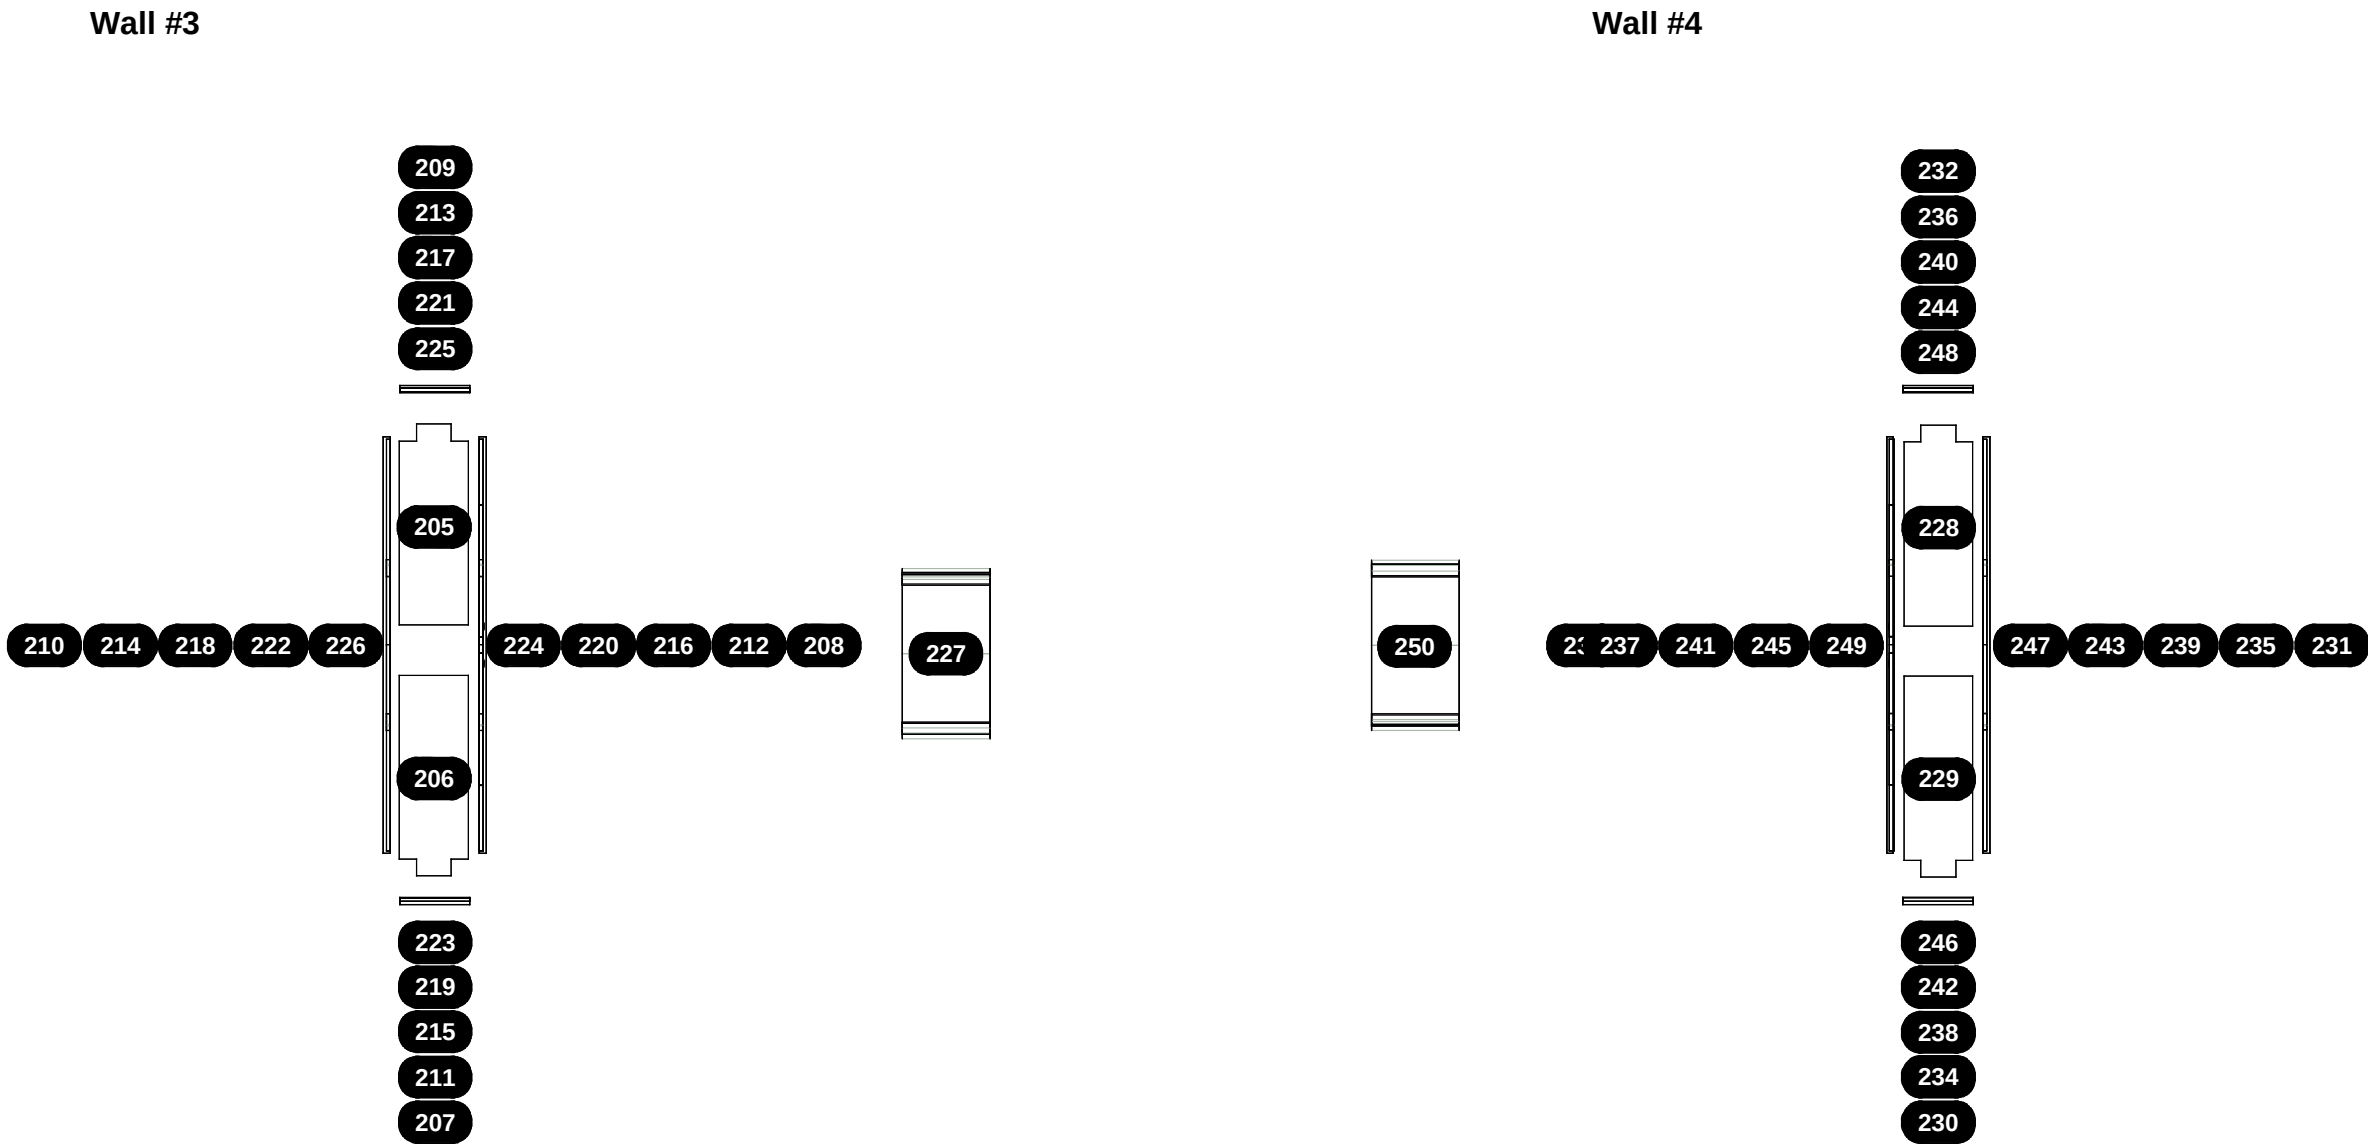


NOTE: See 'DETAILS' page for instructions on attaching panels to the Aluminum Extrusion structure assembled in levels 1 and 2.

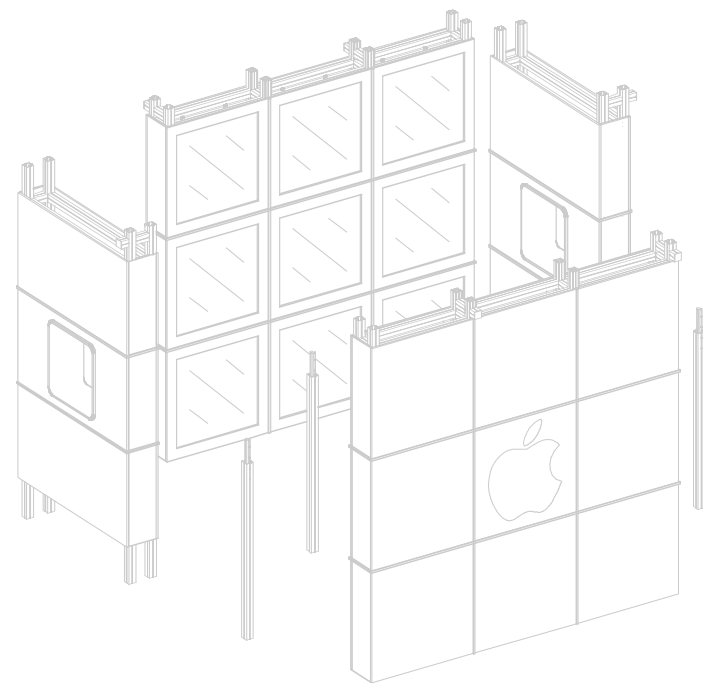


LEVELS 1-4 ASSEMBLED

EXPLODED PERSPECTIVE VIEW LEVEL 5

NOTE: See 'CEILING DETAILS' page for better clarity on horizontal beam locations.

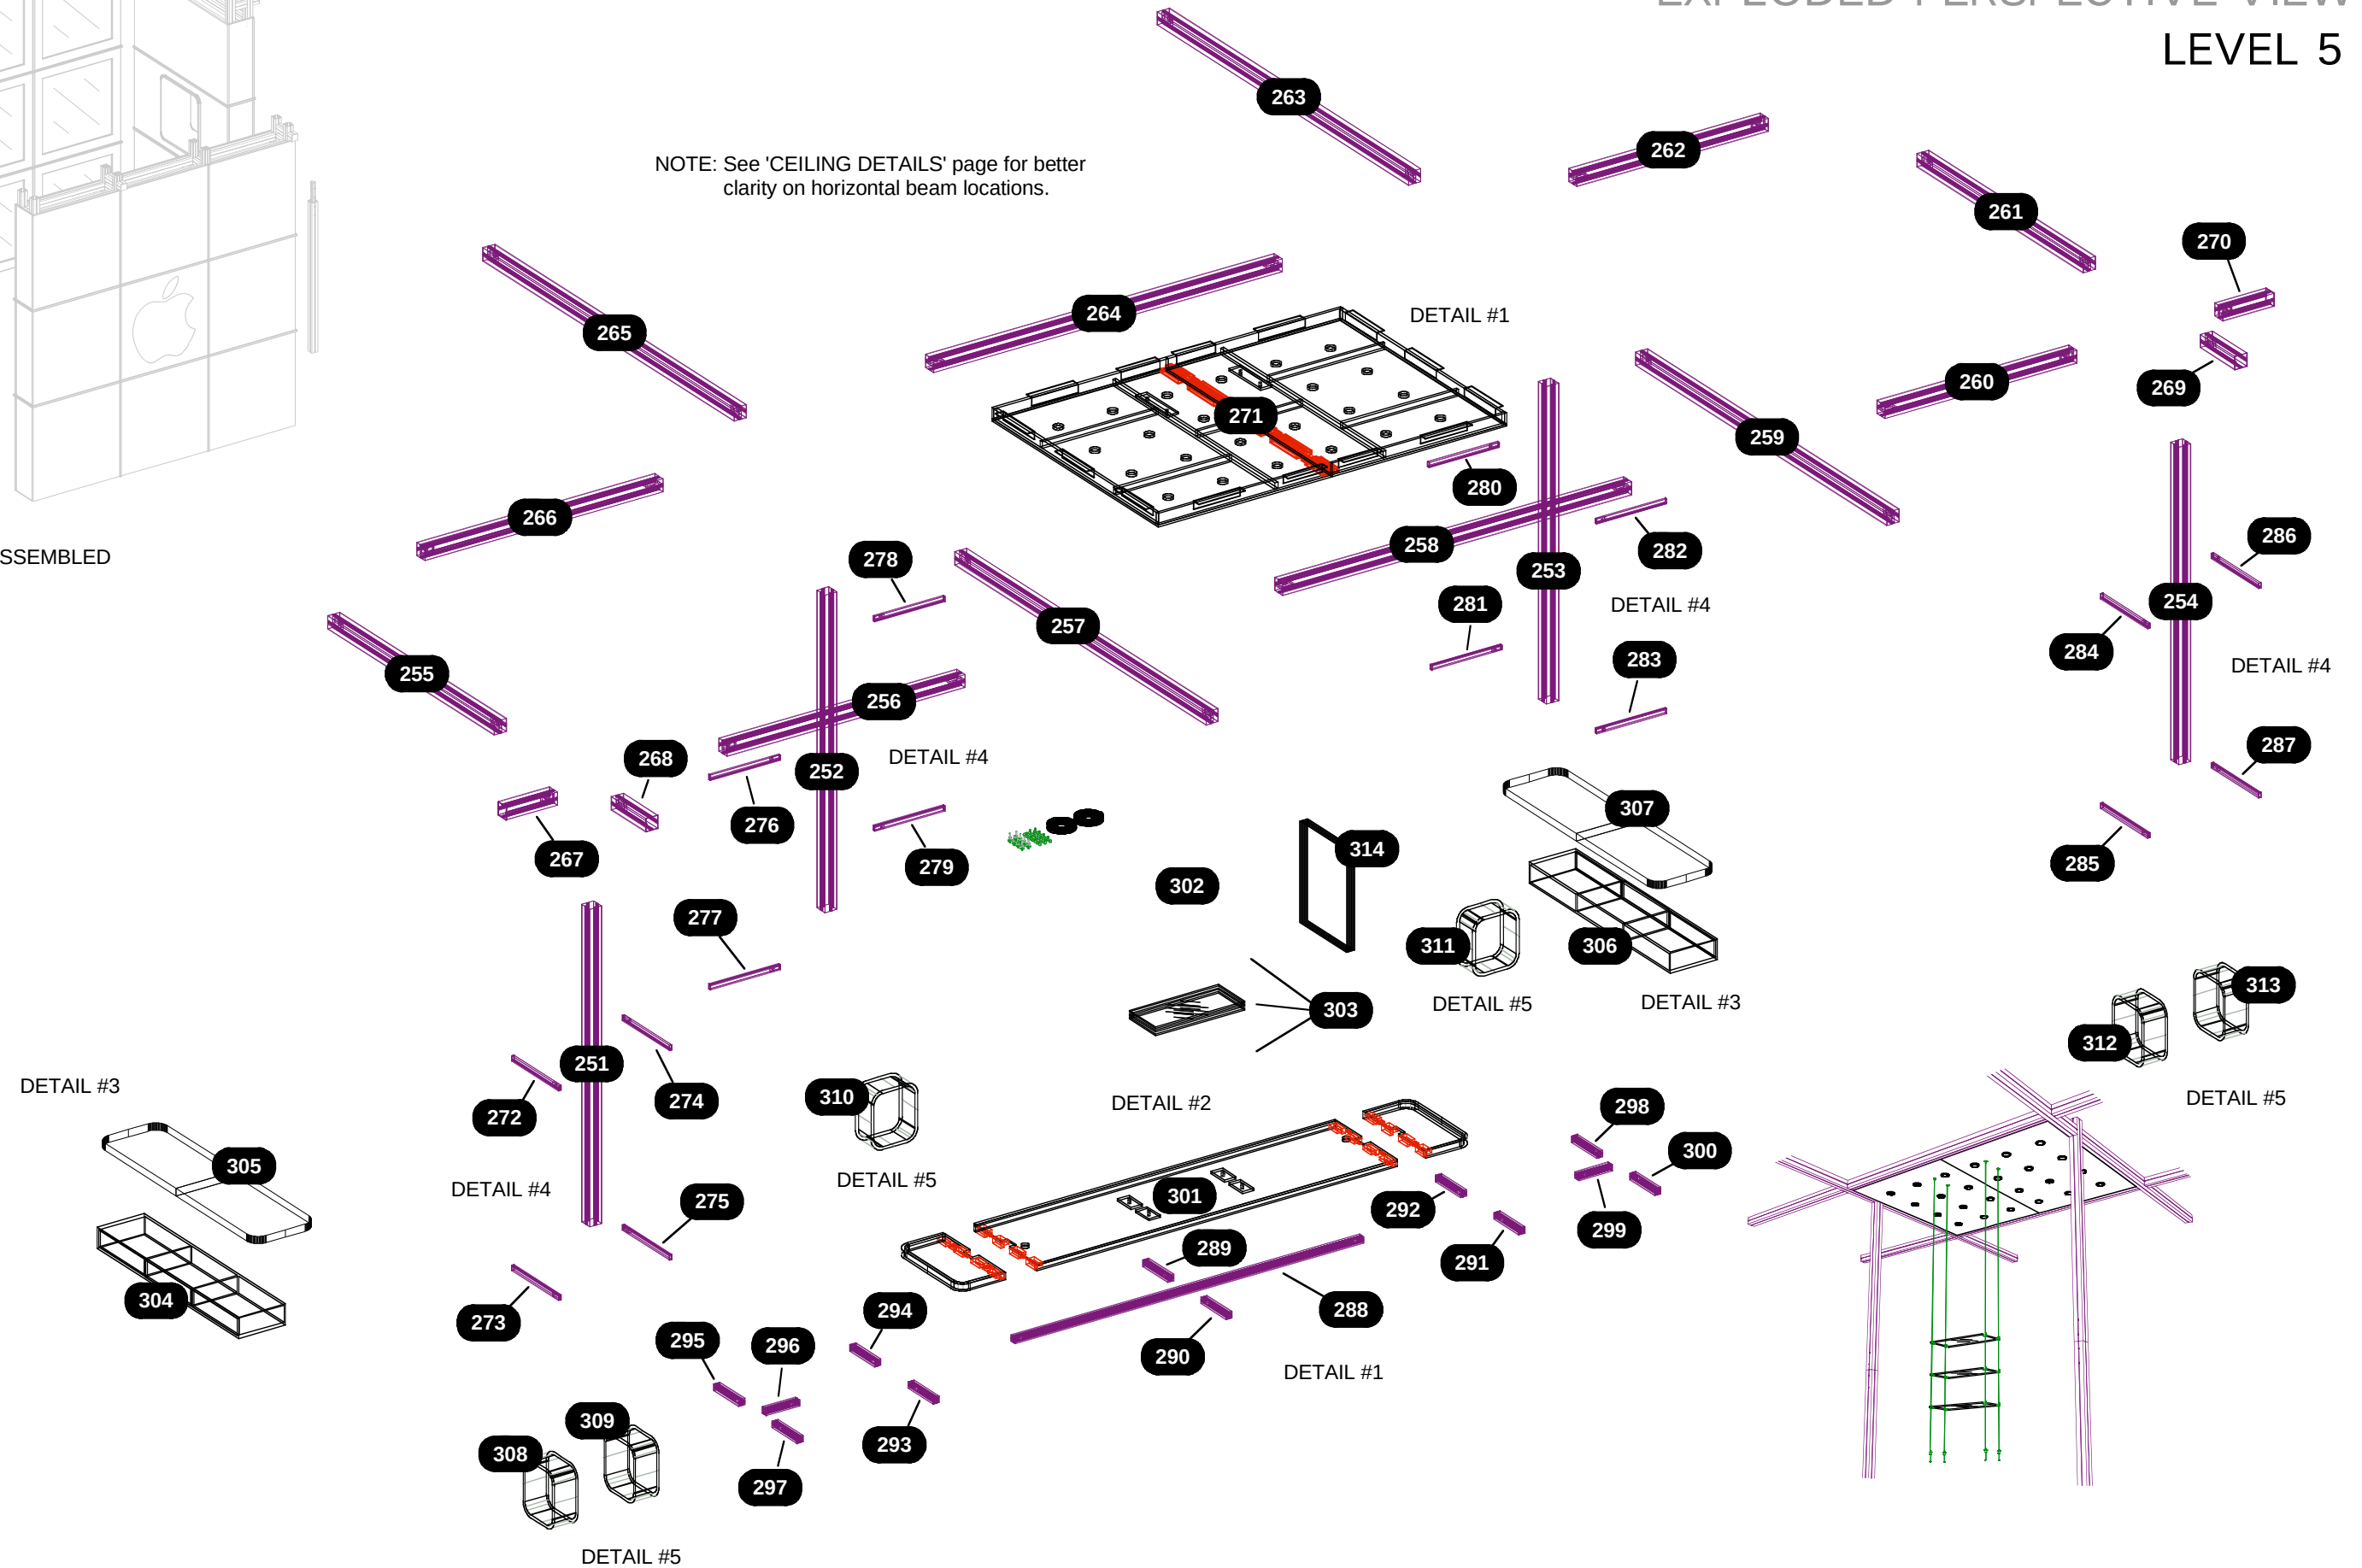

PLAN VIEW LEVEL 5

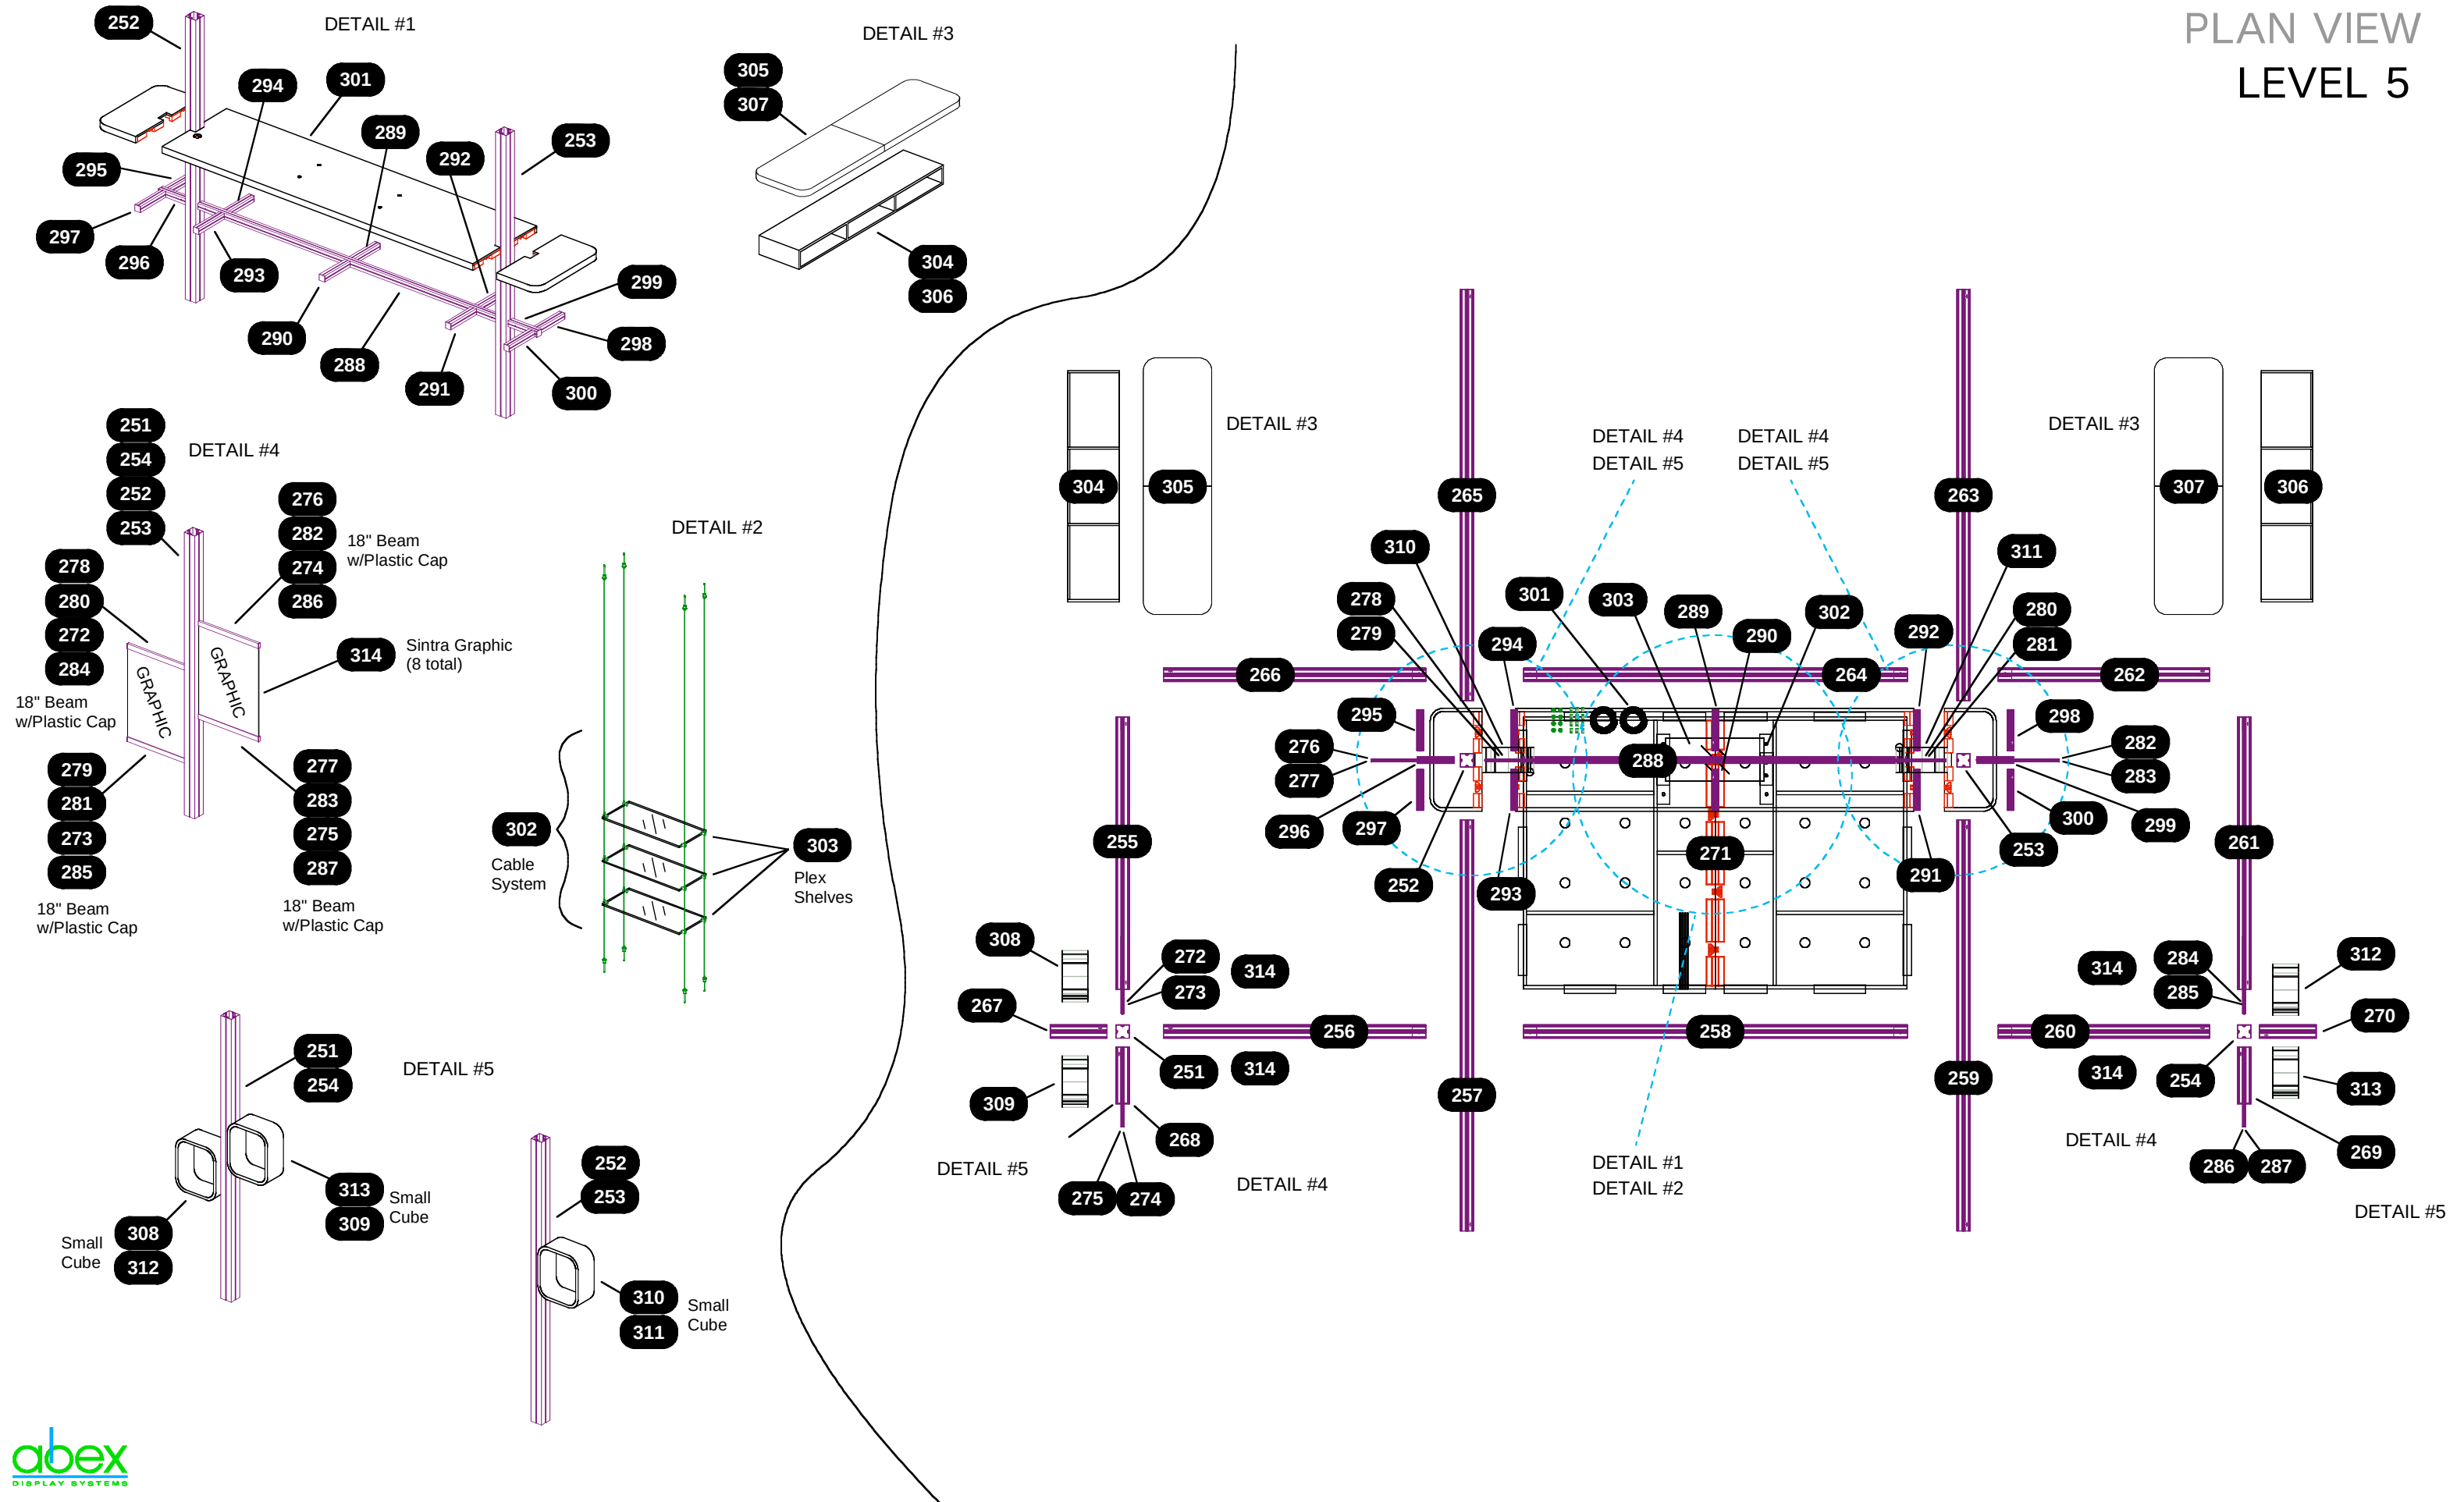

PACKING/UNPACKING PARTS

LOCATION CHART 1

LEVEL 1

PART NO.	DESCRIPTION	CASE NO.	SLOT NO.	LAM CODE
L1-001	Octonorm Assembly B	Crate #1		-
L1-002	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-003	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-004	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-005	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-006	Octonorm Assembly B	Crate #1		-
L1-007	Octonorm Assembly B	Crate #1		-
L1-008	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-009	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-010	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-011	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-012	Octonorm Assembly B	Crate #1		-
L1-013	Octonorm Assembly A	Crate #1		-
L1-014	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-015	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-016	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-017	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-018	Octonorm Assembly A	Crate #1		-
L1-019	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-020	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-021	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-022	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-023	Octonorm Assembly A	Crate #1		-
L1-024	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-025	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-026	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-027	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-028	Octonorm Assembly A	Crate #1		-
L1-029	Octonorm Assembly A	Crate #1		-
L1-030	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-031	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-032	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-033	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-034	Octonorm Assembly A	Crate #1		-
L1-035	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-036	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-037	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-038	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-039	Octonorm Assembly A	Crate #1		-
L1-040	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-041	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-042	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-043	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,N0101	Crate #1	1101	-
L1-044	Octonorm Assembly A	Crate #1		-
L1-045	M1020-75in.-cut0deg,CDS,M1103/SPLICE-cut0deg,N0101	Crate #1	1101	-
L1-046	M1020-75in.-cut0deg,CDS,M1103/SPLICE-cut0deg,N0101	Crate #1	1101	-
L1-047	M1020-75in.-cut0deg,CDS,M1103/SPLICE-cut0deg,N0101	Crate #1	1101	-
L1-048	M1020-75in.-cut0deg,CDS,M1103/SPLICE-cut0deg,N0101	Crate #1	1101	-

LEVEL 2

PART NO.	DESCRIPTION	CASE NO.	SLOT NO.	LAM CODE
L2-049	Octonorm Assembly E	Crate #1		-
L2-050	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-051	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-052	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-053	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-054	Octonorm Assembly F	Crate #1		-
L2-055	Octonorm Assembly E	Crate #1		-
L2-056	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-057	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-058	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-059	M1020-67.19in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-060	Octonorm Assembly F	Crate #1		-
L2-061	Octonorm Assembly D	Crate #1		-
L2-062	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-063	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-064	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-065	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-066	Octonorm Assembly C	Crate #1		-
L2-067	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-068	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-069	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-070	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-071	Octonorm Assembly D	Crate #2		-
L2-072	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1201	-
L2-073	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-074	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-075	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-076	Octonorm Assembly C	Crate #2		-
L2-077	Octonorm Assembly C	Crate #2		-
L2-078	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-079	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-080	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-081	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-082	Octonorm Assembly D	Crate #2		-
L2-083	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-084	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-085	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-086	M1020-44.59in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-087	Octonorm Assembly C	Crate #2		-
L2-088	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-089	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-090	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-091	M1020-41.91in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1101	-
L2-092	Octonorm Assembly D	Crate #2		-
L2-093	M1020-3.5in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1083	-
L2-094	M1020-3.5in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1083	-
L2-095	M1020-3.5in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1083	-
L2-096	M1020-3.5in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1083	-
L2-097	M1020-3.5in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1083	-
L2-098	M1020-3.5in.-cut0deg,CP,M1101-cut0deg,Non	Crate #1	M1083	-

LEVEL 3

PART NO.	DESCRIPTION	CASE NO.	SLOT NO.	LAM CODE
L3-099	Fluorescent Fixtures 36"	C2	Xbox#03, 05, 06	
L3-100	Fluorescent Fixtures 36"	C2, C3	Xbox#06, 07, 08	
L3-101	47" x 12.8125" w/2 Tracks	C2	07	D-C
L3-102	47" x 47" w/Two Tracks, Left	C1	01	-
L3-103	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-104	47" x 47" w/Two Tracks, Center	C1	02	-
L3-105	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-106	47" x 47" w/Two Tracks, Right	C1	03	-
L3-107	47" x 12.8125" w/2 Tracks	C2	07	D-C
L3-108	47" x 47" w/LB (38x38 plex) & 2Tr, Left	C1	04	-
L3-109	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-110	47" x 47" w/LB (38x38 plex) & 2Tr, Center	C1	05	-
L3-111	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-112	47" x 47" w/LB (38x38 plex) & 2Tr, Right	C1	06	-
L3-113	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-114	48.25" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-115	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-116	48.25" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-117	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-118	48.25" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-119	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-120	48.25" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-121	47" x 12.8125" w/2 Tracks	C2	07	D-C
L3-122	47" x 47" w/Two Tracks, Left	C1	07	-
L3-123	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-124	47" x 47" w/2 Tr & Apple Lgtbx	C1	08	A-C
L3-125	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-126	47" x 47" w/Two Tracks, Right	C1	09	-
L3-127	47" x 12.8125" w/2 Tracks	C2	08	D-C
L3-128	47" x 47" w/LB (38x38 plex) & 2Tr, Left	C1	10	-
L3-129	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-130	47" x 47" w/LB (38x38 plex) & 2Tr, Center	C1	11	-
L3-131	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-132	47" x 47" w/LB (38x38 plex) & 2Tr, Right	C1	12	-
L3-133	12.8125" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-134	48.25" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-135	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-136	48.25" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-137	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-138	48.25" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-139	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-140	48.25" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-141	47" x 12.8125" w/2 Tracks	C2	Xbox#08	D-C
L3-142	47" x 47" w/Two Tracks, Left	C1	13	-
L3-143	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-144	47" x 47" w/Two Tracks, Center	C1	14	-
L3-145	47" x Endcap (symmetric)	C2	Xbox#01	B-B

PACKING/UNPACKING PARTS

LOCATION CHART 2

LEVEL 3

PART NO.	DESCRIPTION	CASE NO.	SLOT NO.	LAM CODE
L3-146	47" x 47" w/Two Tracks, Right	C1	15	-
L3-147	47" x 12.8125" w/2 Tracks	C2	08	D-C
L3-148	47" x 47" w/LB (38x38 plex) & 2Tr, Left	C1	16	-
L3-149	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-150	47" x 47" w/LB (38x38 plex) & 2Tr, Center	C1	17	-
L3-151	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-152	47" x 47" w/LB (38x38 plex) & 2Tr, Right	C1	18	-
L3-153	47" x 12.8125" w/2 Tracks	C2	09	D-C
L3-154	47" x 47" w/LB (38x38 plex) & 2Tr, Left	C1	19	-
L3-155	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-156	47" x 47" w/LB (38x38 plex) & 2Tr, Center	C1	20	-
L3-157	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-158	47" x 47" w/LB (38x38 plex) & 2Tr, Right	C1	21	-
L3-159	47" x 12.8125" w/2 Tracks	C2	09	D-C
L3-160	47" x 47" w/Two Tracks, Left	C1	22	-
L3-161	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-162	47" x 47" w/Two Tracks, Center	C1	23	-
L3-163	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-164	47" x 47" w/Two Tracks, Right	C1	24	-
L3-165	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-166	48.25" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-167	47" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-168	48.25" x Endcap (symmetric)	C2	Xbox#01	B-B
L3-169	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-170	48.25" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-171	47" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-172	48.25" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-173	47" x 12.8125" w/2 Tracks	C2	09	D-C
L3-174	47" x 47" w/LB (38x38 plex) & 2Tr, Left	C1	25	-
L3-175	47" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-176	47" x 47" w/LB (38x38 plex) & 2Tr, Center	C1	26	-
L3-177	47" x Endcap (symmetric)	C2	xbox#02	B-B
L3-178	47" x 47" w/LB (38x38 plex) & 2Tr, Right	C1	27	-
L3-179	47" x 12.8125" w/2 Tracks	C2	10	D-C
L3-180	47" x 47" w/Two Tracks, Left	C1	28	-
L3-181	47" x Endcap (symmetric)	C2	02	B-B
L3-182	47" x 47" w/2 Tr & Apple Lgtbx	C1	29	A-C
L3-183	47" x Endcap (symmetric)	C2	02	-
L3-184	47" x 47" w/Two Tracks, Right	C1	30	-
L3-185	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-186	48.25" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-187	47" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-188	48.25" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-189	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-190	48.25" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-191	47" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-192	48.25" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-193	47" x 12.8125" w/2 Tracks	C2	10	D-C
L3-194	47" x 47" w/LB (38x38 plex) & 2Tr, Left	C2	01	-
L3-195	47" x Endcap (symmetric)	C2	Xbox#02	-
L3-196	47" x 47" w/LB (38x38 plex) & 2Tr, Center	C2	02	-

LEVEL 3

PART NO.	DESCRIPTION	CASE NO.	SLOT NO.	LAM CODE
L3-197	47" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-198	47" x 47" w/LB (38x38 plex) & 2Tr, Right	C2	03	-
L3-199	47" x 12.8125" w/2 Tracks	C2	10	D-C
L3-200	47" x 47" w/Two Tracks, Left	C2	04	-
L3-201	47" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-202	47" x 47" w/Two Tracks, Center	C2	05	-
L3-203	47" x Endcap (symmetric)	C2	Xbox#02	B-B
L3-204	47" x 47" w/Two Tracks, Right	C2	06	-

LEVEL 4

PART NO.	DESCRIPTION	CASE NO.	SLOT NO.	LAM CODE
L4-205	Inner Shelf 12 9/16" x 36 5/8" x 1/2" Lam	C2	Xbox#04	C-C
L4-206	Inner Shelf 12 9/16" x 36 5/8" x 1/2" Lam	C2	Xbox#04	C-C
L4-207	40" x 12.8125" w/2 Tracks	C2	11	D-C
L4-208	40" x 75" w/2 Doors & 2 Tracks	Crate #2		D-C
L4-209	40" x 12.8125" w/2 Tracks	C2	11	D-C
L4-210	40" x 75" w/Two Tracks	Crate #2		D-C
L4-211	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L4-212	76" x Endcap (symmetric)	Crate #2		-
L4-213	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L4-214	76" x Endcap (symmetric)	Crate #2		-
L4-215	40" x 12.8125" w/2 Tracks	C2	11	D-C
L4-216	40" x 75" w/2 Tracks & Large Cutout	Crate #2		D-C
L4-217	40" x 12.8125" w/2 Tracks	C2	12	D-C
L4-218	40" x 75" w/2 Tracks & Large Cutout	Crate #2		D-C
L4-219	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L4-220	76" x Endcap (symmetric)	Crate #2		-
L4-221	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L4-222	76" x Endcap (symmetric)	Crate #2		-
L4-223	40" x 12.8125" w/2 Tracks	C2	12	D-C
L4-224	40" x 75" w/Two Tracks	Crate #2		D-C
L4-225	40" x 12.8125" w/2 Tracks	C2	12	D-C
L4-226	40" x 75" w/Two Tracks	Crate #2		D-C
L4-227	Fusion Cube 31"x 32"x 16" Deep	C3		D-B
L4-228	Inner Shelf 12 9/16" x 36 5/8" x 1/2" Lam	C2	Xbox#04	C-C
L4-229	Inner Shelf 12 9/16" x 36 5/8" x 1/2" Lam	C2	Xbox#04	C-C
L4-230	40" x 12.8125" w/2 Tracks	C2	13	D-C
L4-231	40" x 75" w/Two Tracks	Crate #2		D-C
L4-232	40" x 12.8125" w/2 Tracks	C2	13	D-C
L4-233	40" x 75" w/2 Doors & 2 Tracks	Crate #2		D-C
L4-234	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L4-235	76" x Endcap (symmetric)	Crate #2		-
L4-236	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L4-237	76" x Endcap (symmetric)	Crate #2		-
L4-238	40" x 12.8125" w/2 Tracks	C2	13	D-C
L4-239	40" x 75" w/2 Tracks & Large Cutout	Crate #2		D-C
L4-240	40" x 12.8125" w/2 Tracks	C2	14	D-C
L4-241	40" x 75" w/2 Tracks & Large Cutout	Crate #2		D-C
L4-242	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L4-243	76" x Endcap (symmetric)	Crate #2		-
L4-244	12.8125" x Endcap (symmetric)	C2	Xbox#02	B-B
L4-245	76" x Endcap (symmetric)	Crate #2		-
L4-246	40" x 12.8125" w/2 Tracks	C2	14	D-C
L4-247	40" x 75" w/Two Tracks	Crate #2		D-C
L4-248	40" x 12.8125" w/2 Tracks	C2	14	D-C
L4-249	40" x 75" w/Two Tracks	Crate #2		D-C
L4-250	Fusion Cube 31"x 32"x 16" Deep	C3		D-B

LEVEL 5

PART NO.	DESCRIPTION	CASE NO.	SLOT NO.	LAM CODE
L5-251	M1020-75in.-cut0deg,None,None-cut0deg,CDSNone#3			-
L5-252	M1020-75in.-cut0deg,None,None-cut0deg,CDSNone#3			-
L5-253	M1020-75in.-cut0deg,None,None-cut0deg,CDSNone#3			-
L5-254	M1020-75in.-cut0deg,None,None-cut0deg,CDSNone#3			-
L5-255	M1020-63.56in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-256	M1020-61.19in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-257	M1020-96in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-258	M1020-89.63in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-259	M1020-96in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-260	M1020-49.25in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-261	M1020-63.56in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-262	M1020-49.25in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-263	M1020-96in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-264	M1020-89.63in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-265	M1020-96in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-266	M1020-61.19in.-cut0deg,CP,M1101-cut0deg,NonCrate#1301			-
L5-267	M1020-13.13in.-cut0deg,CP,M1101-cut0deg,NonCrate#1035			-
L5-268	M1020-13.13in.-cut0deg,CP,M1101-cut0deg,NonCrate#1035			-
L5-269	M1020-13.13in.-cut0deg,CP,M1101-cut0deg,NonCrate#1035			-
L5-270	M1020-13.13in.-cut0deg,CP,M1101-cut0deg,NonCrate#1035			-
L5-271	Diffuser Ceiling w/24 Lights, 89.5" x 63.5"	Crate #3		B-C
L5-272	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-273	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-274	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-275	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-276	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-277	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-278	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-279	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-280	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-281	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-282	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-283	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-284	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-285	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-286	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-287	Z308-18in.-cut0deg,CP,Z961/13-cut0deg,NoneCrate#3			-
L5-288	M1000-89.63in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-289	M1000-9.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-290	M1000-9.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-291	M1000-9.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-292	M1000-9.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-293	M1000-9.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-294	M1000-9.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-295	M1000-9.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-296	M1000-8.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-297	M1000-9.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-298	M1000-9.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-299	M1000-8.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-300	M1000-9.5in.-cut0deg,CP,Z961/8-cut0deg,NonCrate#1301			-
L5-301	CUST_Cntr 117" x 24" _4R	Crate #3		-
L5-302	Arakawa Cable System	C3	Xbox#09	-
L5-303	3-Shelf - 3/8" Plex 23" x 10"	C3	Xbox#09	-
L5-304	Cube Counter Support 54x12x5	Crate #3		D-D


LEVEL 5

PART NO.	DESCRIPTION	CASE NO.	SLOT NO.	LAM CODE
L5-305	CUST_Cntr 60" x 16" _4R			Crate #3 D-B
L5-306	Cube Counter Support 54x12x5			Crate #3 D-D
L5-307	CUST_Cntr 60" x 16" _4R			Crate #3 D-B
L5-308	Fusion Cube 12"x 14"x 6" Deep	C3		D-B
L5-309	Fusion Cube 12"x 14"x 6" Deep	C3		D-B
L5-310	Fusion Cube 12"x 14"x 6" Deep	C3		D-B
L5-311	Fusion Cube 12"x 14"x 6" Deep	C3		D-B
L5-312	Fusion Cube 12"x 14"x 6" Deep	C3		D-B
L5-313	Fusion Cube 12"x 14"x 6" Deep	C3		D-B
L5-314	Sintra Graphic Panels 18x24	C3	Xbox#09	-


PACKING/UNPACKING PARTS
LOCATION CHART 3

PACKING DIAGRAMS

TUB #1

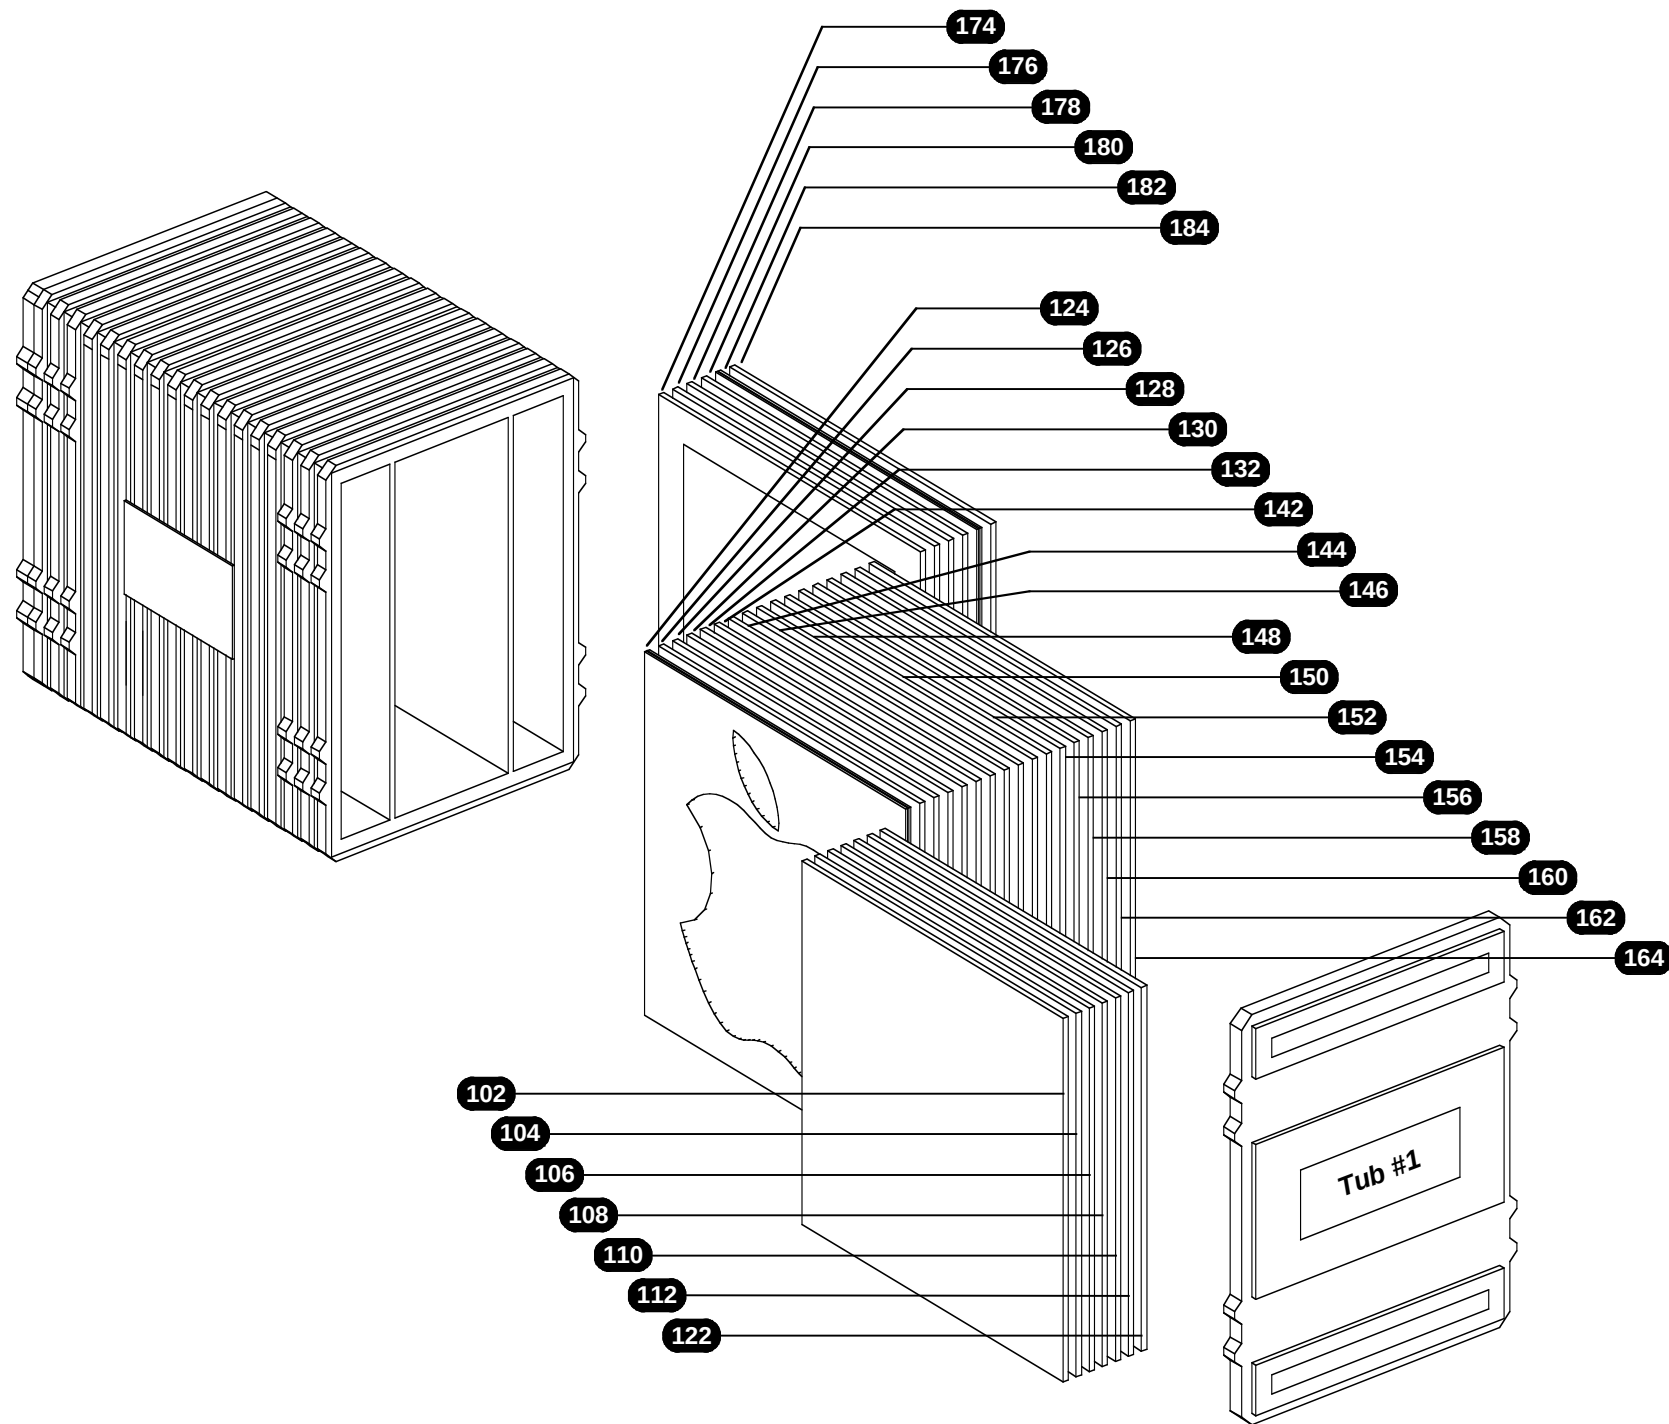


EXPLODED VIEW

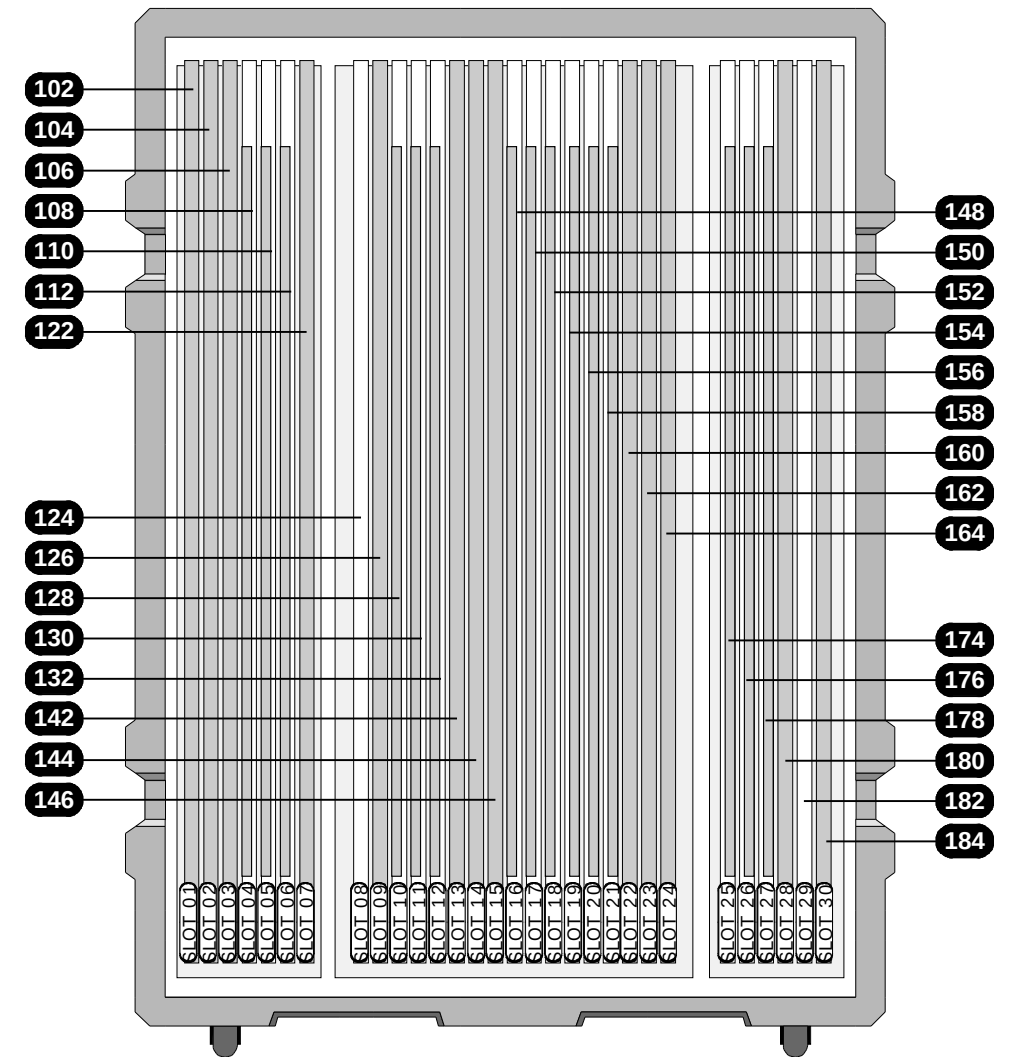


END VIEW

PACKING DIAGRAMS
TUB #2

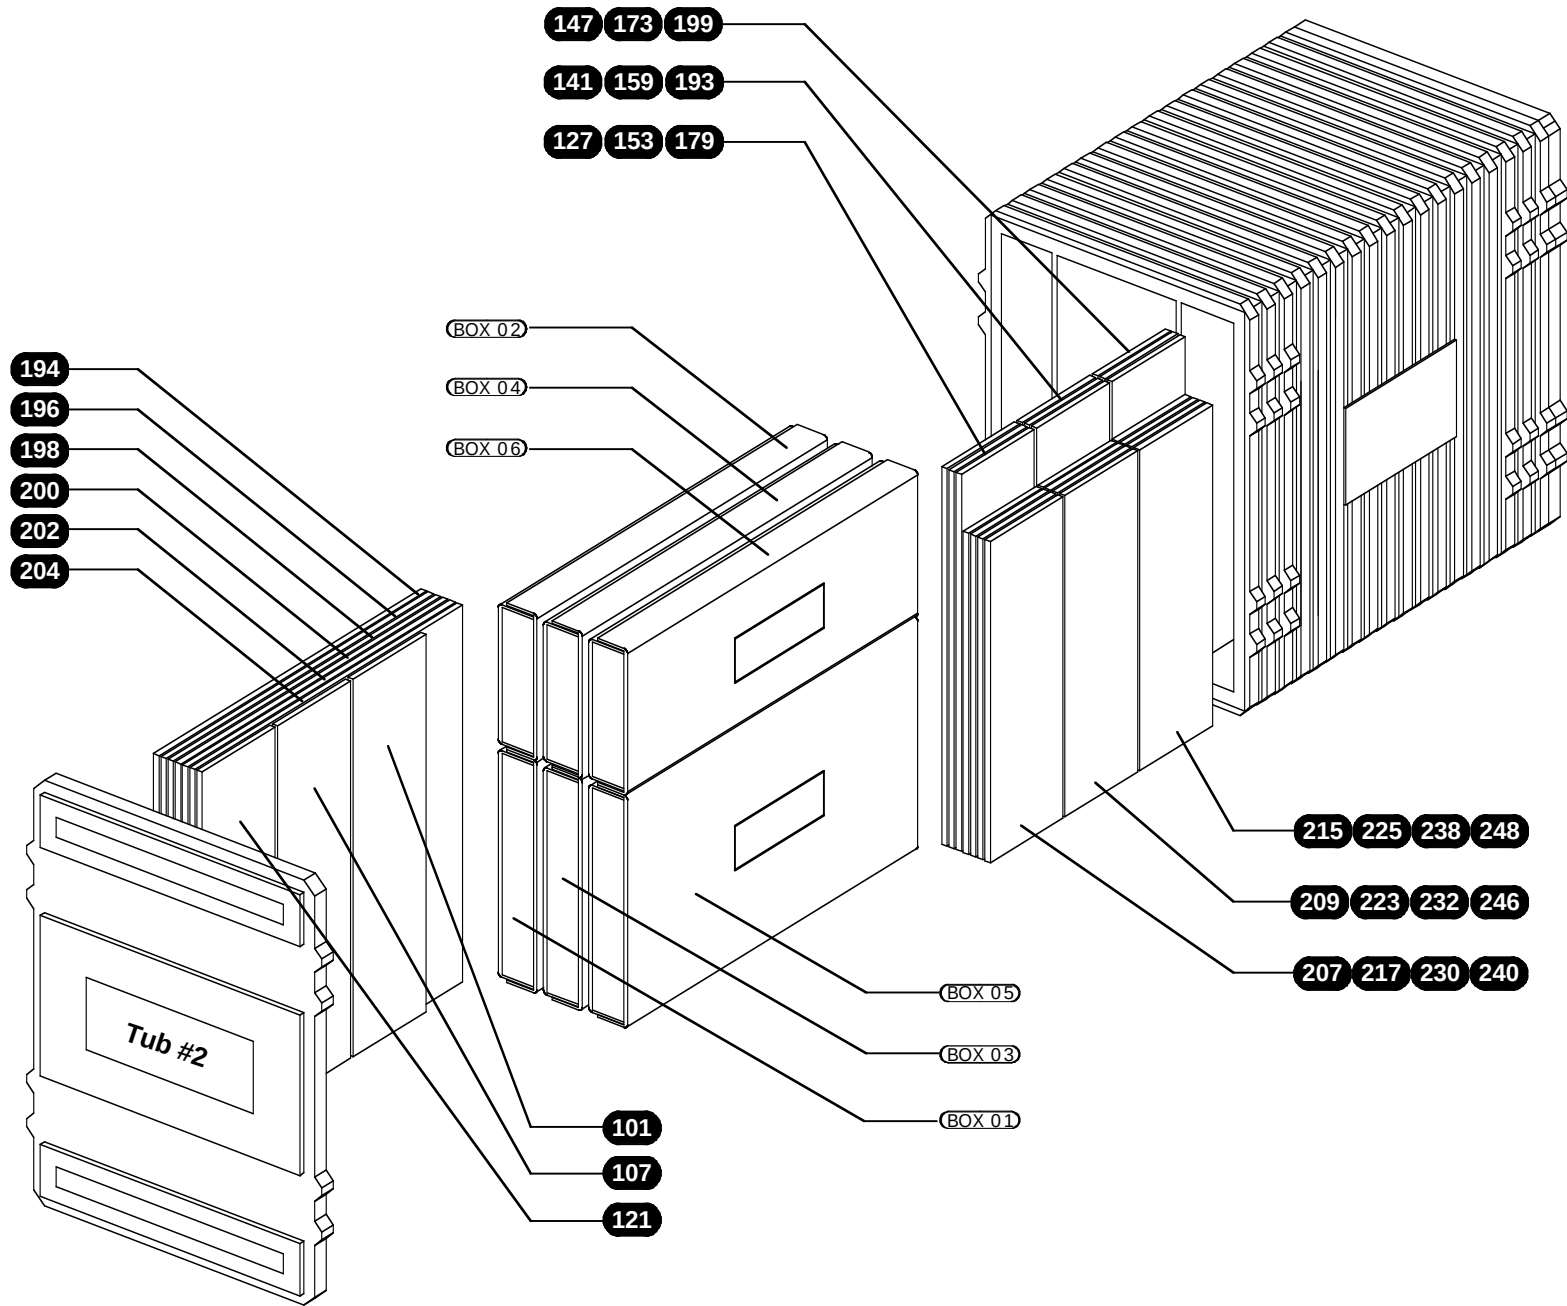


EXPLODED VIEW

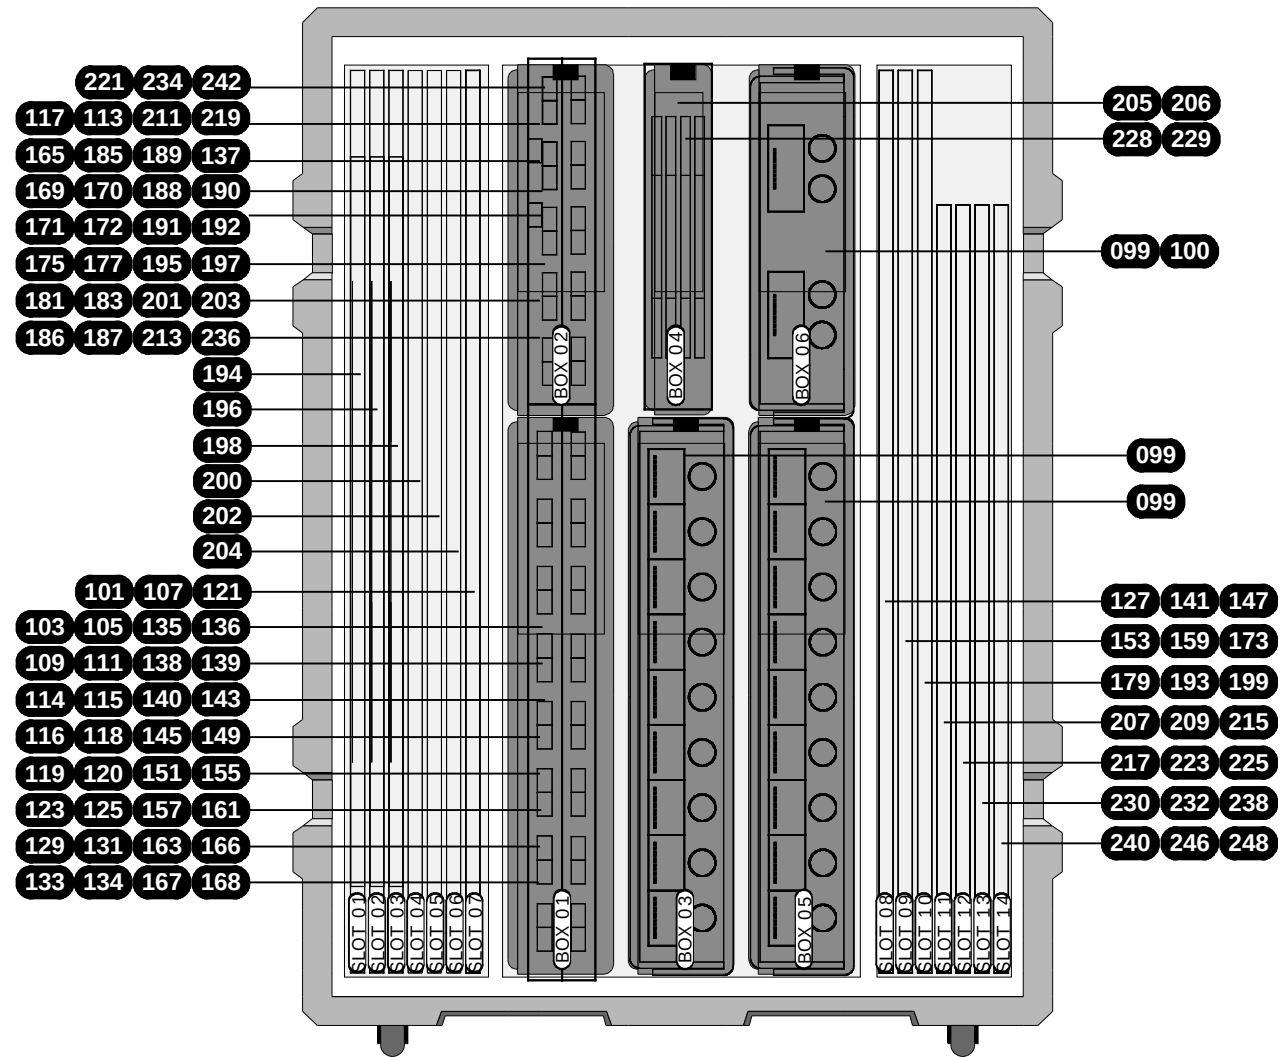


END VIEW

PACKING DIAGRAMS

TUB #3

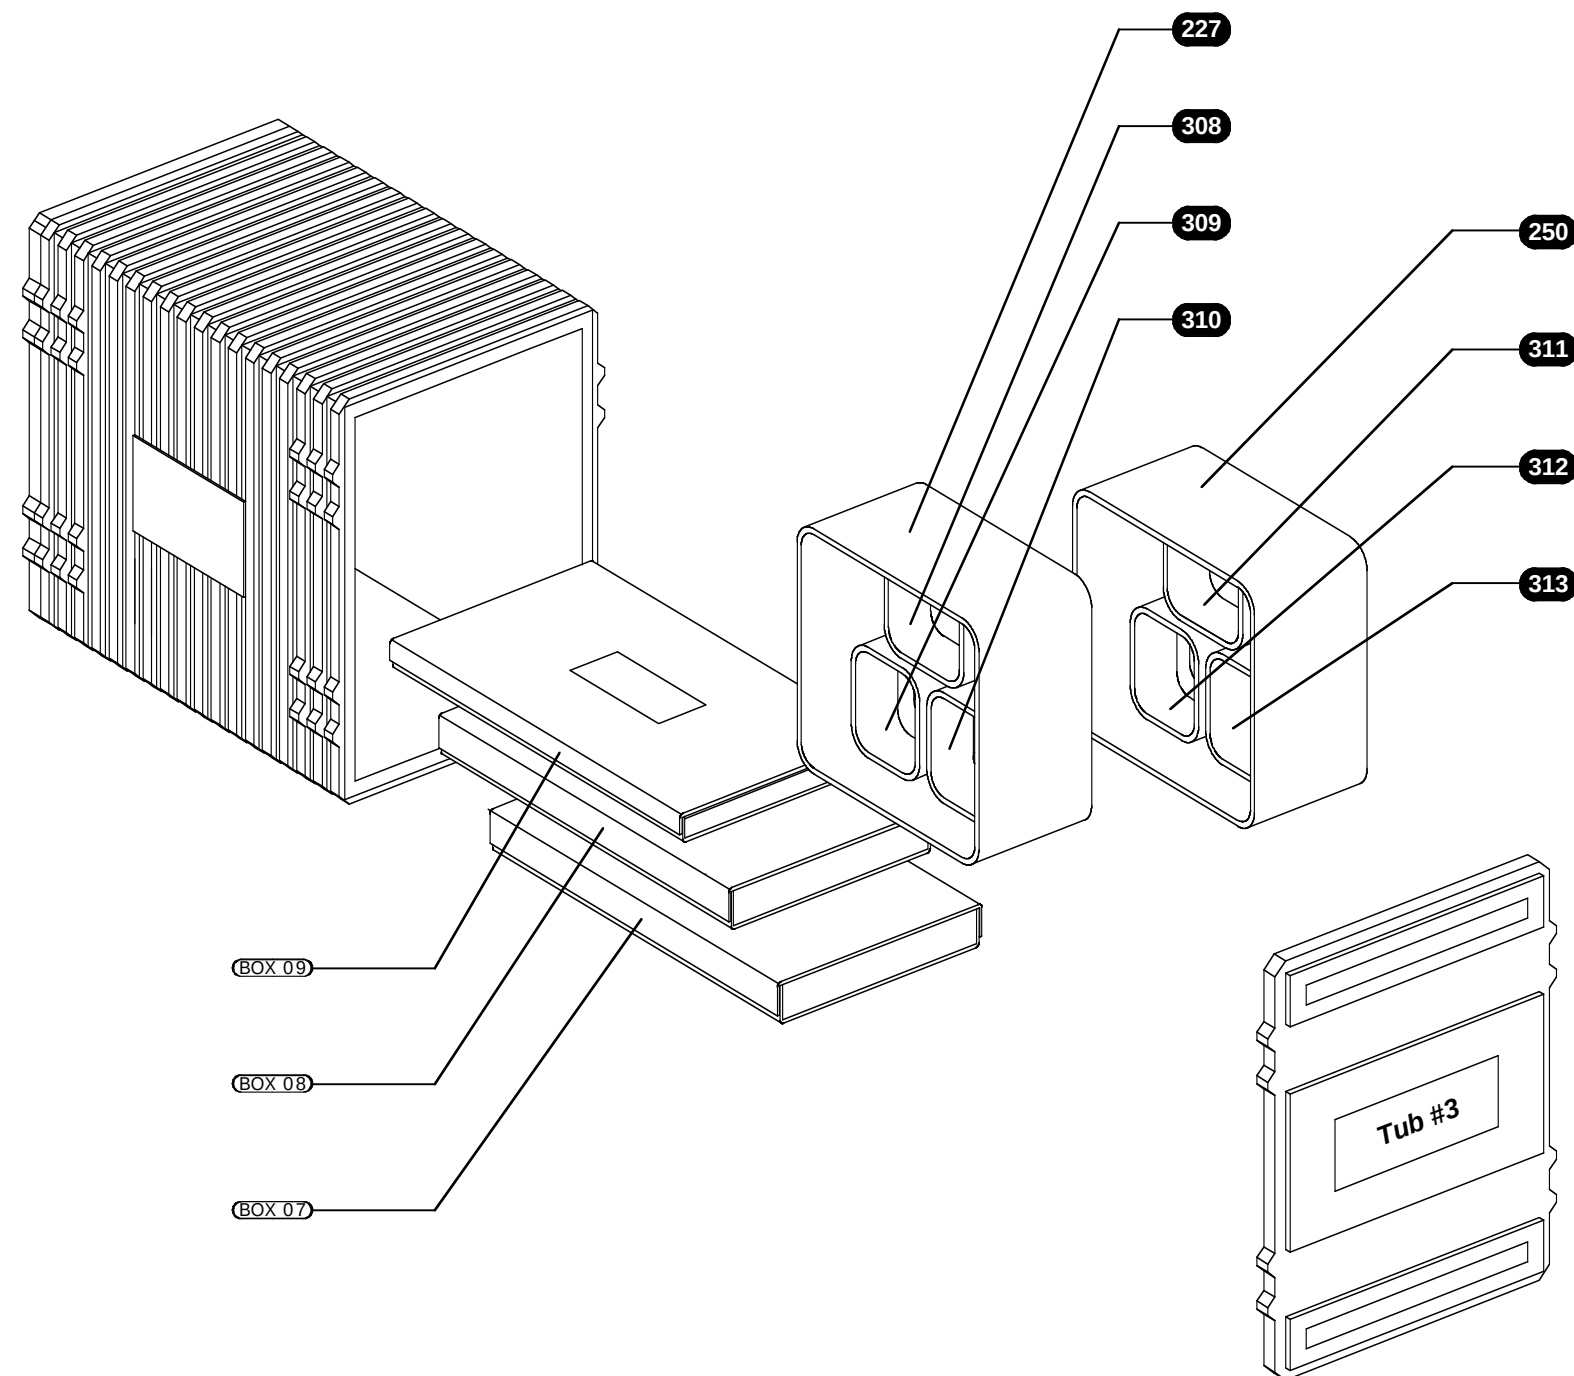


EXPLODED VIEW

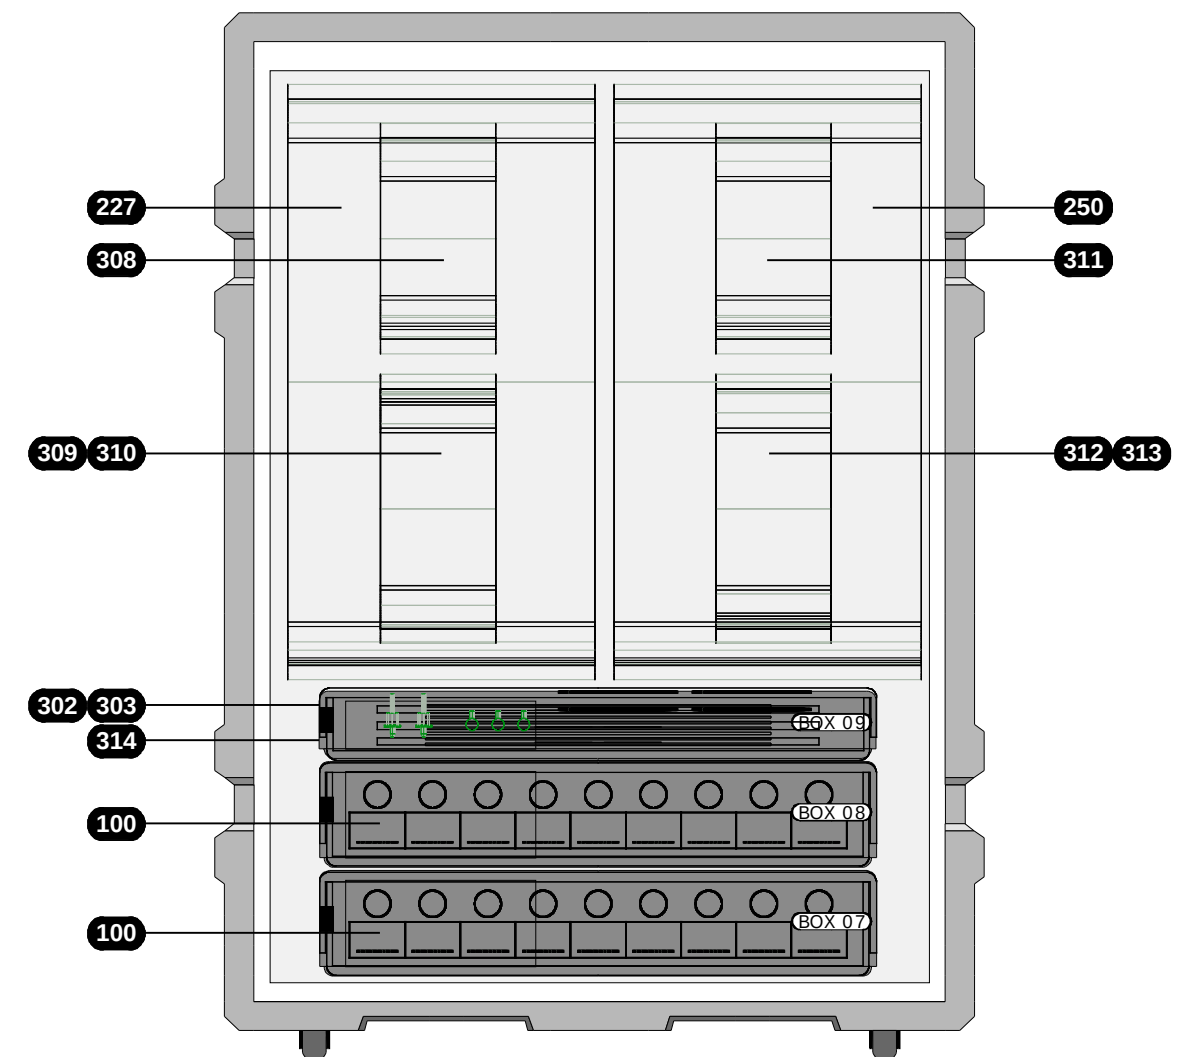


END VIEW

PACKING DIAGRAMS

CRATE #1

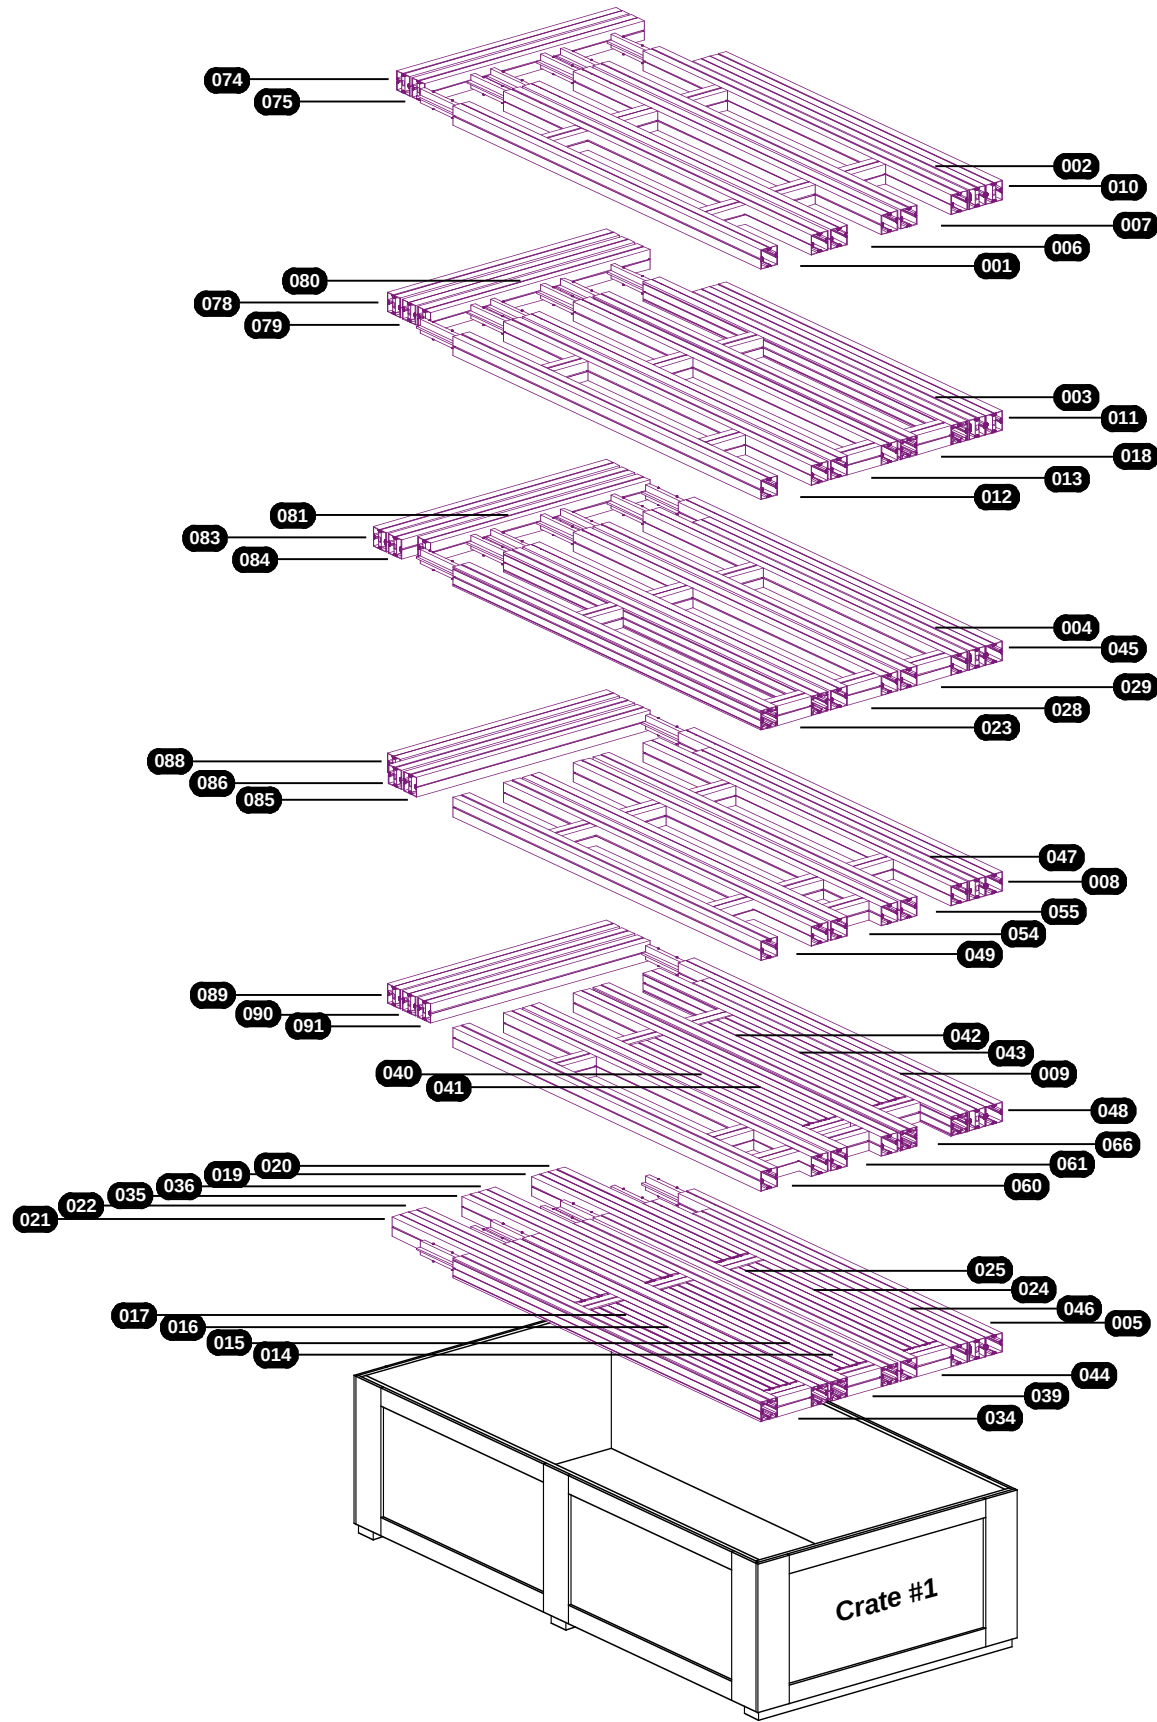


EXPLODED VIEW

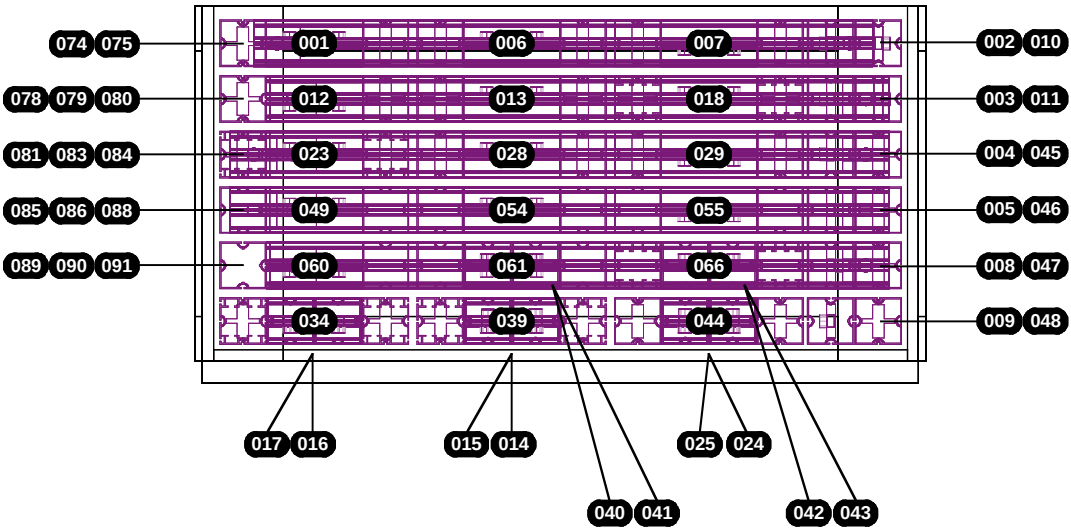


END VIEW

PACKING DIAGRAMS

CRATE #2

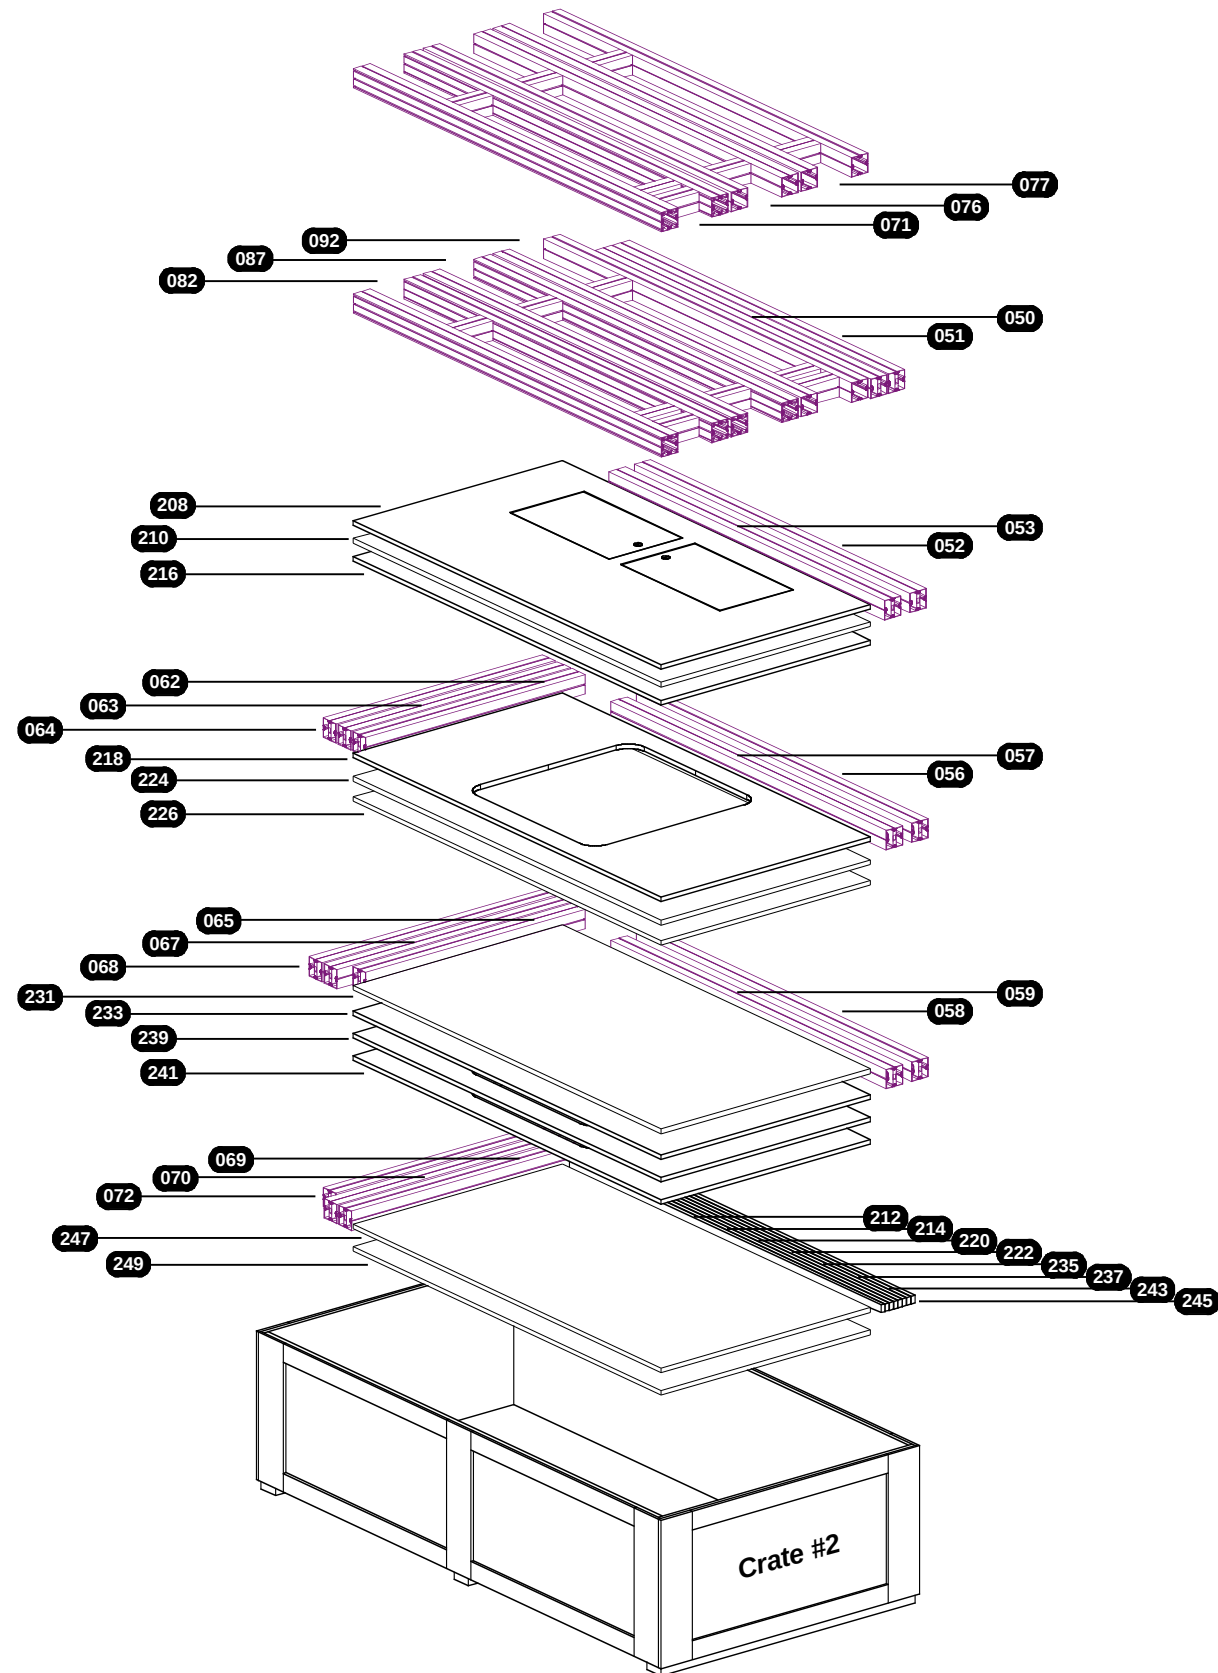


EXPLODED VIEW

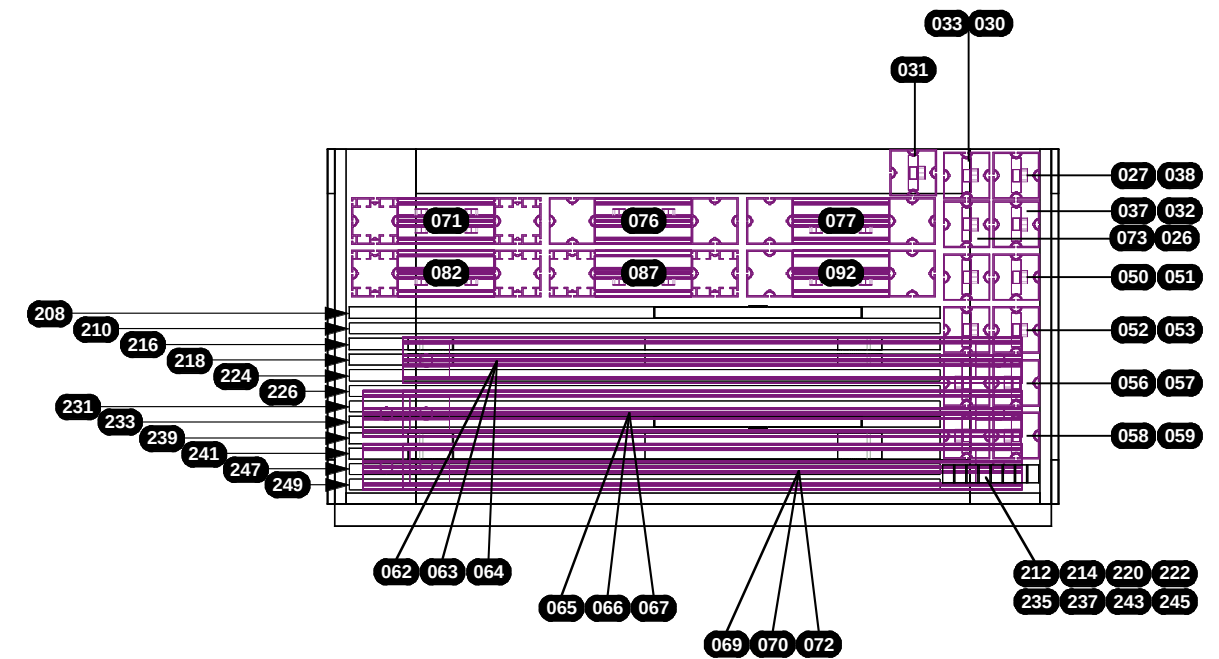

END VIEW

PACKING DIAGRAMS

CRATE #3

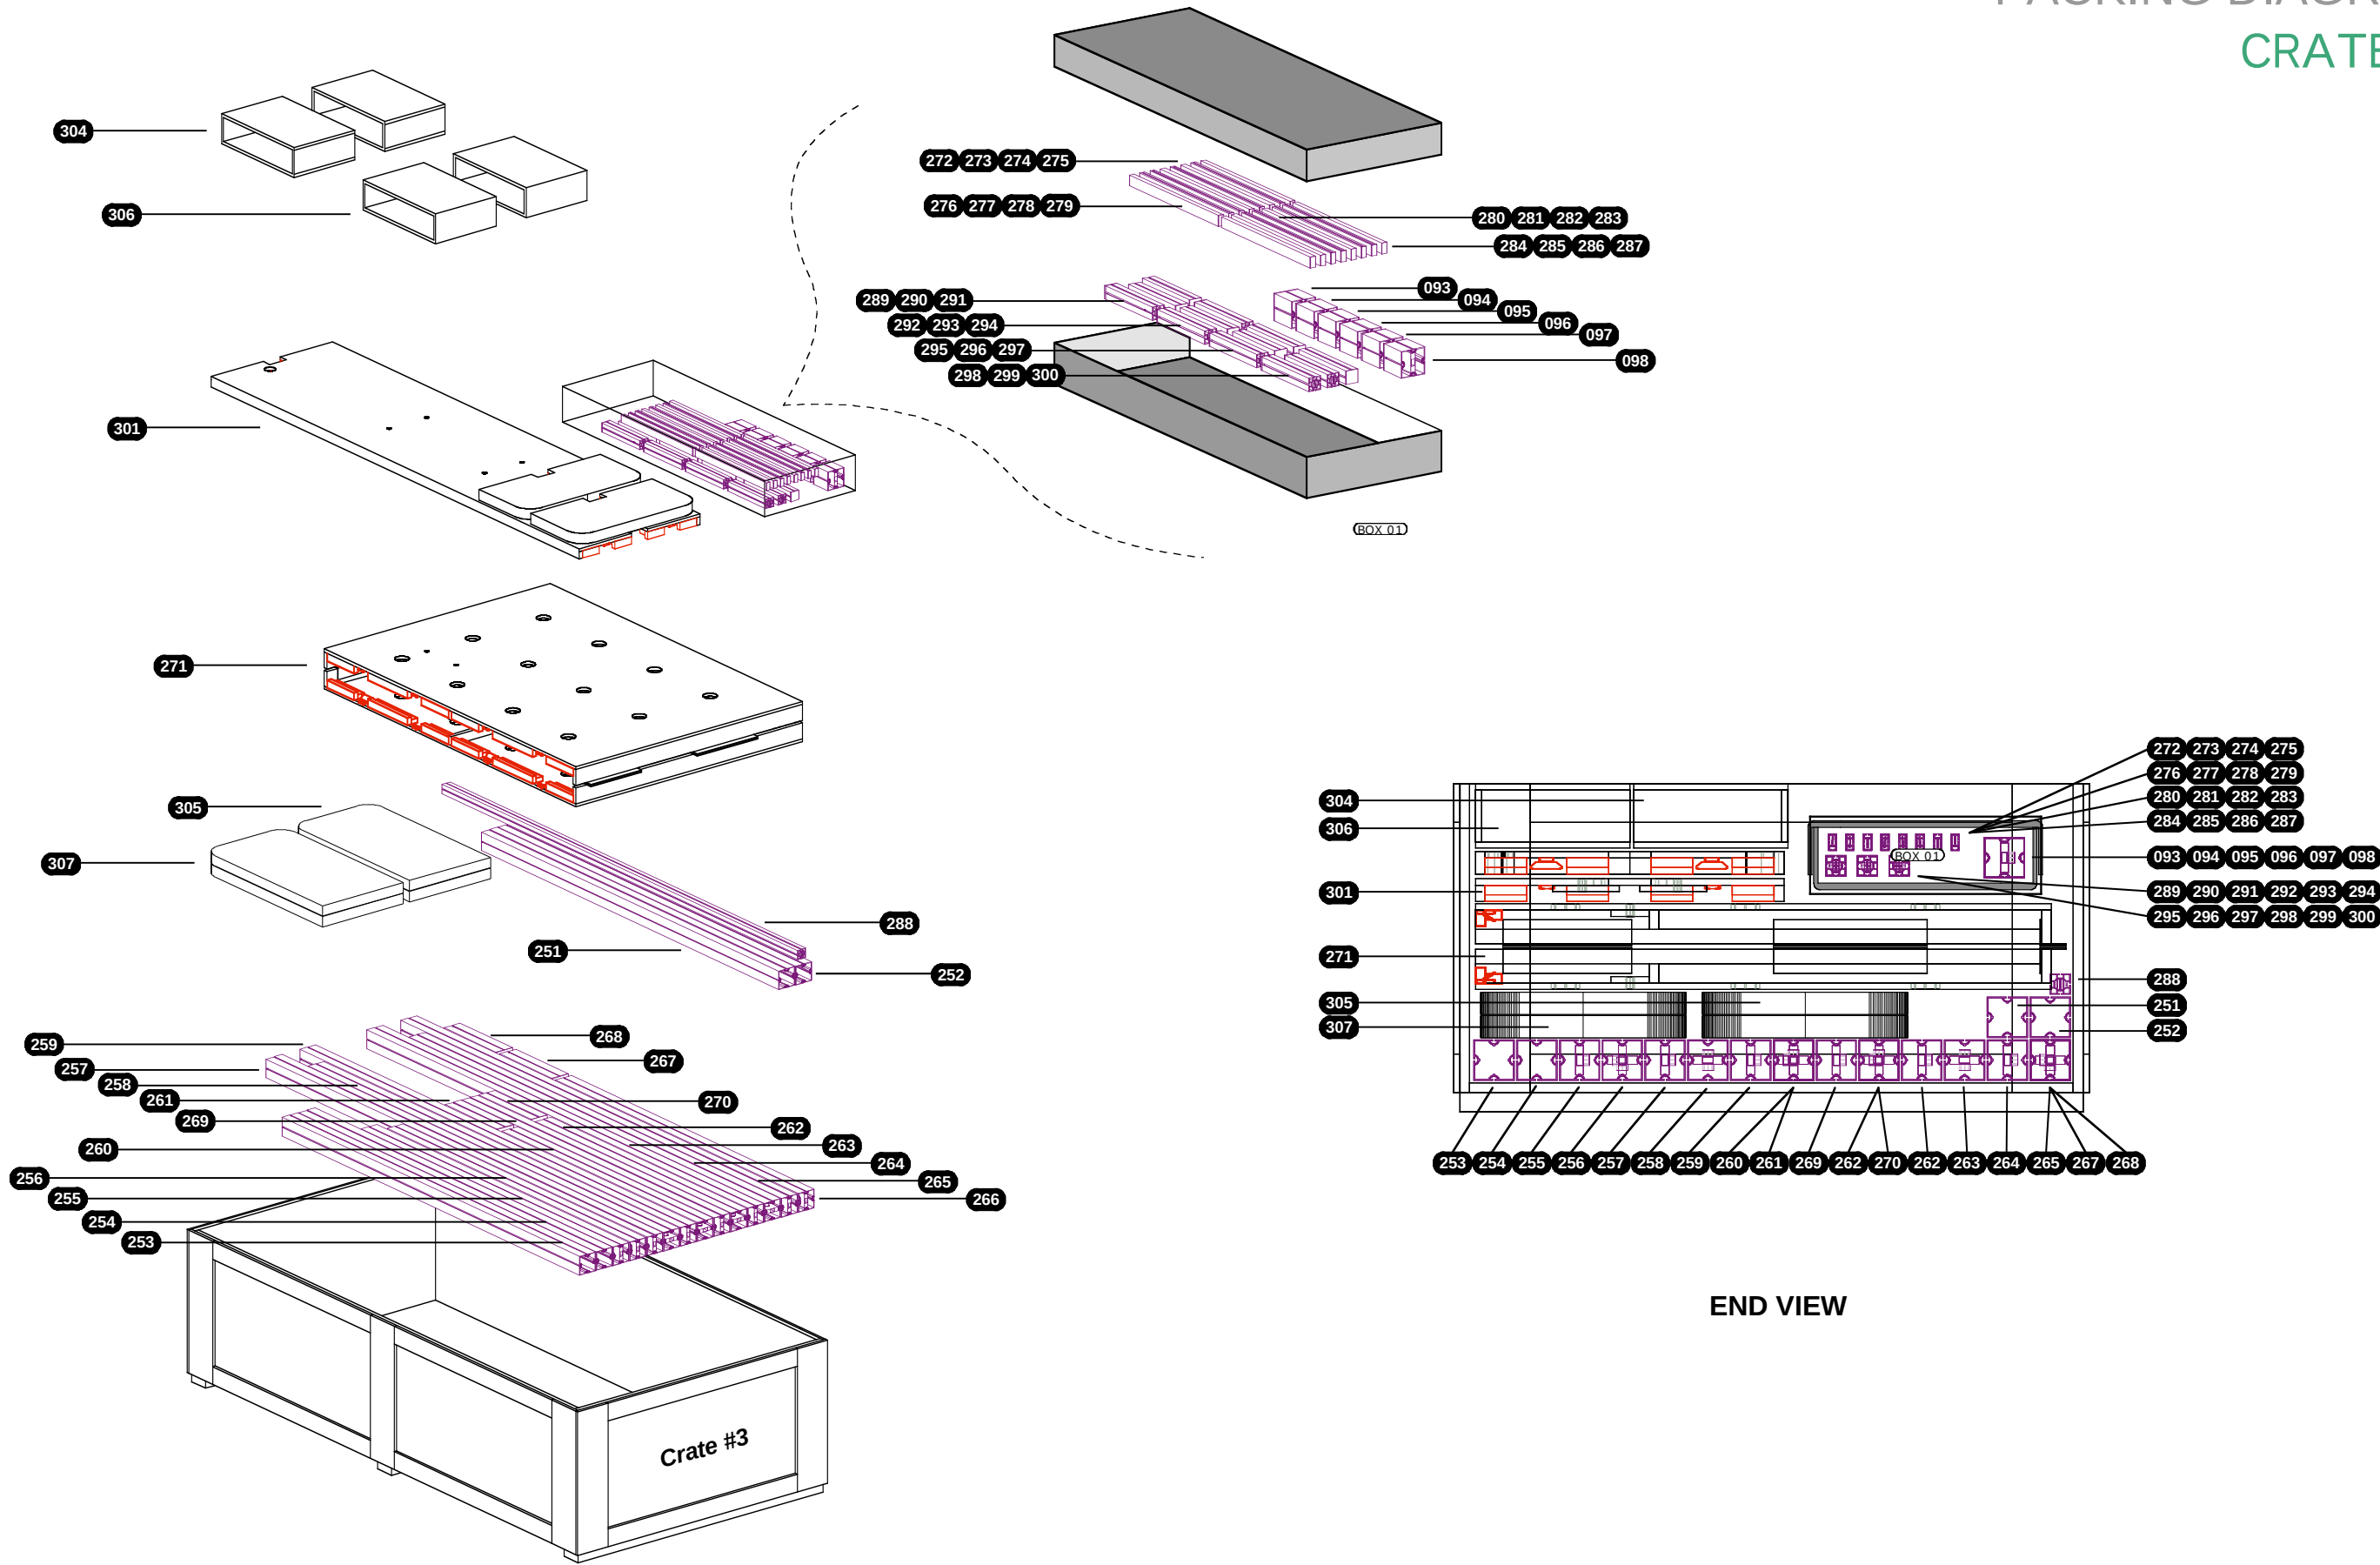

END VIEW