





ASSEMBLY INSTRUCTIONS


CLIENT:
ORDER:
INSTR: **AL8-INSTR**

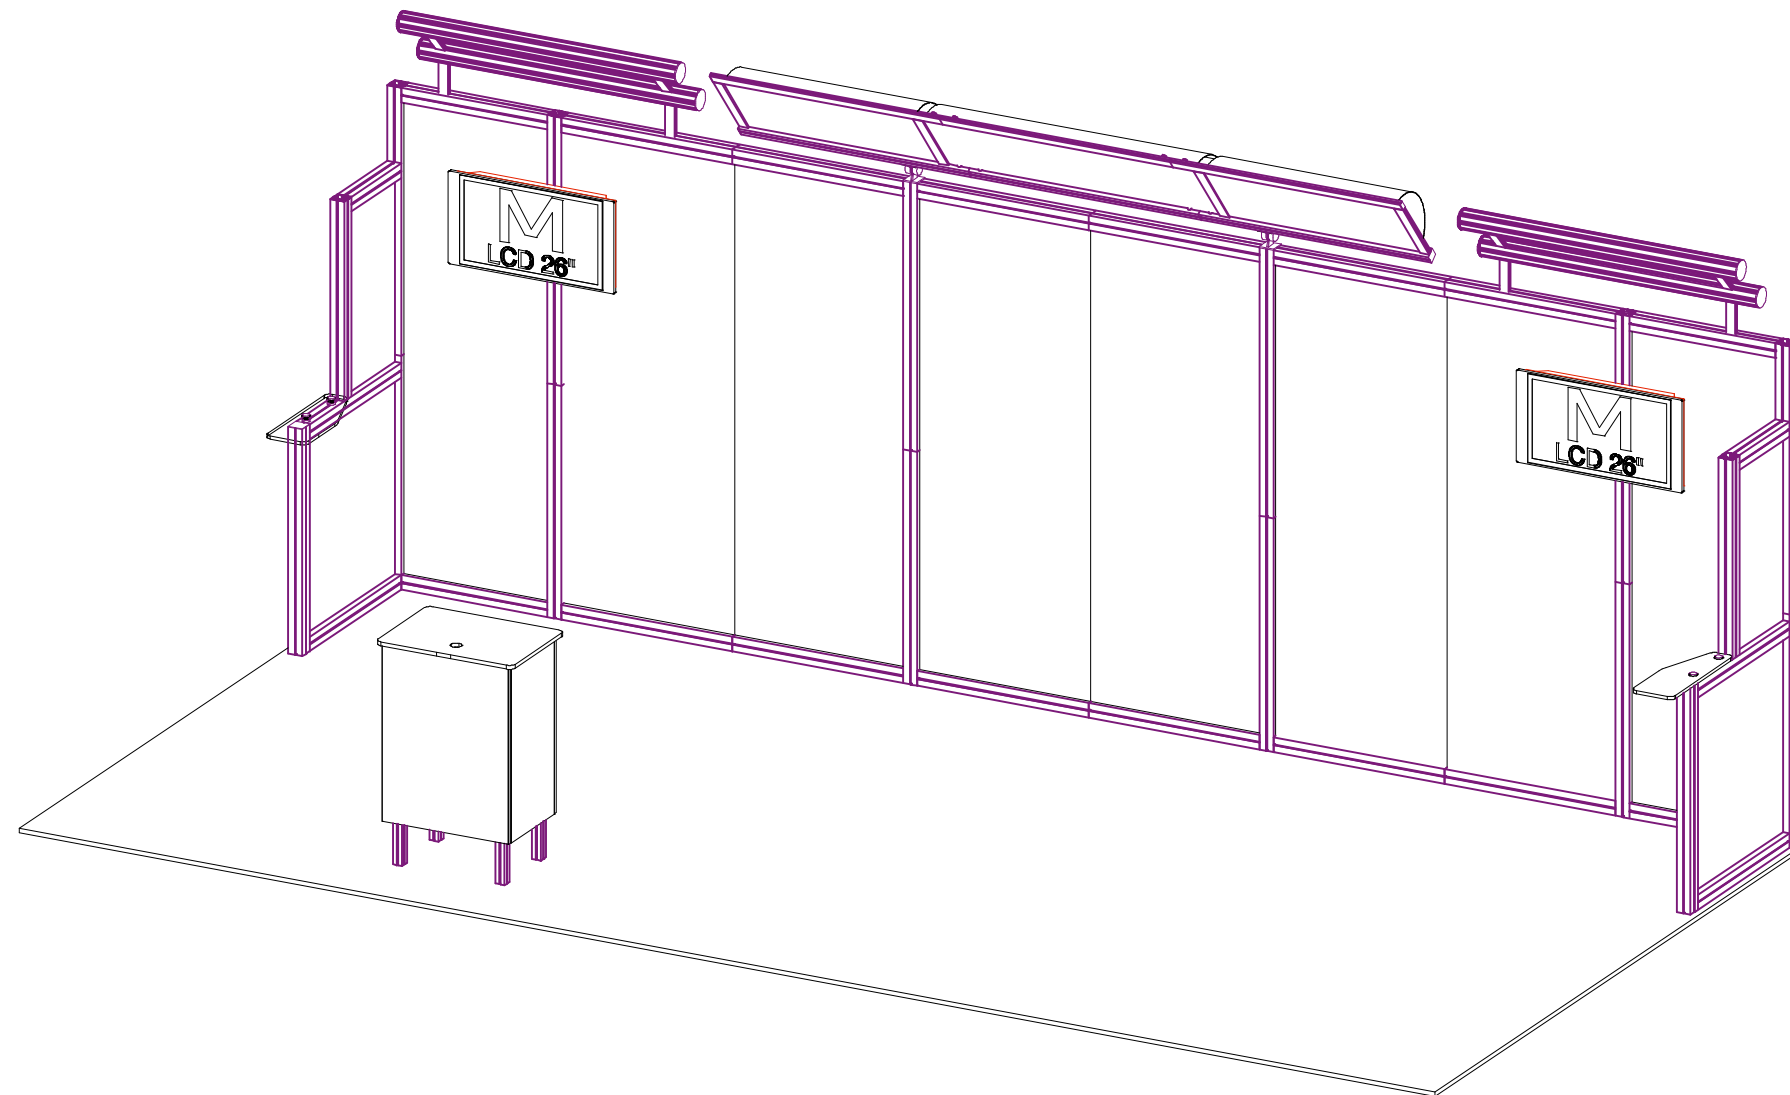


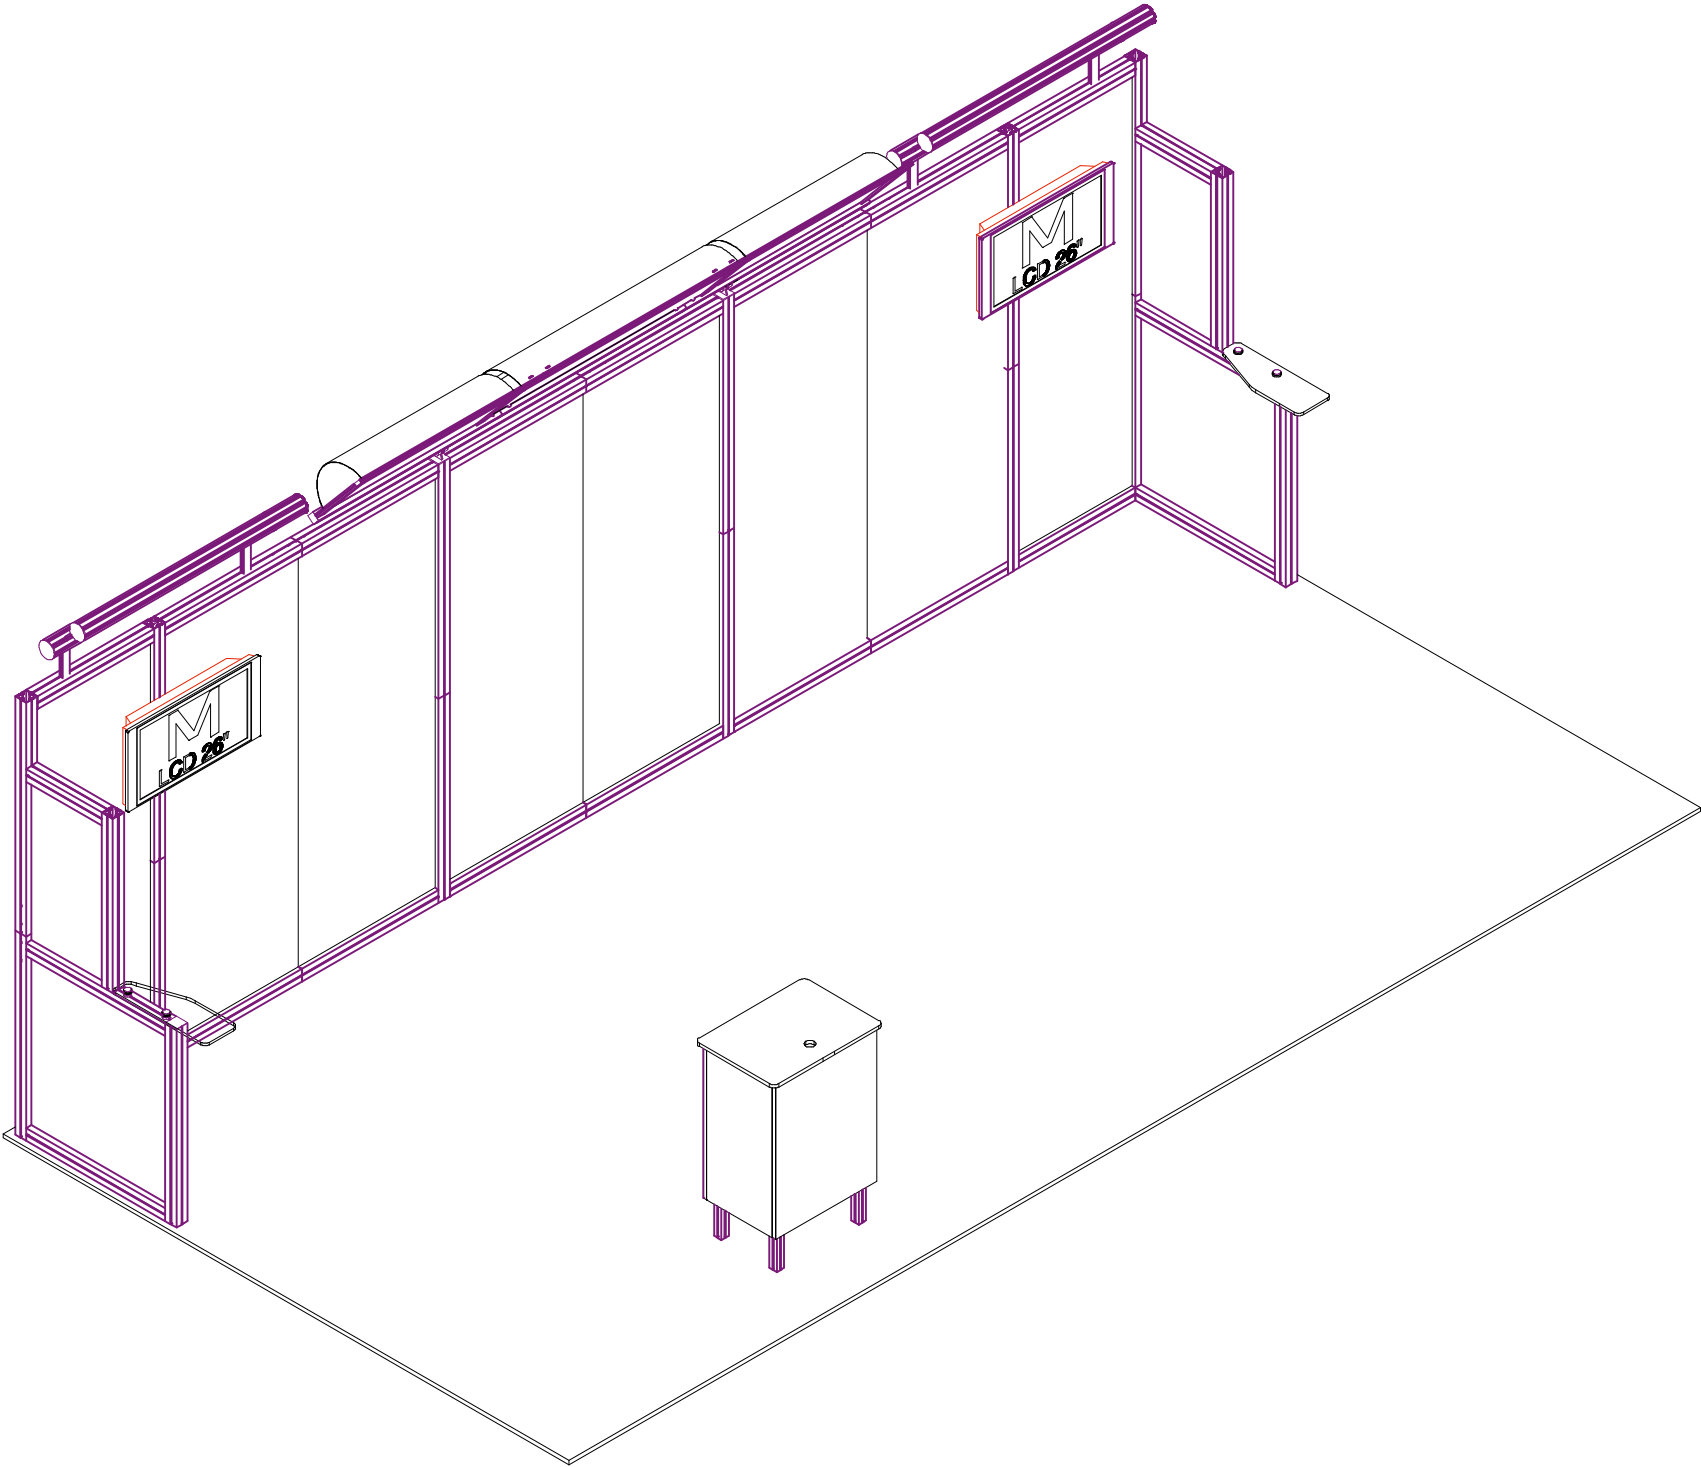

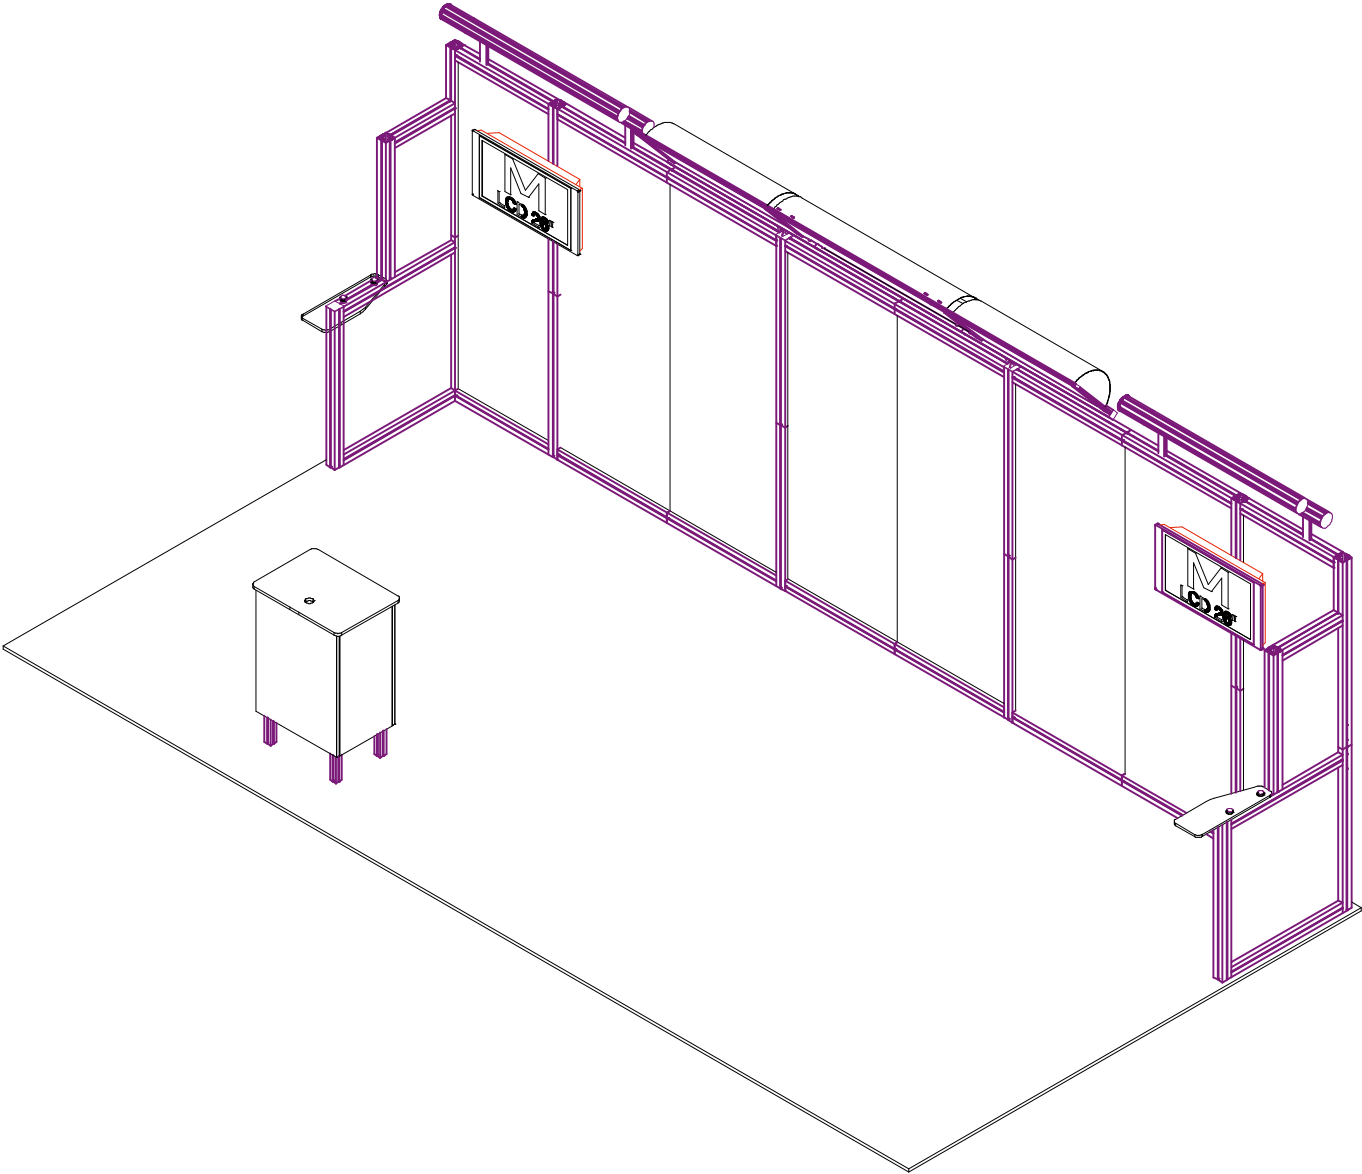

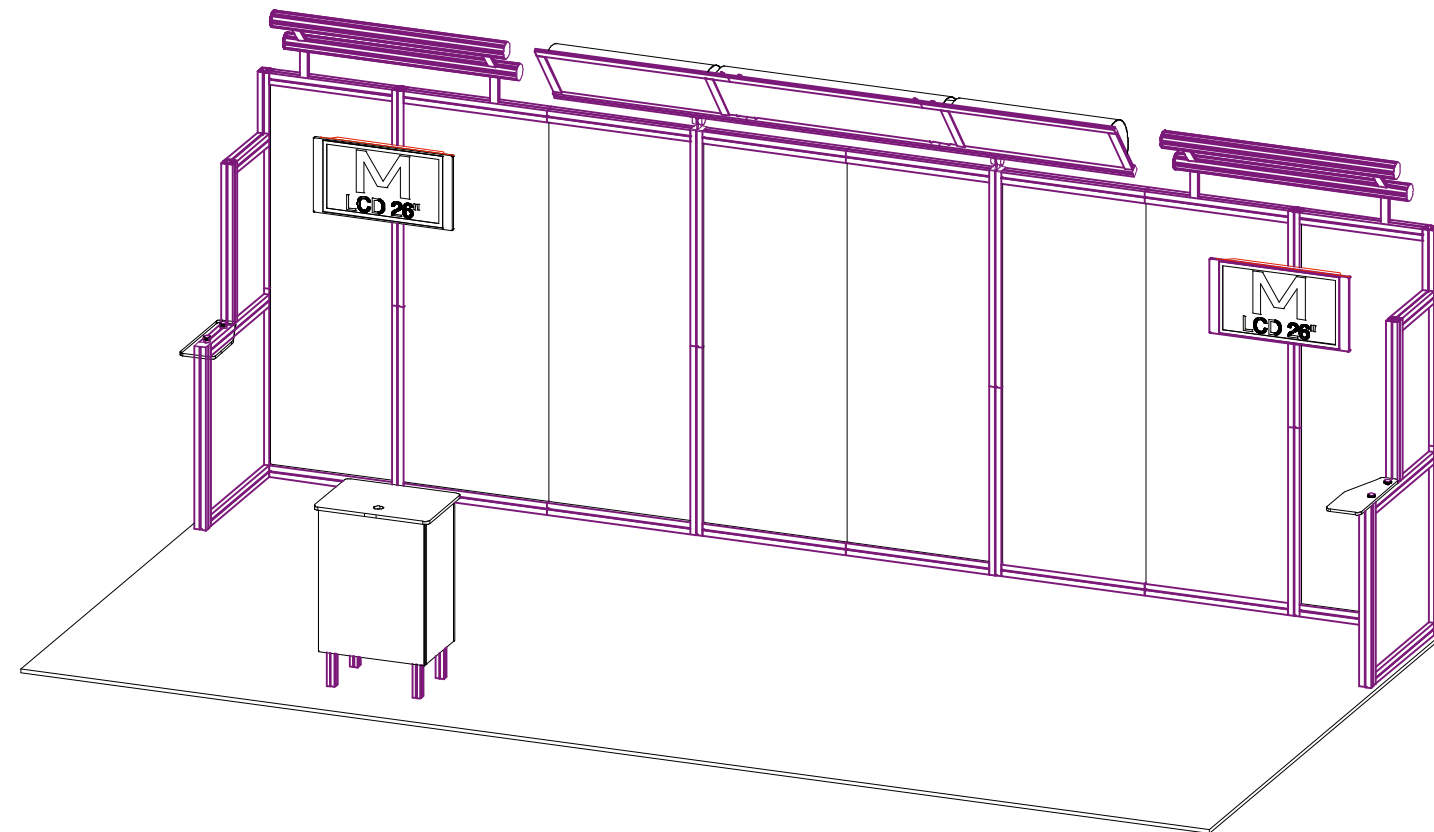


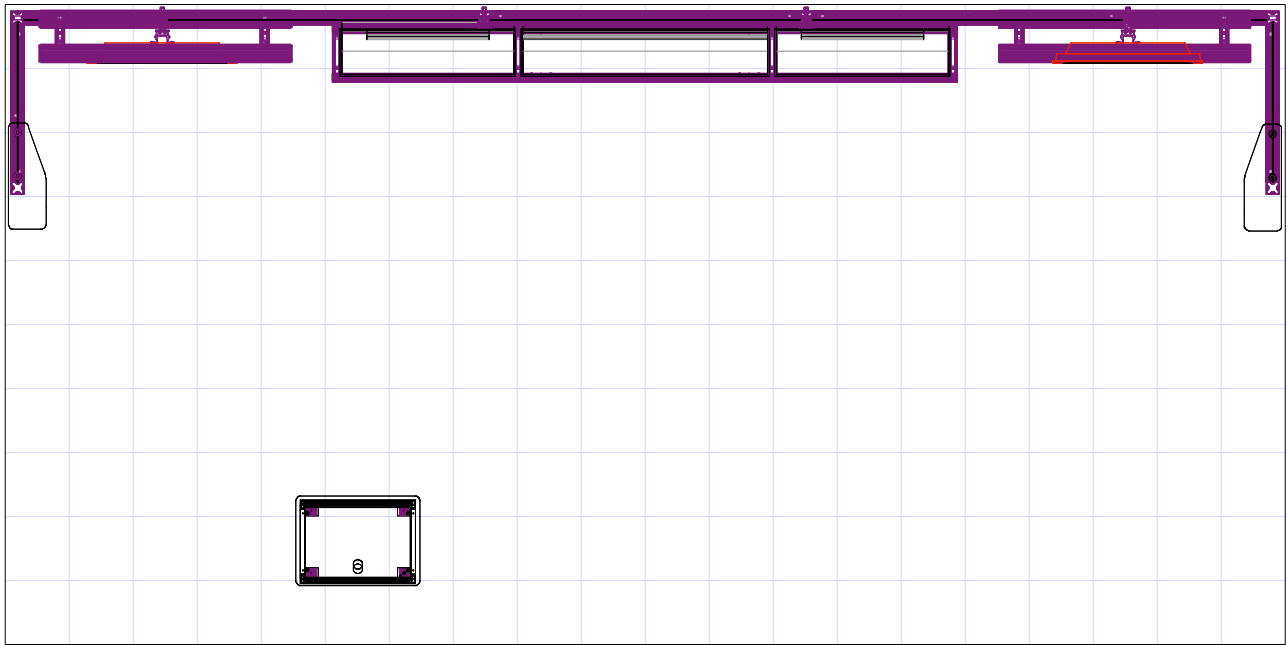

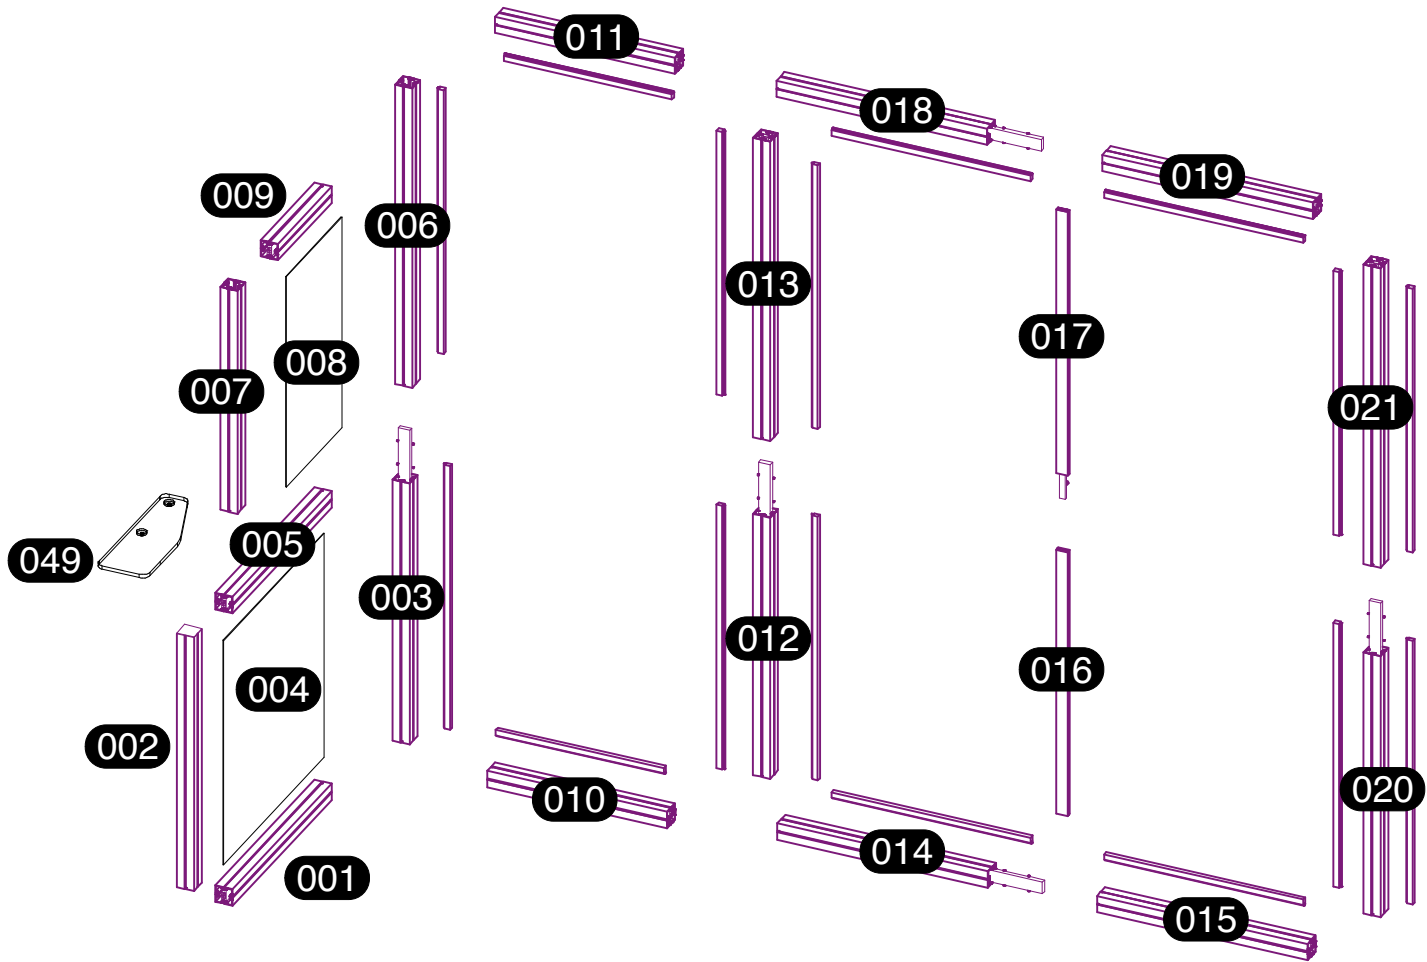


SIDE SHELF



Locate and separate the hammerhead bolts from the 2 caps and insert into upper groove (detail 1). Place shelf over bolts (detail 2). Screw caps back onto bolts as shown (detail 3).

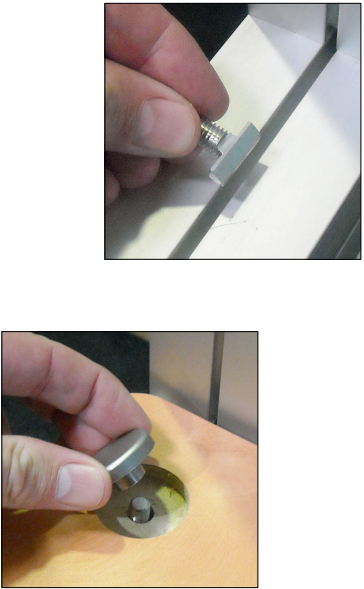


Repeat for right shelf on right side of unit.

CONNECTING OCTANORM

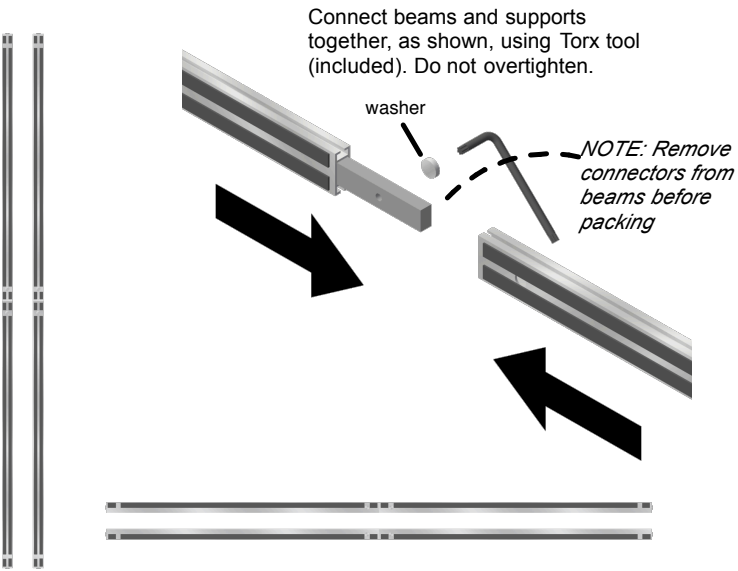


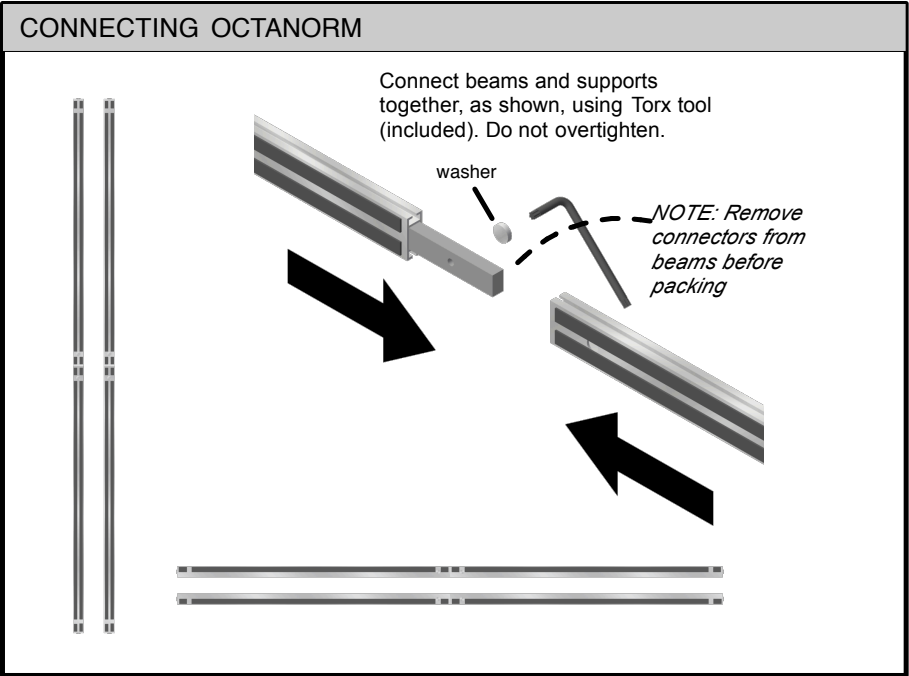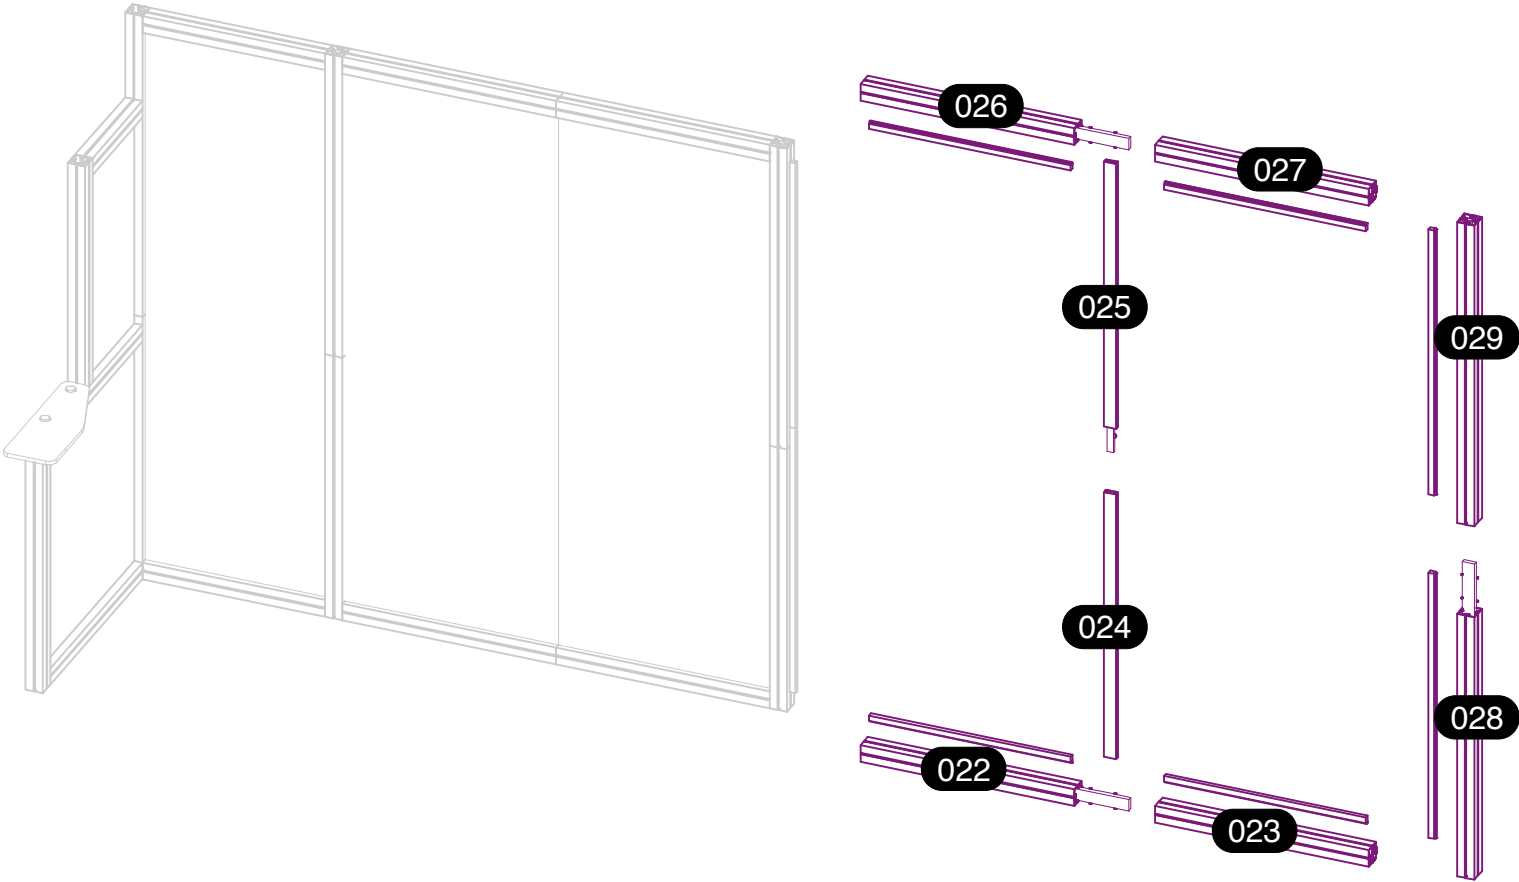

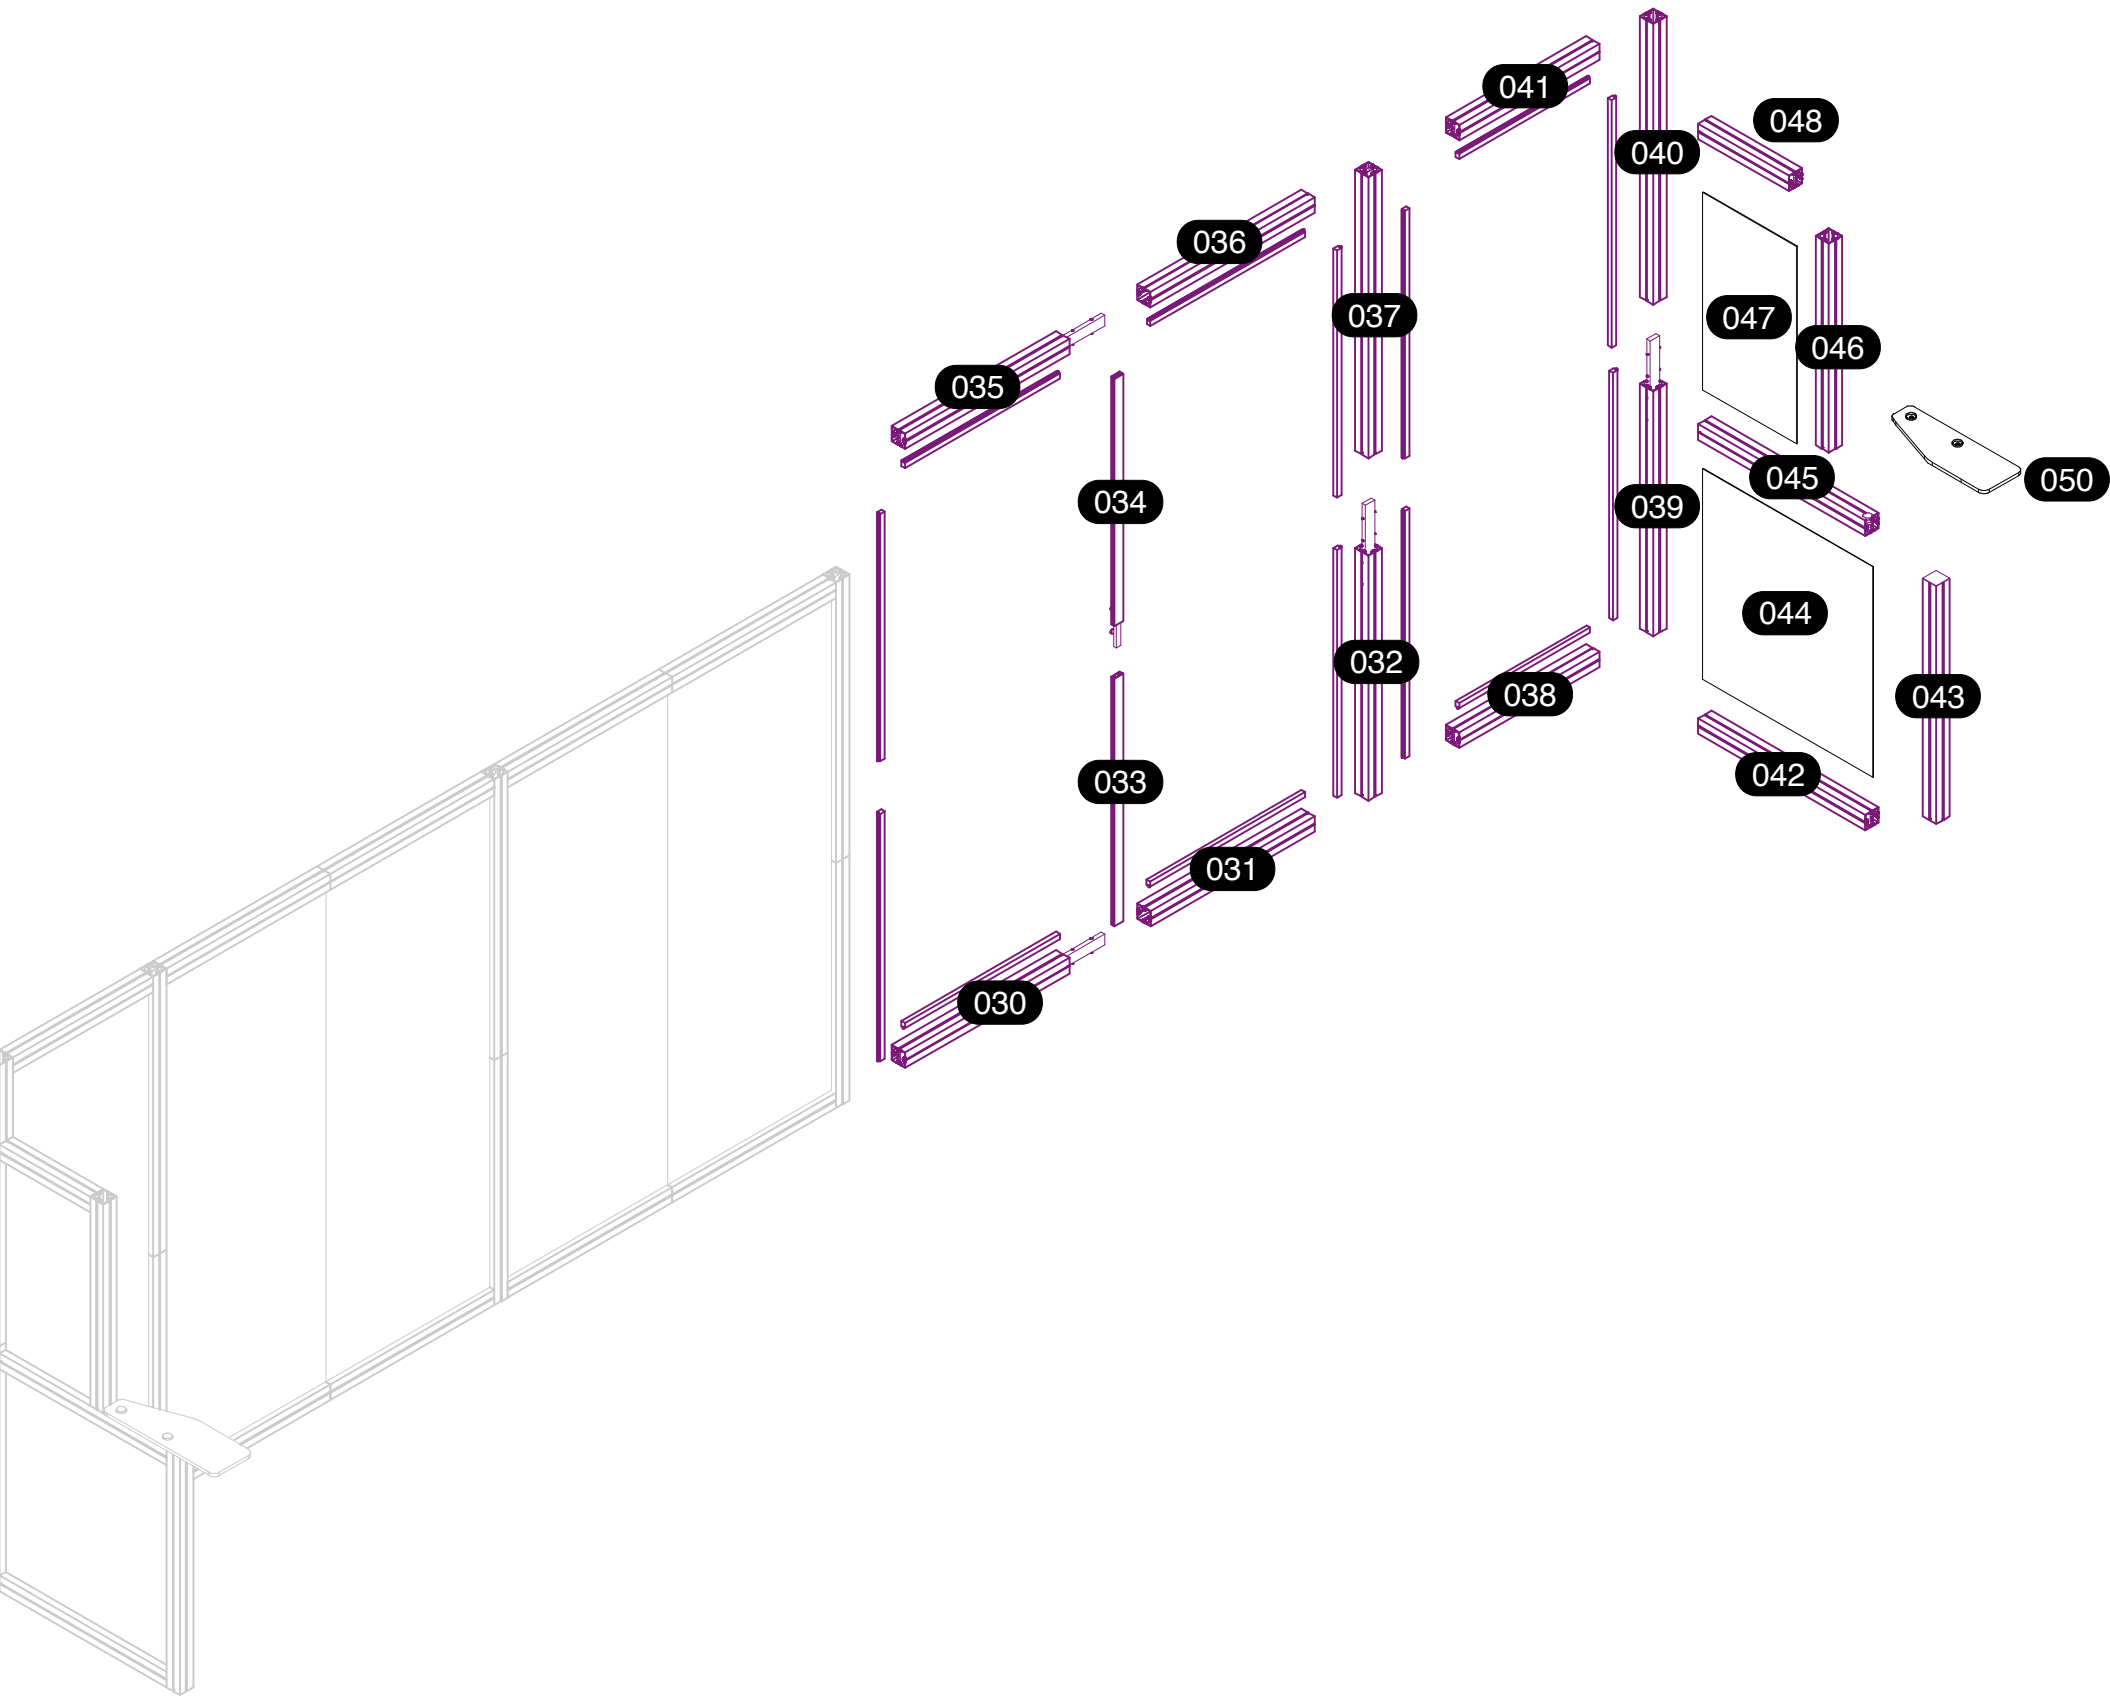


SIDE SHELF

Locate and separate the hammerhead bolts from the 2 caps and insert into upper groove (detail 1). Place shelf over bolts (detail 2). Screw caps back onto bolts as shown (detail 3).

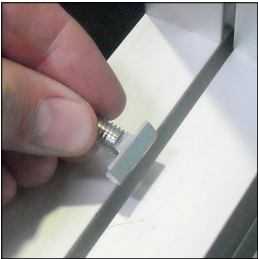

Repeat for right shelf on right side of unit.

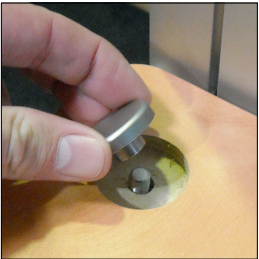

CONNECTING OCTANORM

Connect beams and supports together, as shown, using Torx tool (included). Do not overtighten.

