




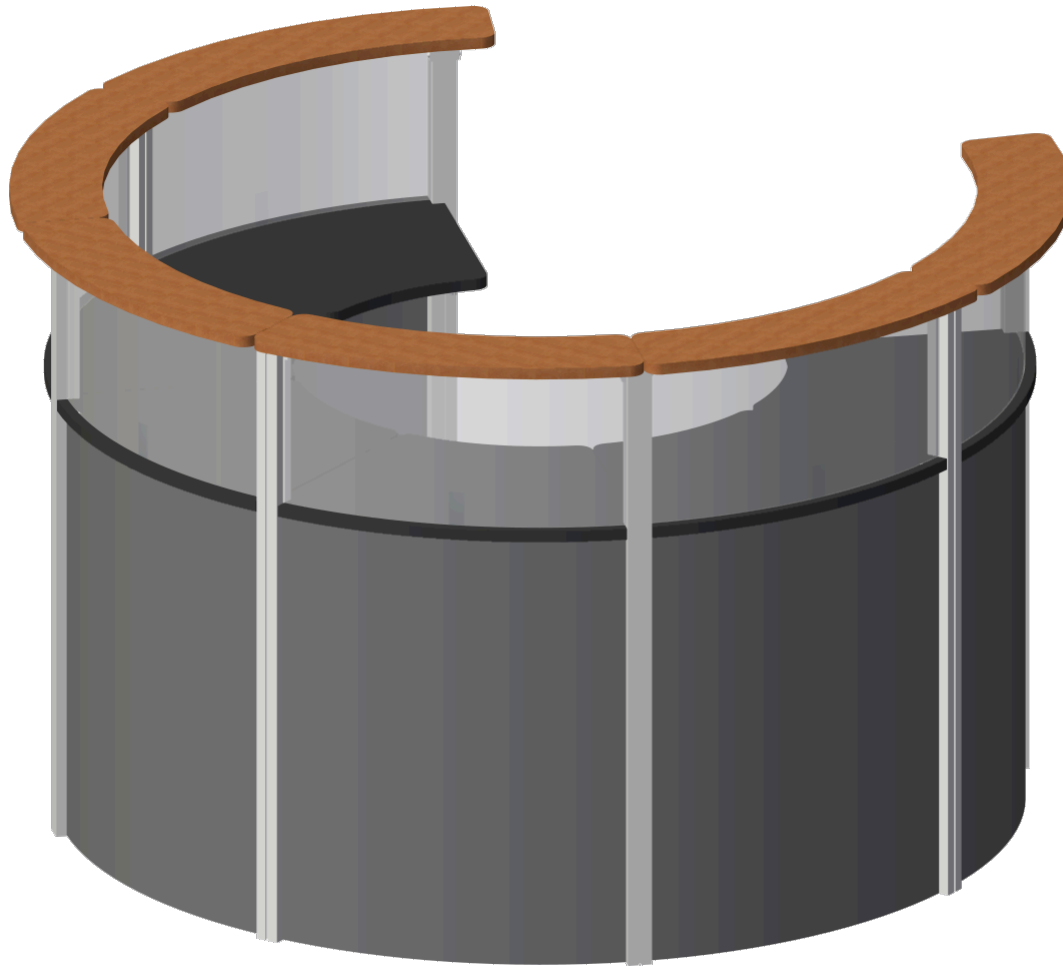

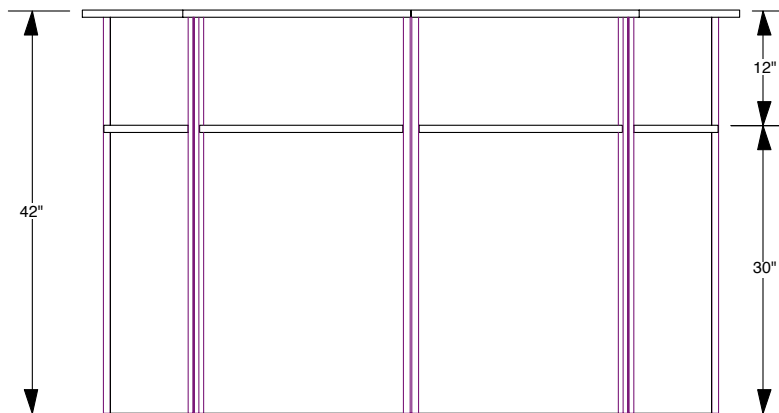

FRONT VIEW

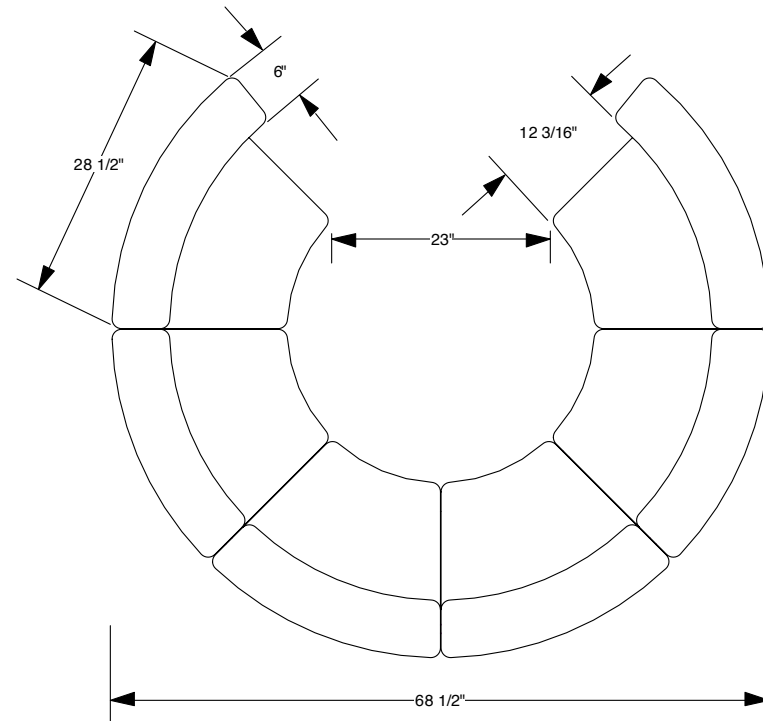


TOP VIEW

THIS INSTRUCTION WILL WORK FOR TRITON LINE C1.2, C1.3, C1.4, C1.5 RECEPTION DESKS. THE C1.6 RECEPTION DESK IS SHOWN IN THIS INSTRUCTIONS. YOU WILL HAVE LESS PARTS AND PIECES FOR THE OTHER SETUPS.

NOT TO SCALE

ALUMINUM PROFILES

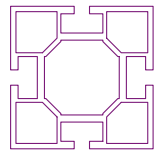

QTY 1: M1000.01 - 41-1/4"
COUNTER LEFT LEG

001

QTY 5: M1000.01 - 41-1/4"
COUNTER EXTENSION LEG

002


QTY 1: M1000.01 - 41-1/4"
COUNTER RIGHT LEG

003


QTY 4: M1000.01 - 29-1/4"
COUNTER BACK LEG

004


COUNTER TOP

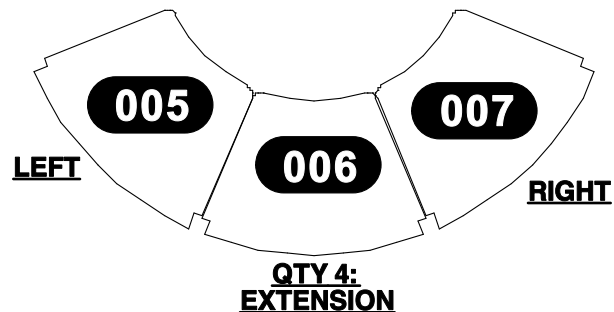


COUNTER TOP

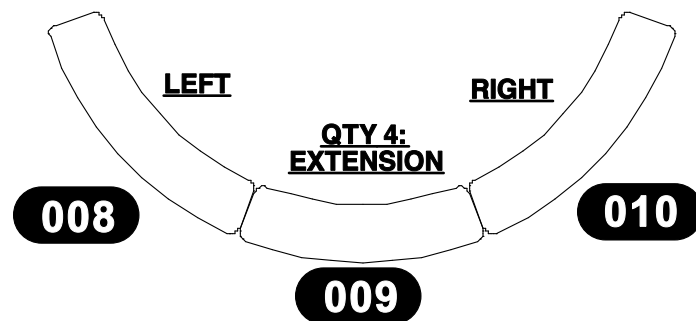

HARDWARE

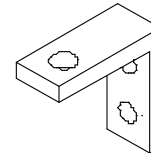

QTY 34: LEG L-BRACKET
(connected to leg)

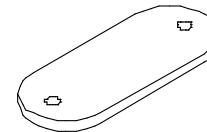

QTY 3: JOINING PLATE




QTY 40: 5/16-18 3/4" SPADE HEAD SCREW

PANELS

QTY: 6


QTY: 6

1. Attach long counter legs #001 and #002 to left counter top using (1) spade head screw per leg.
2. Attach short counter leg #003 to left counter top with (2) spade head screws.
3. Connect joining plate underneath of counter top with (1) spade head screw. Do not firmly tighten it.

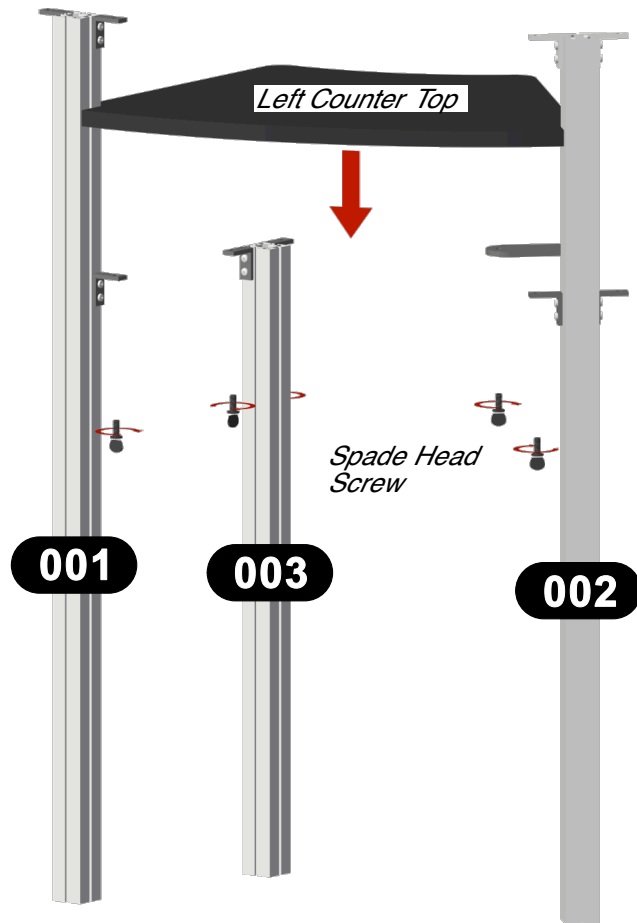


FRONT VIEW

1. Attach legs #002 and #003 to extension counter top using (1) spade head screw per leg.
2. Connect extension assembly to left assembly with (2) spade head screw. One on leg the second one on plate.
3. Repeat extension assembly by adding joining plate on every other extension assembly instead of #003 leg and connection procedures until reaching right side counter top.

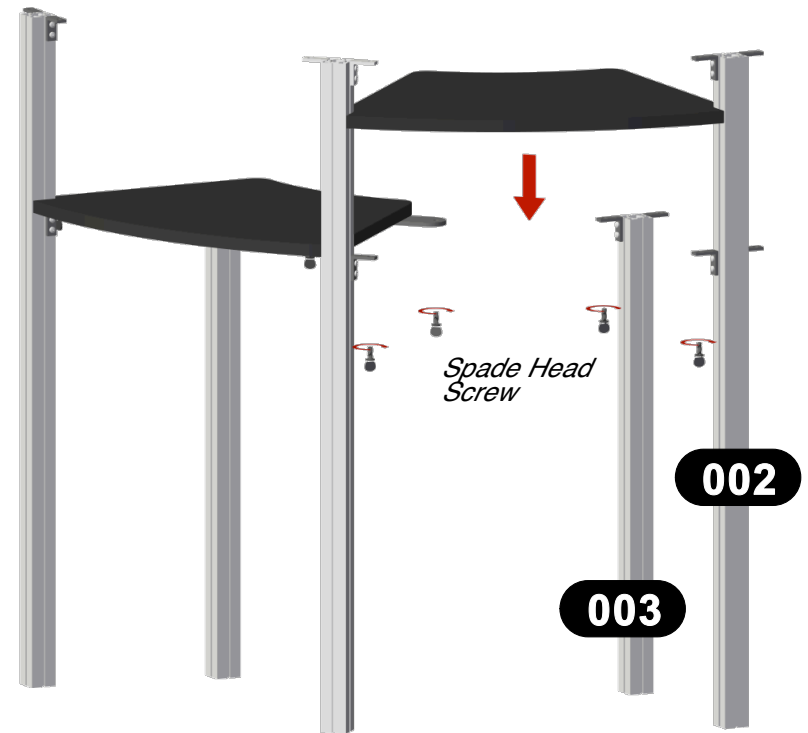


FRONT VIEW

1. Attach legs #003 and #004 to right counter top using (2) & (1) spade head screws per leg accordingly.
2. Connect right assembly to already assembled portion of counter with (2) spade head screws. One screw used to secure leg the second screw plate.
3. Once round shape of counter is formed tighten all spade head screws firmly.

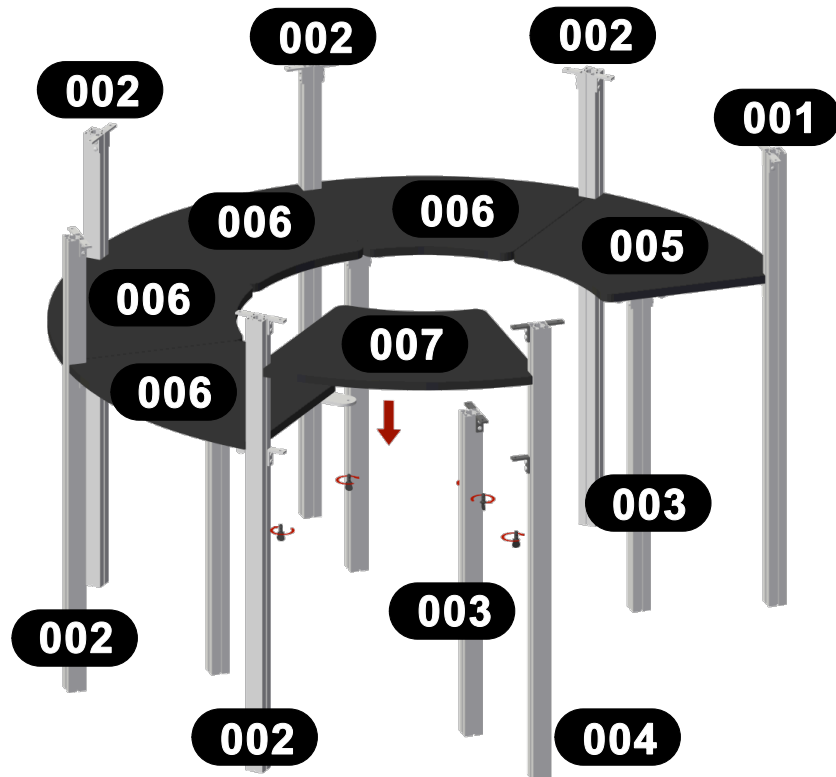


RIGHT VIEW

1. Connect riser rops to counter legs starting from left #007 through #010 using (2) spade head screws per riser top.

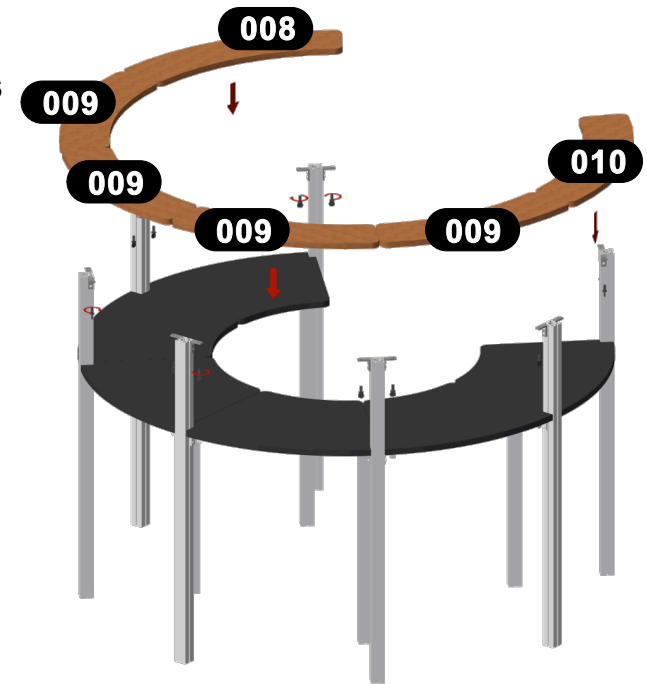

2. Once round shape of counter is formed tighten all spade head screws firmly.

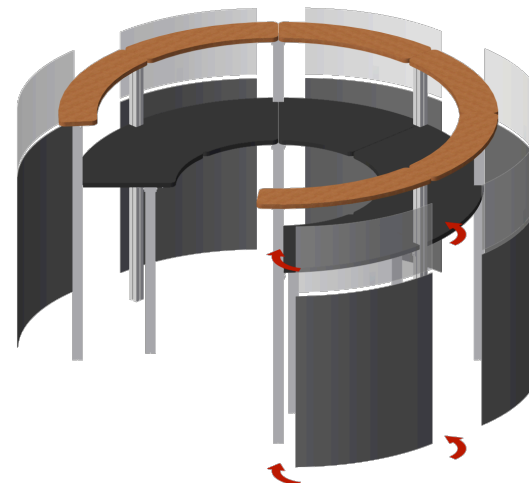

1. Starting from left side insert bottom panel edge into left leg's channel. Carefully bend panel and place other edge into opposite side leg's channel. Repeat same for top panel.

2. Repeat for all panels.

NOTE:
DO NOT DISCARD ANY
PACKING MATERIALS. USE
ALL PACKING MATERIALS IN
SAME MANNER AS THEY
WERE RECEIVED.

CRATE COVER

PADDED BAG:

Hardware

FOURTH LAYER:

- 001** Left Leg
- 002** Extension Leg
- 003** Right Leg

THIRD LAYER:

- 006** Extension Counter Top
- 009** Extension Riser Top

SECOND LAYER:

- 004** Short Legs
- 005** Left Counter Top
- 007** Right Counter Top
- 008** Left Riser Top
- 010** Right Riser Top
- Joining Plate (3)

FIRST LAYER:

Panels (12)

CRATE BASE

