


Hook into the M6 Bolt in the frame

**M6 Bolts. 2 -screw into the frame
and 2 screw into the back of the monitor**

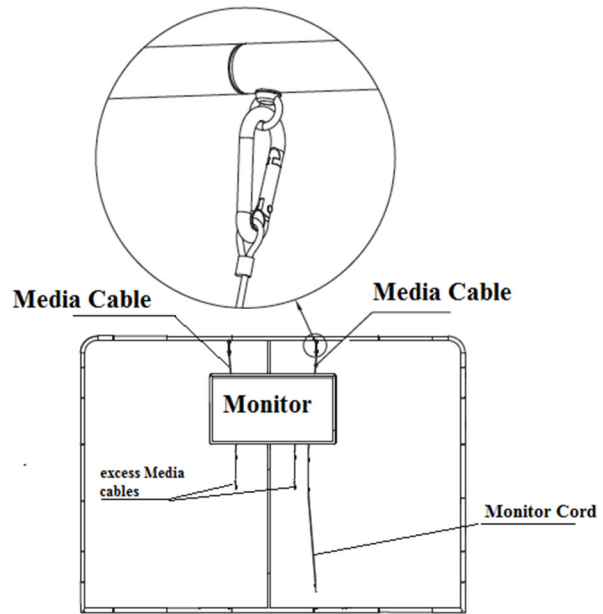

**One of 2 Waveline Media
cables**

**Hang out of the grommet hole and
hooks into the Bolts in the back of the
monitor**

**Hangs loose inside the graphic.
Used to hook to the sensor board that
has been discontinued**