



PACKING AND CASE OPTIONS

4100

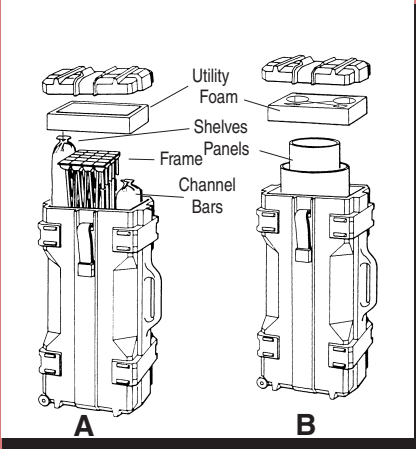


4100 case packing: Collapse frame, pack in box and insert into Case A. Pack lights & channel bars in bags and pack in Case A. Roll up panels fabric to fabric and insert into Case B. Cases can be strapped together to roll as a complete unit.

4106

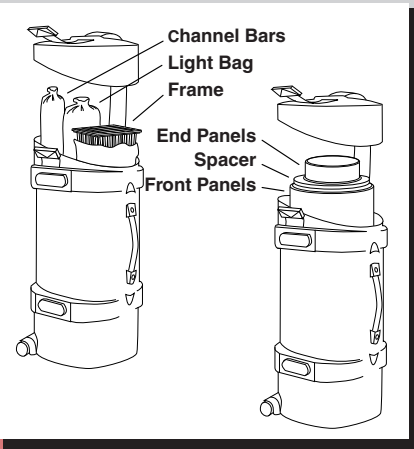


4106 case packing: Collapse frame, pack in box and insert into Case. Pack lights & channel bars in bags and pack in the same case. Roll up panels fabric to fabric and inse into second Case.

4200

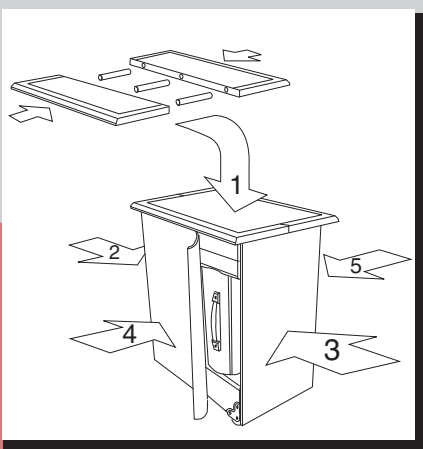


4200 Case Conversion: Latch the two cases together. Assemble top as shown and place on cases. Attach panels in numbered order shown. Velcro blotter to table top.

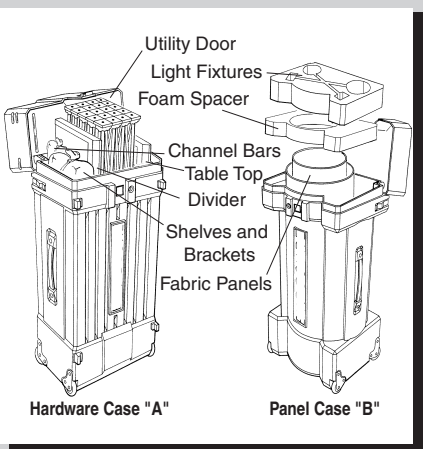


4200 case packing: Collapse frame, pack in box and insert into Case A. Pack shelves & channel bars in bags and pack in Case A. Roll up panels fabric to fabric and insert into Case B. Cases latch together two places to roll as a complete unit.

4300

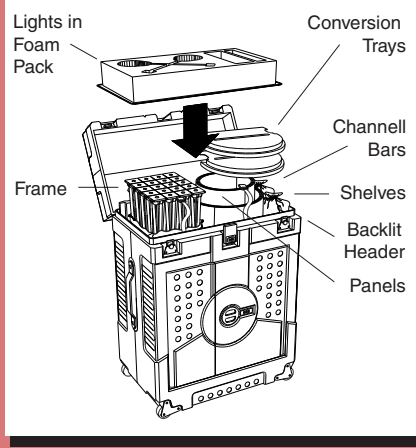

4300 Case packing: Hardware always packs on the left side of the case. Pack the panels and hardware in the locations shown in the diagram.

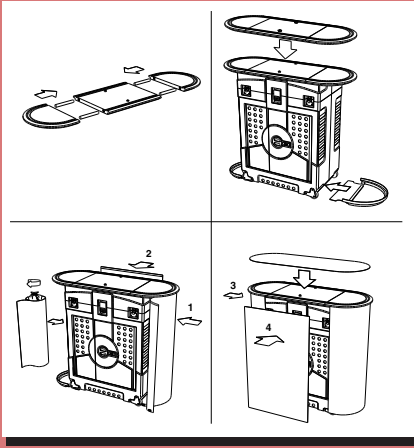


4300 Case Conversion: Assemble top and secure to case using a coin to tighten the two fasteners. Slip an end tray under both sets of wheels. Store panel liners and bags under table top overhang. Attach panels in numbered order as shown.

4400




4400 Case Conversion: Stretch the Lycra skirt over the empty case as shown with the seam of the skirt at the rear of the case (wheel side).

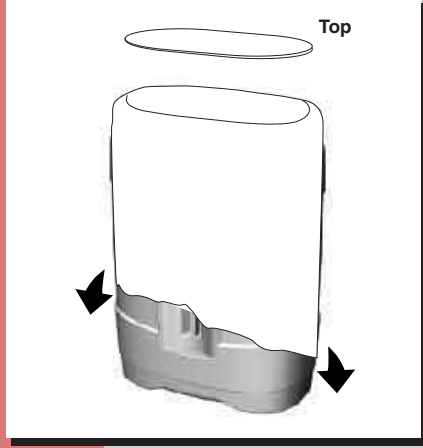


Pull down to conceal the case. Place the counter top onto the top attaching it to the Velcro.

4500

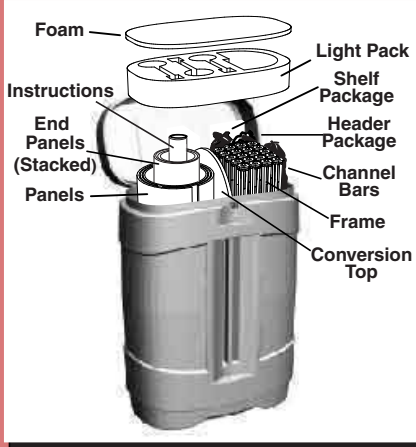


To Pack: Slide conversion top section into center sleeve of case to act as a divider. Roll panels in pairs surface to surface and insert into left side of case. (Graphics require protective liners.) Stack end panels separated by a plastic donut. Insert ends into sleeve. All hardware packs on the right.

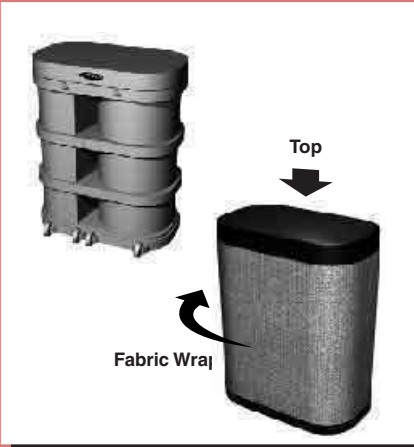

To convert the empty case into a counter, wrap the fabric skirt panel around case as shown and overlap the magnetic strips at the rear wheel side of the case. Place the counter top onto the lid of the case with the laminated side upto complete.



Pull back the foam cover inside the main lid to insert the lights, extension cord and power strip. Replace foam and insert the conversion top, laminated side towards the lights (first push in left side then drop right side). Top should fit snugly between the two foam blocks. Flip over Lid and latch down onto both case sections.

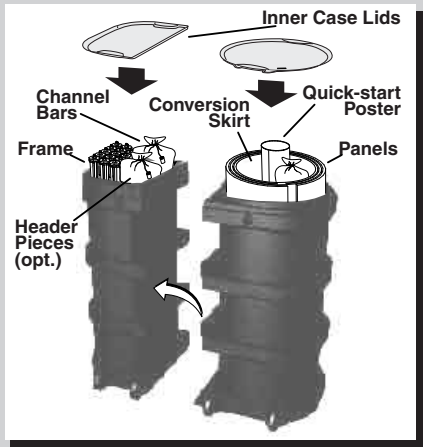

To pack, roll up panels w/fabric (graphic) surface to the inside. Insert into round side of case. Place frame & channel bars into bags, insert into other side of case. Snap inner case lids down into corresponding case sections. Case sections may now be separated for easier transportation.