
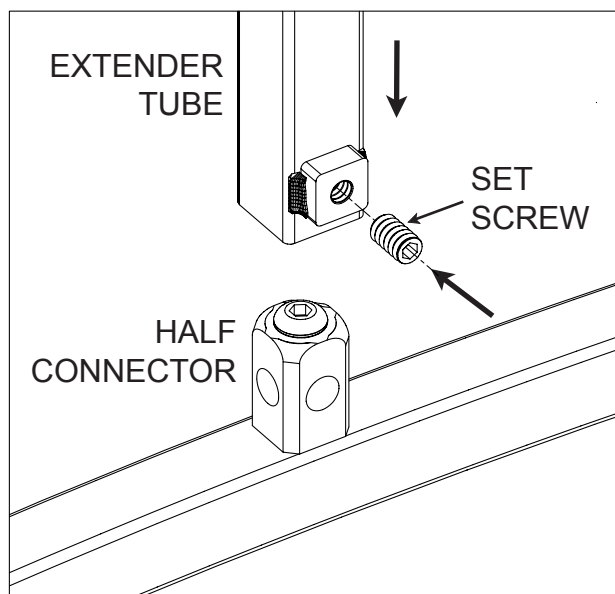
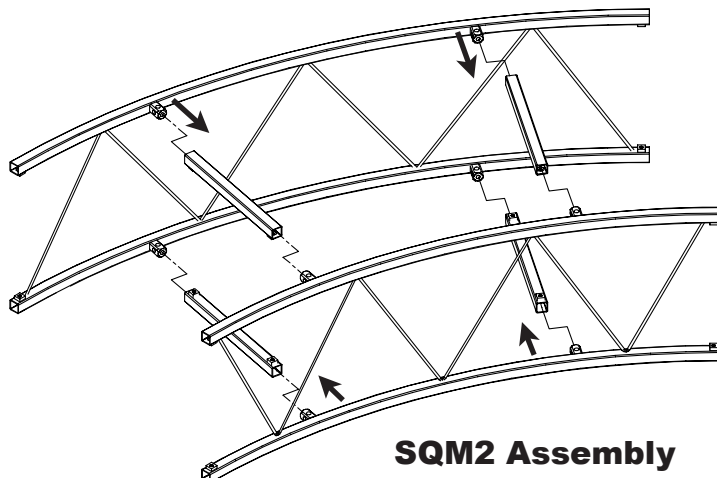



Curve Connection (SQM1 & SQM2)

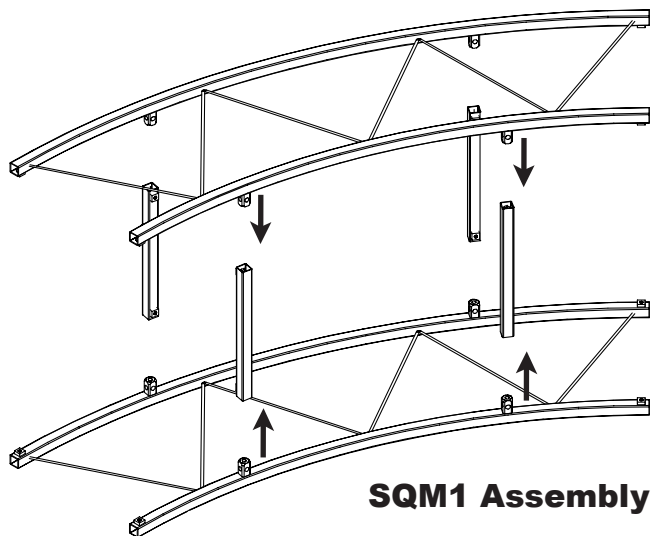

Step1

Insert the **Set Screw** if missing, and then slide the **Extender Tube** over the **Half Connector**.

Note: For the best look, turn the **Set Screws** to the inside of the truss.

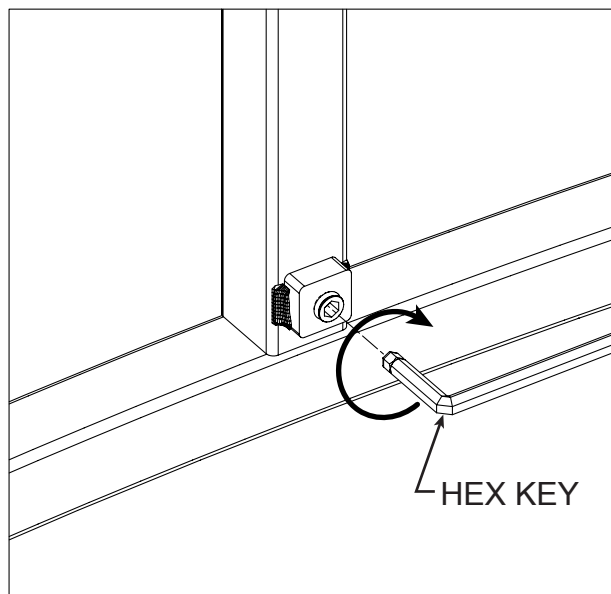

Step2

Next, tighten the **Set Screw**, with the **Hex Key** provided to secure the connection. Repeat Steps 1 & 2 for the remaining four connections.

41084

02/13/03



Member

7316 Aspen Lane North
Minneapolis MN 55428-1109

e mail: info@interlockstructures.com
web: www.interlockstructures.com

INTERLOCK
Interlock Structures International, Inc.

voice: 763.425.1464
800.468.1497
fax: 763.425.8205